

# Rosemount™ 3051S Electronic Remote Sensor (ERS)™ System



**HART**  
COMMUNICATION PROTOCOL

  
**EMERSON**



## Section 1: Introduction

1.1 Using this manual .....	1
1.2 Product recycling/disposal.....	1

## Section 2: Installation

2.1 Overview .....	3
2.2 Safety messages.....	3
2.3 Models covered .....	4
2.4 Considerations .....	5
2.4.1 General.....	5
2.4.2 Mechanical.....	5
2.4.3 Environmental.....	6
2.5 Installation procedures.....	8
2.5.1 Identify Rosemount ERS Sensors.....	8
2.5.2 Mount each Rosemount ERS Sensor.....	8
2.5.3 Process connections .....	11
2.5.4 Consider housing orientation.....	13
2.5.5 Configure security and alarm.....	14
2.5.6 Connect wiring and power up .....	15
2.5.7 Grounding .....	19
2.6 Rosemount manifolds.....	22
2.6.1 Rosemount 305 Manifold installation procedure.....	23
2.6.2 Rosemount 304 Manifold installation procedure.....	23
2.6.3 Rosemount 306 Manifold installation procedure.....	24
2.6.4 Manifold valve configurations .....	24

## Section 3: Configuration

3.1 Overview .....	25
3.2 Safety messages.....	25
3.2.1 Setting the loop to manual.....	26
3.3 Wiring diagrams.....	26
3.4 Basic setup .....	26
3.4.1 Device tagging .....	27
3.4.2 Units of measure.....	27
3.4.3 Damping .....	27
3.4.4 Variable mapping.....	28
3.4.5 Analog output.....	28
3.4.6 Alarm and saturation levels .....	29

3.5 Additional configuration .....	30
3.5.1 Local display .....	30
3.5.2 Burst mode .....	30
3.5.3 Multidrop communication .....	31
3.5.4 Scaled variable .....	32
3.5.5 Module assignments .....	37
3.5.6 Process alerts.....	38
3.6 HART menu trees.....	39

## Section 4: Operation and Maintenance

4.1 Overview .....	43
4.2 Safety messages.....	43
4.3 Calibration.....	44
4.3.1 Calibration overview .....	44
4.3.2 PHI and PLO sensor calibration .....	45
4.3.3 DP calibration .....	46
4.3.4 Analog output trim .....	47
4.3.5 Recall factory trim .....	47
4.4 Functional tests .....	48
4.4.1 Find device.....	48
4.5 Field upgrades and replacements.....	49
4.5.1 Disassembly considerations.....	49
4.5.2 Labeling .....	49
4.5.3 Remove the terminal block.....	49
4.5.4 Removing the electronics .....	50
4.5.5 Remove the SuperModule from the housing .....	51
4.5.6 Attach the SuperModule to the housing .....	51
4.5.7 Install electronics assembly .....	51
4.5.8 Install the terminal block.....	52
4.5.9 Reassemble the process flange .....	52

## Section 5: Troubleshooting

5.1 Overview .....	55
5.2 Device overview .....	55
5.2.1 HART host diagnostics.....	55
5.2.2 LCD display diagnostics.....	55
5.3 Measurement quality status .....	59
5.4 Service support.....	59

## Section 6: Safety Instrumented Systems Requirements

6.1 Safety Instrumented Systems (SIS) Certification .....	61
6.1.1 Rosemount ERS Systems safety certified identification .....	61
6.1.2 Installation in SIS applications .....	61
6.1.3 Configuring in SIS applications .....	62
6.1.4 Rosemount 3051S SIS operation and maintenance.....	63
6.1.5 Inspection .....	63

## Appendix A: Specifications and Reference Data

A.1 Performance specifications .....	65
A.1.1 Conformance to specification ( $\pm 3s$ ) .....	65
A.1.2 Reference accuracy .....	65
A.2 Functional specifications .....	68
A.2.1 Range and sensor limits.....	68
A.2.2 Minimum span limits .....	68
A.2.3 Service .....	69
A.2.4 HART specifications .....	69
A.2.5 Process temperature limits.....	70
A.3 Physical specifications.....	71
A.3.1 Maximum cable length .....	71
A.3.2 Electrical connections .....	71
A.3.3 Process connections .....	71
A.3.4 Process wetted parts .....	72
A.3.5 Non-wetted parts.....	72
A.4 Dimensional drawings .....	73
A.5 Ordering information .....	82
A.6 Spare parts .....	109

## Appendix B: Product Certifications

B.1 European Directive Information .....	113
B.2 Ordinary Location Certification.....	113
B.3 Installing Equipment in North America .....	113
B.4 USA.....	113
B.5 Canada.....	114
B.6 Europe .....	114
B.7 International.....	115
B.8 Brazil.....	116
B.9 China .....	117

B.10 EAC — Belarus, Kazakhstan, Russia .....	119
B.11 Japan .....	119
B.12 Republic of Korea .....	119
B.13 Combinations .....	119
B.14 Additional Certifications .....	119

---

# Rosemount™ 3051S Electronic Remote Sensor (ERS)™ System

## NOTICE

Read this manual before working with the product. For personal and system safety, and for optimum product performance, make sure you thoroughly understand the contents before installing, using, or maintaining this product.

For technical assistance, contacts are listed below:

### Customer Central

Technical support, quoting, and order-related questions.

Americas 1 800 999 9307

Europe +41 (0) 41 768 6111

Middle east +971 4 811 8100

Asia +65 6777 8211

### North American Response Center

Equipment service needs.

1-800-654-7768 (24 hours—includes Canada)

Outside of these areas, contact your local Emerson™ representative.

---

## ⚠ CAUTION

The products described in this document are NOT designed for nuclear-qualified applications. Using non-nuclear qualified products in applications that require nuclear-qualified hardware or products may cause inaccurate readings.

For information on Rosemount nuclear-qualified products, contact your local Emerson Sales Representative.

---

## **▲ WARNING**

### **Failure to follow these installation guidelines could result in death or serious injury.**

- Make sure only qualified personnel perform the installation.

### **Explosions could result in death or serious injury.**

- Do not remove the housing covers in explosive atmospheres when the circuit is live.
- Before connecting a Field Communicator in an explosive atmosphere, make sure the instruments in the loop are installed in accordance with intrinsically safe or non-incendive field wiring practices.
- Both housing covers must be fully engaged to meet flameproof/explosion-proof requirements.
- Verify the operating atmosphere of the transmitter is consistent with the appropriate hazardous location certifications.

### **Electrical shock could cause death or serious injury.**

- If the Rosemount ERS System is installed in a high-voltage environment and a fault or installation error occurs, high voltage may be present on the sensor leads and terminals.
- Use extreme caution when making contact with the leads and terminals.

### **Process leaks could result in death or serious injury.**

- Install and tighten all four flange bolts before applying pressure.
- Do not attempt to loosen or remove flange bolts while the Rosemount ERS System is in service.
- Replacement equipment or spare parts not approved by Emerson for use as spare parts could reduce the pressure retaining capabilities of the transmitter and may render the instrument dangerous.
- Use only bolts supplied or sold by Emerson as spare parts.

### **Improper assembly of manifolds to traditional flange can damage the device.**

- For the safe assembly of the manifold to the sensor flange, bolts must break the back plane of the flange web (i.e. bolt hole) but must not contact the sensor module.

### **Static electricity can damage sensitive components.**

- Observe safe handling precautions for static-sensitive components.
-

---

# Section 1 Introduction

## 1.1 Using this manual

The sections in this manual provide information on installing, operating, and maintaining a Rosemount™ 3051S Electronic Remote Sensor (ERS)™ System with HART® protocol. The sections are organized as follows:

- [Section 2: Installation](#) contains mechanical and electrical installation instructions, and field upgrade options.
- [Section 3: Configuration](#) provides instruction on commissioning and operating a Rosemount ERS System. Information on software functions, configuration parameters, and online variables is also included.
- [Section 4: Operation and Maintenance](#) contains operation and maintenance techniques.
- [Section 5: Troubleshooting](#) provides troubleshooting techniques for the most common operating problems.
- [Section 6: Safety Instrumented Systems Requirements](#) contains all certification and operation information for SIS applications.
- [Appendix A: Specifications and Reference Data](#) supplies reference and specification data as well as ordering information.
- [Appendix B: Product Certifications](#) contains approval information and European ATEX directive information.

## 1.2 Product recycling/disposal

Recycling of equipment and packaging should be taken into consideration and disposed of in accordance with local and national legislation/regulations.



---

## Section 2 Installation

---

Overview .....	page 3
Safety messages .....	page 3
Models covered .....	page 4
Installation procedures .....	page 8
Rosemount manifolds .....	page 22

---

### 2.1 Overview

This section covers installation considerations for the Rosemount™ 3051S Electronic Remote Sensor (ERS)™ System. A Quick Start Guide is shipped with every Rosemount 3051S ERS Transmitter to describe basic installation, wiring, configuration, and startup procedures. Dimensional drawings for each Rosemount 3051S ERS Transmitter are included in [Appendix A: Specifications and Reference Data](#).

### 2.2 Safety messages

Procedures and instructions in this section may require special precautions to ensure the safety of personnel performing the operation. Information that raises potential safety issues is indicated with a warning symbol ( ⚠ ). Refer to the following safety messages before performing an operation preceded by this symbol.

#### **⚠ WARNING**

**Failure to follow these installation guidelines could result in death or serious injury.**

- Make sure only qualified personnel perform the installation.

**Explosions could result in death or serious injury.**

- Do not remove the housing covers in explosive atmospheres when the circuit is live.
- Before connecting a Field Communicator in an explosive atmosphere, make sure the instruments in the loop are installed in accordance with intrinsically safe or non-incendive field wiring practices.
- Both housing covers must be fully engaged to meet flameproof/explosion-proof requirements.
- Verify the operating atmosphere of the transmitter is consistent with the appropriate hazardous location certifications.

**Electrical shock could cause death or serious injury.**

- If the Rosemount ERS System is installed in a high-voltage environment and a fault or installation error occurs, high voltage may be present on the sensor leads and terminals.
  - Use extreme caution when making contact with the leads and terminals.
-

## ⚠ WARNING

### **Process leaks could result in death or serious injury.**

- Install and tighten all four flange bolts before applying pressure.
- Do not attempt to loosen or remove flange bolts while the Rosemount ERS System is in service.
- Replacement equipment or spare parts not approved by Emerson™ for use as spare parts could reduce the pressure retaining capabilities of the transmitter and may render the instrument dangerous.
- Use only bolts supplied or sold by Emerson as spare parts.

### **Improper assembly of manifolds to traditional flange can damage the device.**

- For the safe assembly of the manifold to the sensor flange, bolts must break the back plane of the flange web (i.e. bolt hole) but must not contact the sensor module.

### **Static electricity can damage sensitive components.**

- Observe safe handling precautions for static-sensitive components.

## 2.3 Models covered

The Rosemount ERS System is a flexible, 2-wire HART architecture that calculates differential pressure (DP) electronically, using two pressure sensors. The pressure sensors are linked together with an electrical cable and synchronized to create a single Rosemount ERS System. The sensors used in the Rosemount ERS System can consist of any combination of Rosemount 3051SAM and 3051SAL models. One of the sensors is required to be a “Primary” and the other is required to be a “Secondary.”

The Primary sensor contains the 4–20 mA loop termination and optional LCD display. The Secondary sensor is made up of a pressure sensor module and junction box housing that is connected to the primary sensor, using a standard instrument cable.

### **Rosemount 3051SAM Scalable™ ERS Measurement Transmitter**

- Coplanar and In-Line sensor module platforms
- Variety of process connections including NPT, flanges, manifolds, and Rosemount 1199 Remote Diaphragm Seals

### **Rosemount 3051SAL Scalable ERS Level Transmitter**

- Integrated transmitter and remote diaphragm seal in a single model number
- Variety of process connections including flanged, threaded, and hygienic remote diaphragm seals

### **Rosemount 300ERS Housing Kit**

- Upgrade and convert an existing Rosemount 3051S Transmitter into a Rosemount 3051S ERS Transmitter.
- Easily order replacement housings and electronics for an existing Rosemount ERS System.

Figure 2-1. Rosemount ERS Models and Possible Configurations



## 2.4 Considerations

### 2.4.1 General

Measurement performance depends upon proper installation of each transmitter and impulse piping. Mount each Rosemount 3051S ERS Transmitter close to the process and use minimum piping to achieve best performance. Also, consider the need for easy access, personnel safety, practical field calibration, and a suitable environment. Install each sensor to minimize vibration, shock, and temperature fluctuation.

**Note**

Install the enclosed pipe plugs (found in the box) in any unused conduit openings. For proper straight and tapered thread engagement requirements, see the appropriate approval drawings in [Appendix B: Product Certifications](#). For material compatibility considerations, see Material Selection [Technical Note](#).

### 2.4.2 Mechanical

For dimensional drawing information, refer to “[Dimensional drawings](#)” on page 73.

For steam service or for applications with process temperatures greater than the limits of each Rosemount 3051S ERS Transmitter, do not blow down impulse piping through either sensor. Flush lines with the blocking valves and refill lines with water before resuming measurement.

If a Rosemount 3051S ERS Transmitter is mounted on its side, position the flange/manifold to ensure proper venting or draining.

#### Field terminal side of housing

Mount each Rosemount ERS Sensor so the terminal side is accessible. Clearance of 0.75-in. (19 mm) is required for cover removal.

#### Electronics side of housing

Provide 0.75-in. (19 mm) of clearance for units without an LCD display. Three inches of clearance is required for cover removal if an LCD display is installed.

## Cover installation

Always ensure a proper seal by installing the housing covers so that metal contacts metal in order to prevent performance degradation due to environmental effects. For replacement cover O-rings, use Rosemount O-rings (part number 03151-9040-0001).

## Conduit entry threads


For NEMA® 4X, IP66, and IP68 requirements, use thread seal (PTFE) tape or paste on male threads to provide a watertight seal.

## Cover jam screw

For housings shipped with a cover jam screw (as shown in [Figure 2-2](#)), the screw should be properly installed once the Rosemount ERS System has been wired and powered up. The cover jam screw is intended to prevent the removal of the housing covers in flameproof environments without the use of tools. Follow these steps to install the cover jam screw:

1. Verify the cover jam screw is completely threaded into the housing.
2. Install the housing covers and verify that metal contacts metal in order to meet flameproof/explosion-proof requirements.
3. Using an M4 hex wrench, turn the jam screw counterclockwise until it contacts the housing cover.
4. Turn the jam screw an additional 1/2 turn counterclockwise to secure the cover. Application of excessive torque may strip the threads.
5. Verify the covers cannot be removed.

Figure 2-2. Cover Jam Screw

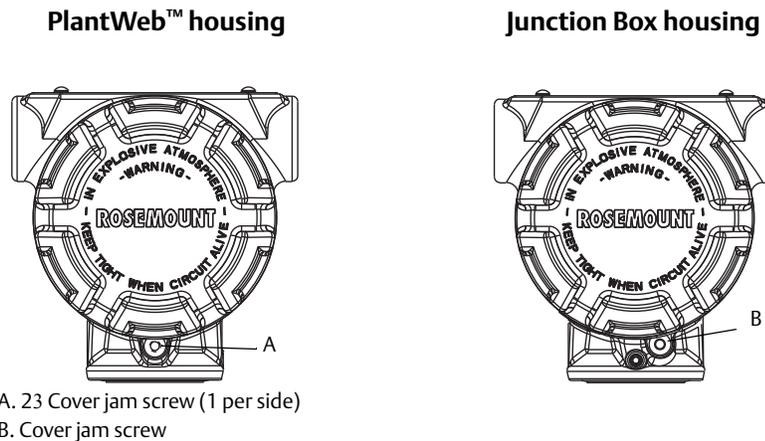


## 2.4.3 Environmental

Access requirements and cover installation can help optimize transmitter performance. Mount each transmitter to minimize ambient temperature changes, vibration, mechanical shock, and to avoid external contact with corrosive materials. Refer to [Appendix A: Specifications and Reference Data](#) for temperature operating limits.

**Note**

⚠ The Rosemount ERS System contains additional electrical protection that is inherent to the design. As a result, ERS Systems cannot be used in applications with floating electrical grounds greater than 50 Vdc (such as Cathodic Protection). Consult an Emerson Sales Representative for additional information or considerations on use in similar applications.

**Figure 2-3. Rosemount 3051S ERS Installation Flowchart**

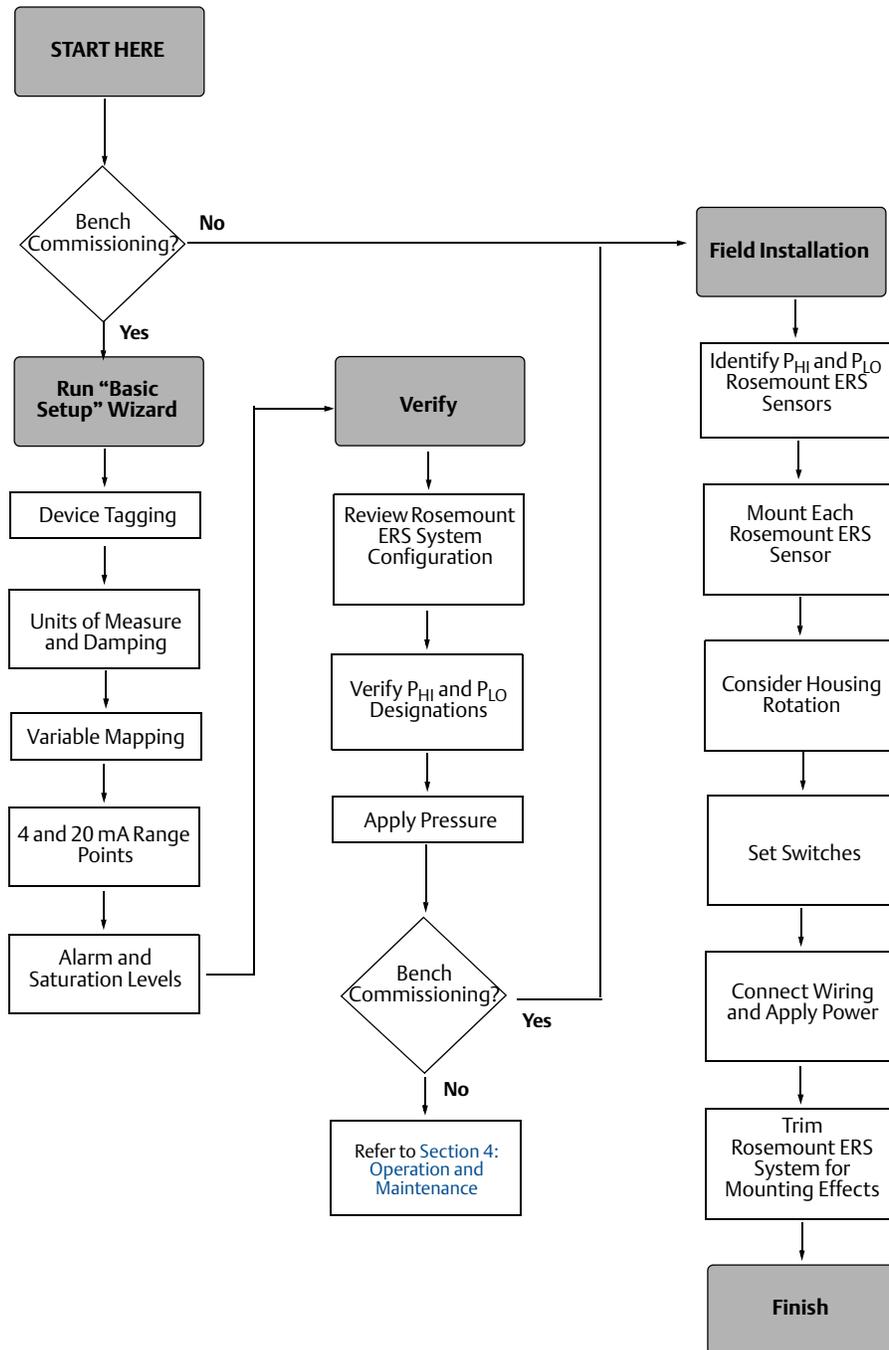

## 2.5 Installation procedures

### 2.5.1 Identify Rosemount ERS Sensors


A complete Rosemount ERS System contains two pressure sensors. One is mounted on the high-pressure ( $P_{HI}$ ) process connection, and the other is mounted on the low-pressure ( $P_{LO}$ ) process connection. An optional remote display and interface may also be included if ordered.

1. Look at the wire-on tag on the Rosemount 3051S ERS Transmitter to identify whether it is configured as the  $P_{HI}$  or  $P_{LO}$  sensor (see Figure 2-4).
2. Locate the second sensor that will be used in the Rosemount ERS System:
  - For new installations or applications, the second Rosemount ERS Sensor may have been shipped in a separate box.
  - If servicing or replacing part of an existing Rosemount ERS System, the other sensor may already be installed.

#### Note

Rosemount 3051S ERS Transmitters are shipped from the factory preconfigured such that the primary unit (4–20 loop termination and optional LCD display) is assigned as the  $P_{HI}$  sensor and the secondary unit (junction box housing) is assigned as the  $P_{LO}$  sensor. In installations where there the primary transmitter is installed on the  $P_{LO}$  process connection (such as at the top of a tank), these designations may be switched electronically using a HART Communicator (see “Local display” on page 30).

Figure 2-4. Rosemount ERS  $P_{HI}$  and  $P_{LO}$  Wire-On Tags

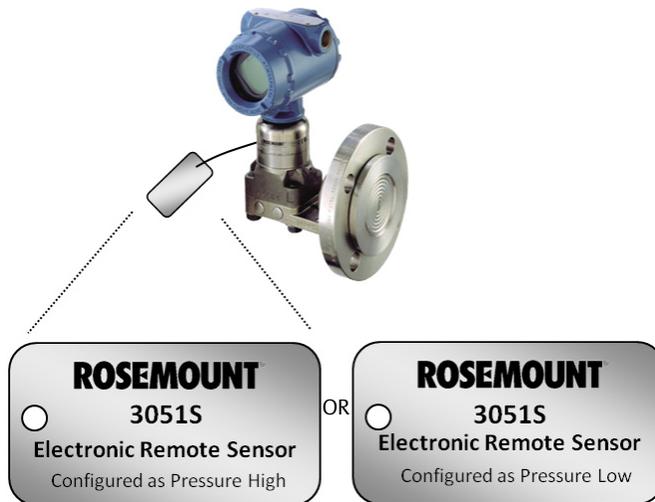

### 2.5.2 Mount each Rosemount ERS Sensor

Mount the  $P_{HI}$  and  $P_{LO}$  sensors at the correct process connections for the application. Common Rosemount ERS installations are shown in Figure 2-5.


#### Vertical installation

In a vertical installation such as on a vessel or distillation column, the  $P_{HI}$  sensor should be installed at the bottom process connection. The  $P_{LO}$  sensor should be installed at the top process connection.

## Horizontal installation

In a horizontal installation, the  $P_{HI}$  sensor should be installed at the upstream process connection. The  $P_{LO}$  sensor should be installed downstream.

**Figure 2-5. Vertical and Horizontal Rosemount ERS Installations**

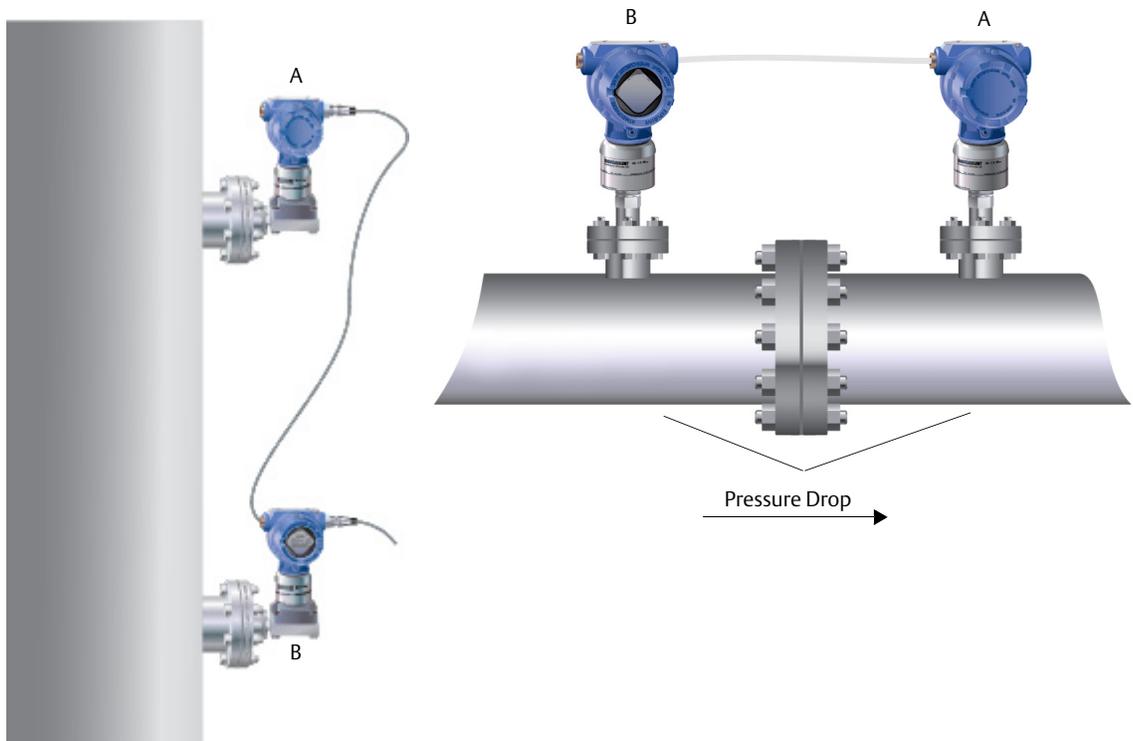

A.  $P_{LO}$  sensor  
B.  $P_{HI}$  sensor

## Mounting brackets

Mounting brackets are available to facilitate mounting the transmitter to a 2-in. pipe or to a panel. The B4 SST bracket option is for use with coplanar and in-line process connections. [Figure 2-6 on page 11](#) shows dimensions and mounting configuration for the B4 bracket. Other bracket options are listed in [Table](#) .

When installing a Rosemount 3051S ERS Transmitter to one of the optional mounting brackets, torque the bolts to 125 in-lb. (0,9 N-m).

**Table 2-1. Mounting Brackets**


Options	Description	Mounting type	Bracket material	Bolt material
B4	Coplanar flange bracket	2-in. pipe/panel	SST	SST
B1	Traditional flange bracket	2-in. pipe	Painted carbon steel	Carbon steel
B2	Traditional flange bracket	Panel	Painted carbon steel	Carbon steel
B3	Traditional flange flat bracket	2-in. pipe	Painted carbon steel	Carbon steel
B7	Traditional flange bracket	2-in. pipe	Painted carbon steel	SST

**Table 2-1. Mounting Brackets**

Options	Description	Mounting type	Bracket material	Bolt material
B8	Traditional flange bracket	Panel	Painted carbon steel	SST
B9	Traditional flange flat bracket	2-in. pipe	Painted carbon steel	SST
BA	Traditional flange bracket	2-in. pipe	SST	SST
BC	Traditional flange flat bracket	2-in. pipe	SST	SST

## Flange bolts

An Rosemount 3051S ERS Transmitter can be shipped with a coplanar flange or a traditional flange installed with four 1.75-in. flange bolts. Mounting bolts and bolting configurations for the coplanar and traditional flanges can be found on [Table 2-2](#). Stainless steel bolts supplied by Emerson are coated with a lubricant to ease installation. Carbon steel bolts do not require lubrication. No additional lubricant should be applied when installing either type of bolt. Bolts supplied by Emerson are identified by their head markings:

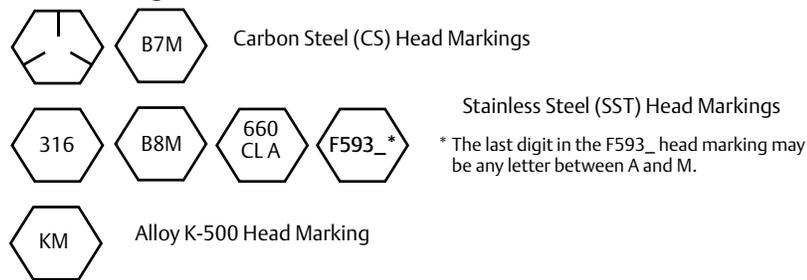

## ⚠ Bolt installation

Only use bolts supplied with the Rosemount 3051S ERS Transmitter or sold by Emerson as spare parts. Use the following bolt installation procedure:


1. Finger-tighten the bolts.
2. Torque the bolts to the initial torque value using a crossing pattern. For initial torque values, see [Table 2-2](#).
3. Torque the bolts to the final torque value using the same crossing pattern. For final torque values, see [Table 2-2](#).

Torque values for the flange and manifold adapter bolts are as follows:

**Table 2-2. Bolt Installation Torque Values**

Bolt material	Option code	Initial torque value	Final torque value
CS-ASTM-A449	Standard	300 in.-lb (34 N-m)	650 in.-lb (73 N-m)
316 SST	Option L4	150 in.-lb (17 N-m)	300 in.-lb (34 N-m)
ASTM-A-193-B7M	Option L5	300 in.-lb (34 N-m)	650 in.-lb (73 N-m)
Alloy K-500	Option L6	300 in.-lb (34 N-m)	650 in.-lb (73 N-m)
ASTM-A-453-660	Option L7	150 in.-lb (17 N-m)	300 in.-lb (34 N-m)
ASTM-A-193-B8M	Option L8	150 in.-lb (17 N-m)	300 in.-lb (34 N-m)

**Figure 2-6. Common Rosemount 3051S ERS Transmitter/Flange Assemblies**

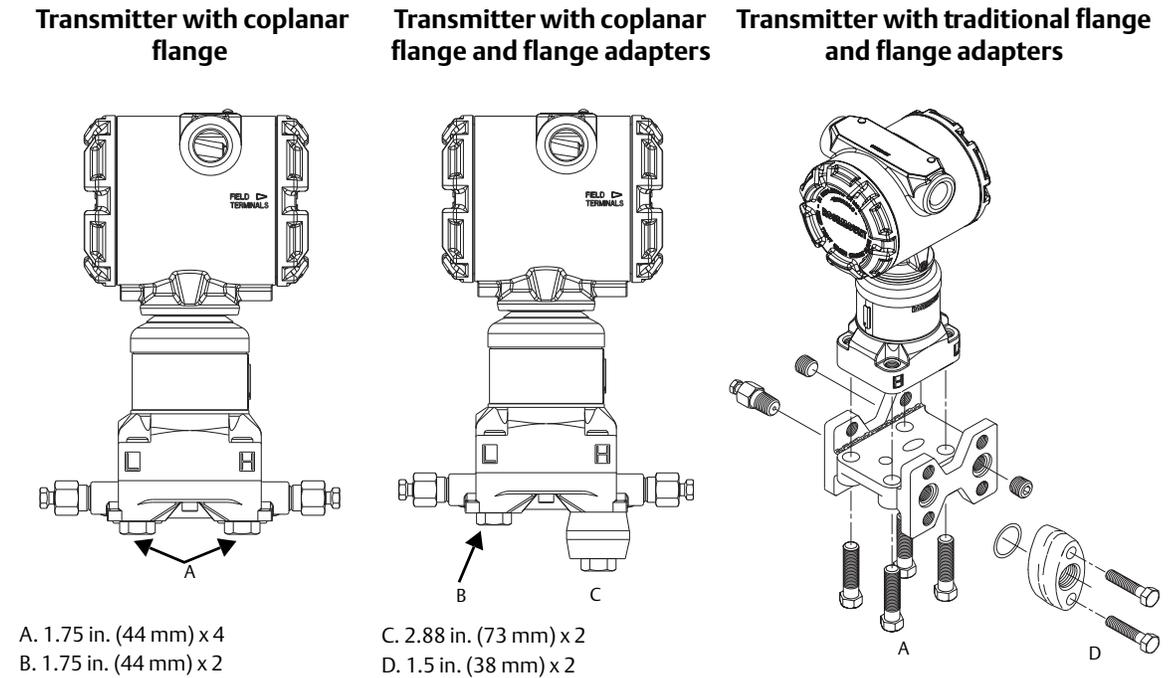


### 2.5.3 Process connections

The process connection size on a Rosemount 3051S ERS Transmitter flange is 1/4–18-in NPT. Flange adapters with a 1/4–18 NPT to 1/2–14 NPT connection are available with the D2 option. Use a plant-approved lubricant or sealant when making the process connections. For other level flange type connection options, reference the Rosemount 1199 [Reference Manual](#).

Install and tighten all four flange bolts before applying pressure to avoid leakage. When properly installed, the flange bolts will protrude through the top of the sensor module isolator plate. See [Figure 2-7](#). Do not attempt to loosen or remove the flange bolts while the transmitter is in service.

**Figure 2-7. Sensor Module Isolator Plate**

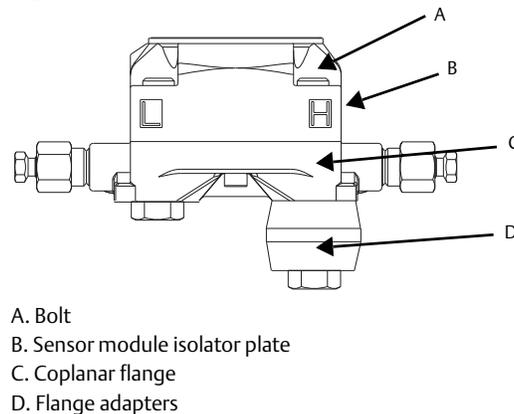

To install adapters to a coplanar flange, perform the following procedure:

1. Remove the flange bolts.
2. Leaving the flange in place, move the adapters into position with the O-rings installed.
3. Attach the adapters and the coplanar flange to the transmitter sensor module assembly using the longer of the bolts supplied.
4. Tighten the bolts. Refer to [Table 2-2 on page 10](#) for torque specifications.

Refer to [“Spare parts” on page 108](#) for the correct part number of the flange adapter and O-rings designed for a coplanar Rosemount 3051S ERS Transmitter.

### **⚠ WARNING**

Use only the O-rings included with the flange adapter for the Rosemount 3051S ERS Transmitter. Failure to install proper fitting flange adapter O-rings may cause process leaks, which can result in death or serious injury.

- ⚠ When removing flanges or adapters, visually inspect the PTFE O-rings. Replace them if there are any signs of damage such as nicks or cuts. If replacing O-rings, re-torque the flange bolts after installation to compensate for seating of the PTFE O-ring.

## **Impulse piping**

The piping between the process and each Rosemount 3051S ERS Transmitter must accurately transfer the pressure to obtain accurate measurements. There are many possible sources of error: pressure transfer, leaks, friction loss (particularly if purging is used), trapped gas in a liquid line, liquid in a gas line, and plugged impulse lines.

The best location for each Rosemount 3051S ERS Transmitter depends on the process itself. Use the following guidelines to determine sensor location and placement of impulse piping:

- Keep impulse piping as short as possible.
- For liquid service, slope the impulse piping at least 1 inch per foot (8 cm per m) upward from the transmitter toward the process connection.
- For gas service, slope the impulse piping at least 1 inch per foot (8 cm per m) downward from the transmitter toward the process connection.
- Avoid high points in liquid lines and low points in gas lines.
- When purging, make the purge connection close to the process tap and purge through equal lengths of the same size pipe. Avoid purging through either Rosemount 3051S ERS Transmitter.
- Keep corrosive or hot (above 250 °F or 121 °C) process material out of direct contact with the sensor module process connection and flanges.
- Prevent sediments from depositing in the impulse piping.

### **Note**

Take necessary steps to prevent process fluid from freezing with the process flange to avoid damage to each Rosemount 3051S ERS Transmitter.

### **Note**

Verify the zero point on each Rosemount 3051S ERS Transmitter after installation. To reset the zero trim, refer to [“Calibration overview” on page 44](#).

## 2.5.4 Consider housing orientation

### Housing rotation

The housing can be rotated to improve access to wiring or to better view the LCD display (if ordered). To rotate the housing, perform the following procedure:


1. Loosen the housing set screw.
2. Turn the housing up to 180° to the left or right of its original (as shipped) position.

#### Note

Do not rotate the housing more than 180° from its original position without first performing a disassembly procedure (see [page 49](#)). Over rotation may sever the electrical connection between the sensor module and the electronics feature board.

3. Retighten the housing rotation set screw.

**Figure 2-8. Housing Rotation**

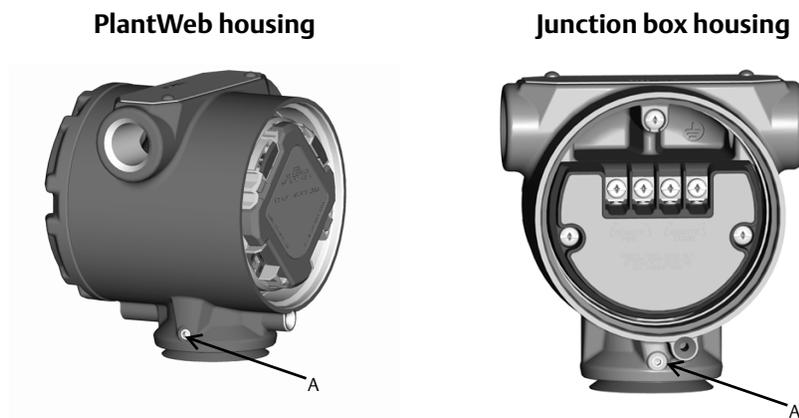

A. Housing rotation set screw ( $3/32$ -in.)

### LCD display rotation

In addition to rotating the housing, the optional LCD display on the primary Rosemount ERS Sensor can be rotated in 90° increments by squeezing the two tabs, pulling out the display, rotating, and snapping the display back into place.

#### Note

If the LCD display pins are inadvertently removed from the electronics feature board, re-insert the pins before snapping the LCD display back into place.

## 2.5.5 Configure security and alarm

### Security switch

Changes to the Rosemount ERS System configuration can be prevented with the security (write protect) switch, which is located on the electronics feature board of the Rosemount 3051S ERS Primary Transmitter. See [Figure 2-9](#) for the location of the switch. Position the switch in the “ON” position to prevent accidental or deliberate change to the Rosemount ERS System configuration.

If the write protect switch is in the “ON” position, the Rosemount ERS System will not accept any “writes” to its memory. Configuration changes, such as digital trim and reranging, cannot take place when the security switch is set to “ON.”

### Alarm direction


The alarm direction of the analog output of the Rosemount ERS System is set by repositioning the alarm switch, which is located on the electronics feature board of the primary transmitter. Position the switch in the “HI” position to have the Rosemount ERS System go to high alarm in a fail condition, or position the switch in the “LO” position to have the system go to low alarm in a fail condition. See [“Alarm and saturation levels”](#) on [page 29](#) for more information on alarm and saturation levels.

### Switch configuration procedure

To reposition the hardware switches, follow the procedure below:

- ⚠ 1. Do not remove the housing covers in explosive atmospheres when the circuit is live. If the Rosemount 3051S ERS System is live, set the loop to manual and remove power.
2. On the Rosemount 3051S ERS Primary Transmitter, remove the housing cover opposite the field terminal side.
3. Reposition the alarm and security switches as desired, by using a small screwdriver.
- ⚠ 4. Reinstall the housing cover. Covers must be fully engaged so the metal contacts metal in order to meet flameproof/explosion-proof requirements.

**Figure 2-9. Alarm and Security Switches**

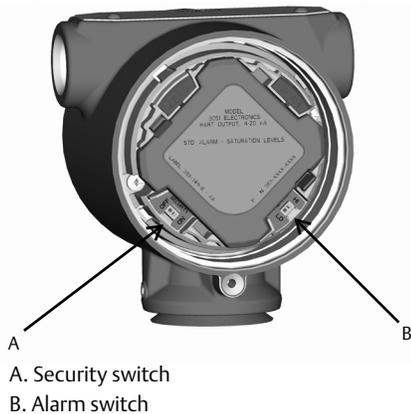

## 2.5.6 Connect wiring and power up

### Typical Rosemount ERS System

1. Remove the housing cover labeled “Field Terminals” on both Rosemount 3051S ERS Transmitter.
2. Using the Rosemount ERS Madison Cable (if ordered) or an equivalent 4-wire shielded assembly per the specifications detailed on [page 16](#), connect the 1, 2, A, and B terminals between the two sensors per [Figure 2-10](#). Maintain uniform twist in wires as close as possible to the screw terminals.
3. Connect the Rosemount ERS System to the control loop by wiring the “+” and “-” PWR/COMM terminals of the Rosemount 3051S ERS Primary Transmitter to the positive and negative leads, respectively.
4. Plug and seal all unused conduit connections.
5. If applicable, install wiring with a drip loop. Arrange the drip loops so the bottom is lower than the conduit connections and the transmitter housings.
6. Reinstall and tighten the housing covers on both sensors so metal contacts metal to meet explosion-proof requirements.

### Rosemount 3051S ERS System with optional remote display and interface

1. Remove the housing cover labeled “Field Terminals” on both Rosemount ERS Sensors and the remote housing.
2. Using the Rosemount ERS Madison Cable (if ordered) or an equivalent 4-wire shielded assembly per the specifications detailed on [page 16](#), connect the 1, 2, A, and B terminals between the two sensors and remote housing in a “tree” ([Figure 2-11](#)) or daisy-chain ([Figure 2-12](#)) configuration. Maintain uniform twist in wires as close as possible to the screw terminals.
3. Connect the Rosemount ERS System to the control loop by wiring the “+” and “-” PWR/COMM terminals of the remote housing to the positive and negative leads, respectively.
4. Plug and seal all unused conduit connections.
5. If applicable, install wiring with a drip loop. Arrange the drip loops so the bottom is lower than the conduit connections and the transmitter housings.
6. Reinstall and tighten all housing covers so metal contacts metal to meet explosion-proof requirements.

---

#### Note

I.S. barriers with inductive loads greater than 1 mH should not be used with the Rosemount ERS System and may cause the device to not function properly.

---

---

## Rosemount 3051S ERS System cable specifications

- Cable type: Recommend gray Madison 04ZZXLF015 cable, blue Madison 04ZZXLF021 cable, and Southwire HLX01-POS armor cable. Other comparable cable may be used as long as it has independent dual twisted shielded pair wires with an outer shield. The power wires (pin terminals 1 and 2) must be 22 AWG minimum and the communication wires (pin terminals A and B) must be 24 AWG minimum.
- Maximum cable length: The total length of cable used to connect the ERS primary transmitter, secondary transmitter, and remote display (if ordered) should not exceed maximum lengths below.
  - Madison (gray cable): up to 500 feet (152,4 meters) for non-IS applications and 225 feet (68,58 meters) for IS applications; consult Emerson for applications requiring beyond 500 feet.
  - Madison (blue cable): up to 225 feet (68,58 meters) for IS applications
  - Armored cable: up to 125 feet (38,1 meters).
- For SIS maximum lengths see “Rosemount ERS Systems safety certified identification” on page 61
- Cable capacitance: The capacitance between the communication lines as wired must be less than 5000 picofarads total. This allows up to 50 picofarads per foot (164 picofarads/meter) for a 100-ft. cable.
- Gray and blue cable outside diameter: 0.270-in. (6.86 mm)  
Armor cable outside diameter: 0.76-in. (19.3 mm)
- For armored cable, cable glands are included with the packaging

## 4–20 mA loop wiring specifications

It is recommended to use twisted pair wiring. To ensure proper communication, use 24 to 14 AWG wire, and do not exceed 5000 feet (1500 meters).

---

### Note

There are four connections plus shield, which require correct configuration for operation. There is no mechanism that can result in re-sequencing of messages from the physical connections.

---

## Surges/transients

The Rosemount 3051S ERS System will withstand electrical transients of the energy level usually encountered in static discharges or induced switching transients. However, high-energy transients, such as those induced in wiring from nearby lightning strikes, can damage the Rosemount ERS System.

## Optional transient protection terminal block

The transient protection terminal block can be ordered as an installed option (option code T1) or as a spare part to retrofit an existing Rosemount ERS System in the field. A lightning bolt symbol on a terminal block identifies it as having transient protection.

---

### Note

The transient terminal block is only available as an option on the primary Rosemount 3051S ERS Transmitter. When ordered and installed, a primary Rosemount 3051S ERS Transmitter with the transient terminal block will protect the entire Rosemount ERS Assembly including the secondary Rosemount 3051S ERS Transmitter.

---


## Power supply requirements

The DC power supply should provide power with less than two percent ripple. The total loop resistance is the sum of the resistance from the signal leads and the load resistance of the controller, indicator, and related pieces. Note that the resistance of intrinsically safe barriers, if used, must be included.


**Note**

A minimum loop resistance of 250 ohms is required to communicate with a Field Communicator. If a single power supply is used to power more than one Rosemount ERS System, the power supply used and circuitry common to the transmitters should not have more than 20 ohms of impedance at 1200 Hz.

**Figure 2-10. Wiring for Typical Rosemount 3051S ERS System**

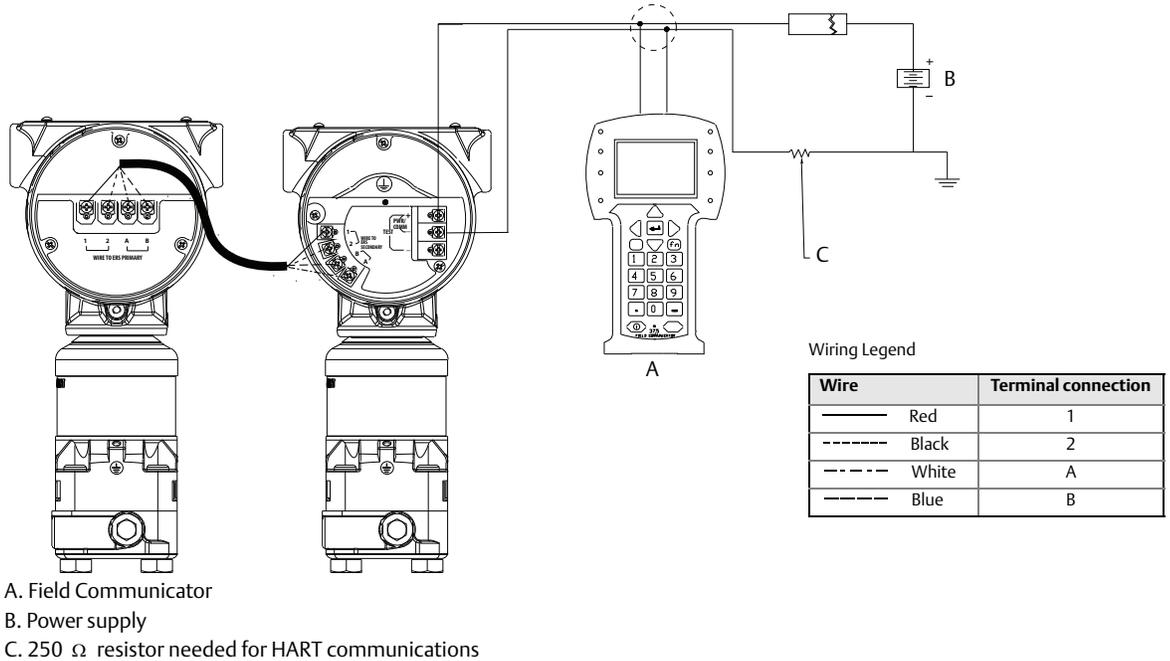


**Figure 2-11. Wiring for Rosemount 3051S ERS System with Remote Display in “Tree” Configuration**

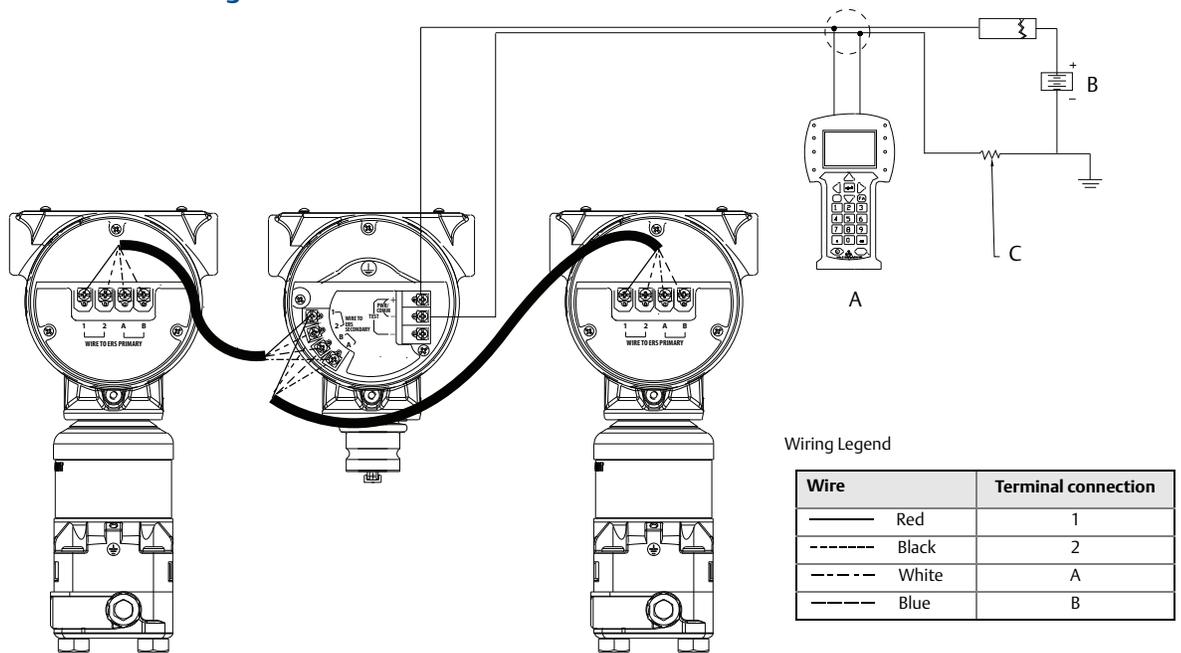

- A. Field Communicator
- B. Power supply
- C. 250 Ω resistor needed for HART communications

**Figure 2-12. Wiring for Rosemount 3051S ERS System with Remote Display in “Daisy-Chain” Configuration**

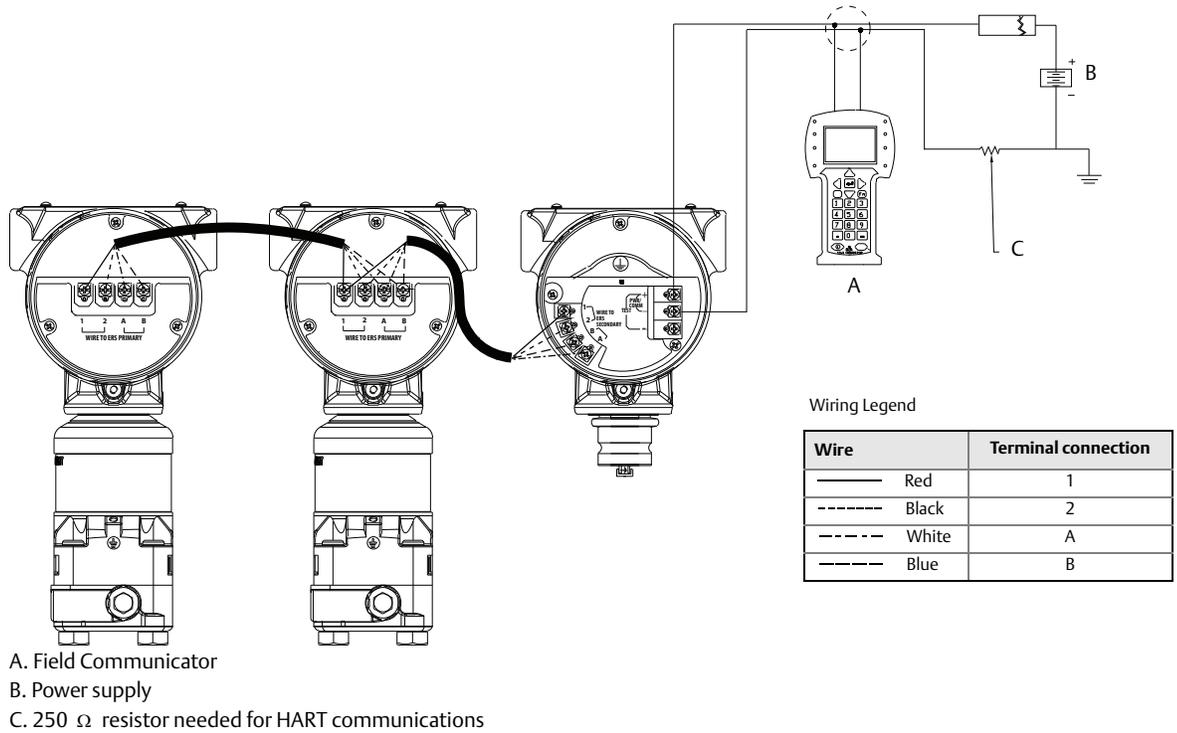

## 2.5.7

### Grounding


#### Loop wiring grounding

Do not run signal wiring in conduit or open trays with power wiring or near heavy electrical equipment. Ground the shield of the signal wiring at any one point on the signal loop. See Figure 2-13. The negative terminal of the power supply is a recommended grounding point.

#### Note

Grounding the transmitter case using the threaded conduit connection may not provide a sufficient ground. The transient protection terminal block (option code T1) will not provide transient protection unless the transmitter case is properly grounded. Do not run transient protection ground wire with signal wiring; the ground wire may carry excessive current if a lightning strike occurs.

Figure 2-13. Loop Wire Grounding (Rosemount 3051S ERS Primary Transmitter)

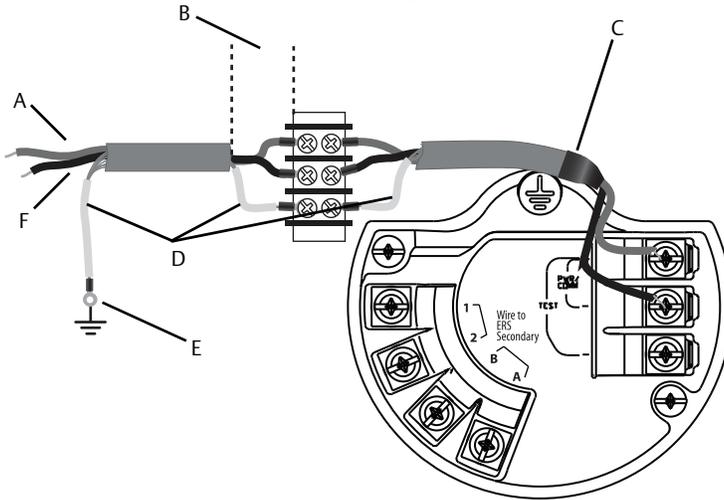


- A. Positive
- B. Minimize distance
- C. Trim shield and insulate
- D. Insulate shield
- E. Connect shield back to the power supply negative terminal
- F. Negative

## Shield grounding

Connect the shield from the Madison Cable assembly to each housing case for the applicable wiring configuration as shown in [Figure 2-14](#).

**Figure 2-14. Shield Grounding**

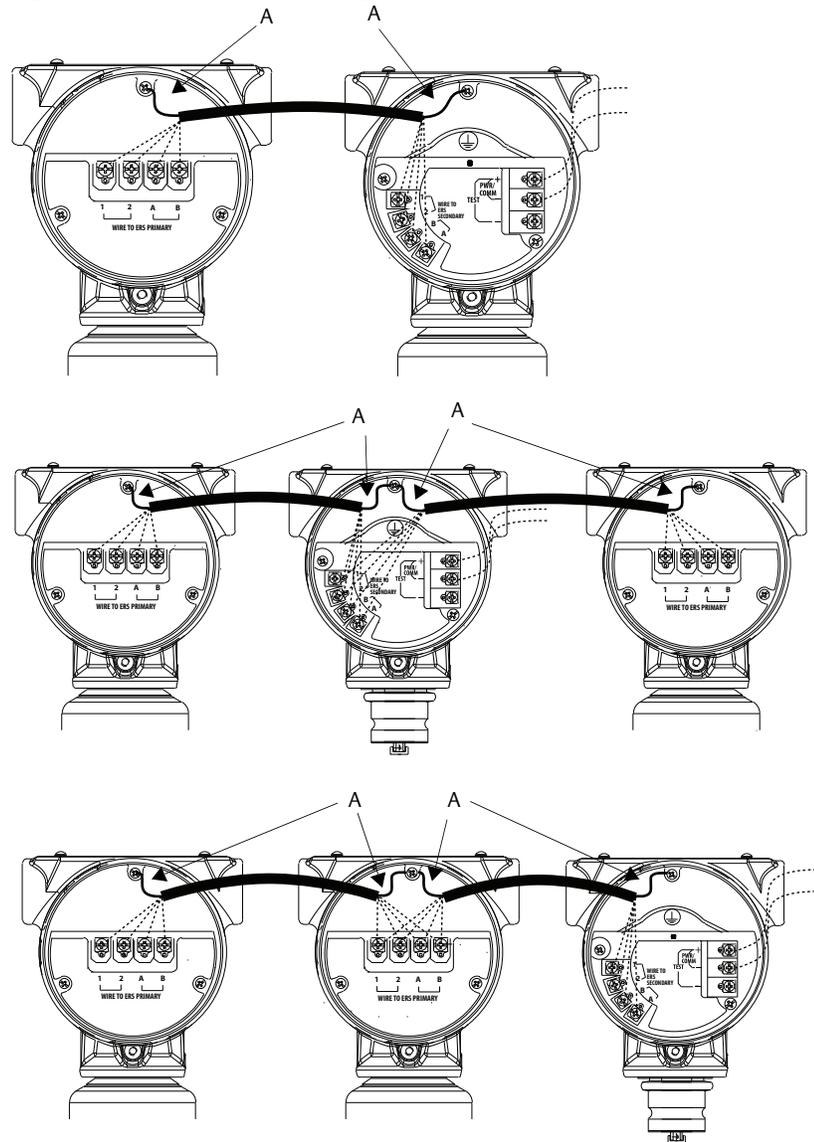

A. Cable shield

## Transmitter case


Always ground the transmitter case in accordance with national and local electrical codes. The most effective transmitter case grounding method is a direct connection to earth ground with minimal impedance (< 1 ohm). Methods for grounding the transmitter case include:

- Internal ground connection: The internal ground connection screw is inside the terminal side of the electronics housing. The screw is identified by a ground symbol (⊕), and is standard on all Rosemount 3051S ERS Transmitters.
- External ground connection: The external ground connection is on the outside of the SuperModule™ housing. The connection is identified by a ground symbol (⊕).

## 2.6 Rosemount manifolds


The Rosemount 305 Integral Manifold assembles directly to an Rosemount 3051S ERS Transmitter, eliminating the need for the flange. The Rosemount 305 is available in two designs: coplanar (bottom process connections) and traditional (side process connections).

Figure 2-15. Rosemount 305 Integral Manifolds

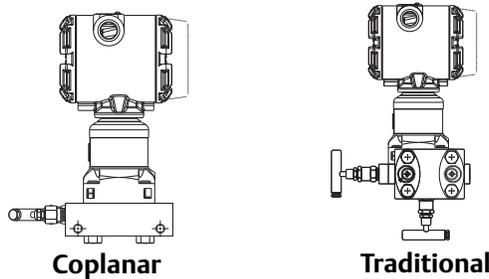

The Rosemount 304 Conventional Manifold assembles directly to an instrument flange for easy servicing and retrofitting. The Rosemount 304 is available in two basic styles: traditional (flange 3 flange and flange 3 pipe) and wafer.

Figure 2-16. Rosemount 304 Conventional Manifolds

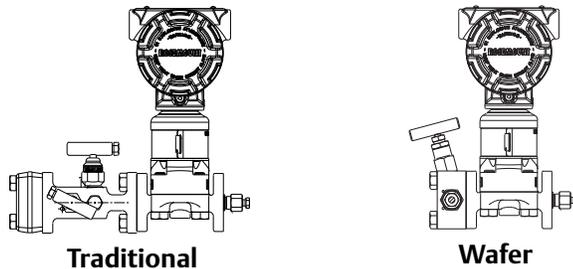

The Rosemount 306 Manifold assembles directly to an in-line style transmitter and is available with male or female 1/2-in. NPT process connections.

**Figure 2-17. Rosemount 306 In-Line Manifold**



## 2.6.1 Rosemount 305 Manifold installation procedure

To install a Rosemount 305 Integral Manifold to a Rosemount 3051S ERS Transmitter:

1. Inspect the PTFE sensor module O-rings. If the O-rings are undamaged, reusing them is recommended. If the O-rings are damaged (if they have nicks or cuts, for example), replace them with new O-rings.

### Note

If replacing the O-rings, be careful not to scratch or deface the O-ring grooves or the surface of the isolating diaphragm when removing the damaged O-rings.

2. Install the integral manifold on the sensor module process connection. Use the four manifold bolts for alignment. Finger tighten the bolts, then tighten the bolts incrementally in a cross pattern to final torque value. See “[Flange bolts](#)” on [page 10](#) for complete bolt installation information and torque values. When fully tightened, the bolts should extend through the top of the SuperModule housing.
3. If the PTFE sensor module O-rings have been replaced, the flange bolts should be re-tightened after installation to compensate for seating of the O-rings.
4. If applicable, install flange adapters on the process end of the manifold using the 1.75-in. flange bolts supplied with the Rosemount 3051S ERS Transmitter.

## 2.6.2 Rosemount 304 Manifold installation procedure

To install a Rosemount 304 Conventional Manifold to a Rosemount 3051S ERS Transmitter:

1. Align the Rosemount 304 Manifold with the sensor flange. Use the four manifold bolts for alignment.
2. Finger tighten the bolts, then tighten the bolts incrementally in a cross pattern to final torque value. See “[Flange bolts](#)” on [page 10](#) for complete bolt installation information and torque values. When fully tightened, the bolts should extend through the top of the sensor module assembly bolt hole but must not contact the transmitter housing.
3. If applicable, install flange adapters on the process end of the manifold using the 1.75-in. flange bolts supplied with the Rosemount 3051S ERS Transmitter.

## 2.6.3 Rosemount 306 Manifold installation procedure


To install a Rosemount 306 In-Line Manifold to a Rosemount 3051S ERS Transmitter:

1. Place the Rosemount 3051S ERS Transmitter into a holding fixture.
2. Apply appropriate thread paste or tape to the threaded instrument end of the manifold.
3. Count the total threads on the manifold before starting assembly.
4. Start turning the manifold by hand into the process connection on the transmitter. Be sure the thread tape does not strip.
5. Wrench-tighten the manifold into the process connection. The minimum torque value is 425 in-lbs.
6. Count how many threads are still showing. The minimum thread engagement is three revolutions.
7. Subtract the number of threads showing (after tightening) from the total threads to calculate the revolutions engaged. Further tighten until a minimum of three rotations is achieved.
8. For block and bleed manifold, verify the bleed screw is installed and tightened. For two-valve manifold, verify the vent plug is installed and tightened.
9. Leak-check assembly to maximum pressure range of transmitter.

## 2.6.4 Manifold valve configurations

### Block-and-bleed manifold

The block-and-bleed configuration is available on the Rosemount 306 Manifold for use with in-line gage and absolute pressure transmitters. A single block valve provides instrument isolation, and a plug provides draining/vent capabilities.

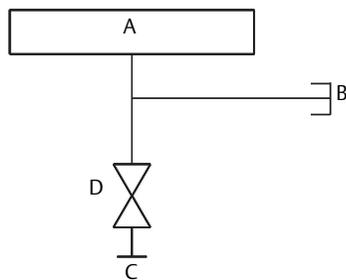


- A. Transmitter
- B. Bleed screw
- C. Process
- D. Isolate


### Two-valve manifold

The two-valve configuration is available on the Rosemount 304, 305, and 306 Manifolds for use with gage and absolute pressure transmitters. A block valve provides instrument isolation, and a drain/vent valve allows for venting, draining, or calibration.

#### Rosemount 304 2-Valve Configuration

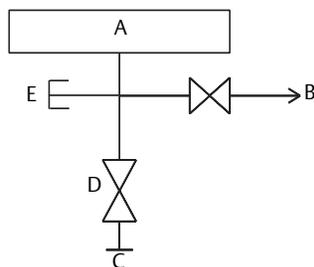

#### Rosemount 305 and 305 Valve Configuration

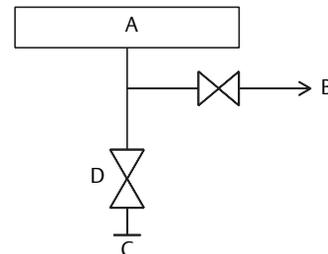

# Section 3 Configuration

---

Overview .....	page 25
Safety messages .....	page 25
Wiring diagrams .....	page 26
Basic setup .....	page 26
Additional configuration .....	page 30
HART menu trees .....	page 39

---

## 3.1 Overview

This section contains information on commissioning and tasks that should be performed on the bench prior to installation.

Instructions for performing configuration functions are given for a handheld Field Communicator and AMS™ Device Manager version 10.5. For convenience, Field Communicator Fast Key sequences are labeled “Fast Keys” for each software function below the appropriate headings.

### Example software function

<b>Fast Keys</b>	1, 2, 3, etc.
------------------	---------------

## 3.2 Safety messages

Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operation. Information that raises potential safety issues is indicated with a warning symbol (⚠). Refer to the following safety messages before performing an operation preceded by this symbol.

### **⚠ WARNING**

**Failure to follow these installation guidelines could result in death or serious injury.**

- Make sure only qualified personnel perform the installation

**Explosions could result in death or serious injury.**

- Do not remove the transmitter covers in explosive atmospheres when the circuit is live.
  - Before connecting a Field Communicator in an explosive atmosphere, make sure the instruments in the loop are installed in accordance with intrinsically safe or non-incendive field wiring practices.
  - Both transmitter covers must be fully engaged to meet flameproof/explosion-proof requirements.
  - Verify the operating atmosphere of the transmitter is consistent with the appropriate hazardous location certifications.
-

## ⚠ WARNING

### **Electrical shock could cause death or serious injury.**

- If the Rosemount™ 3051S Electronic Remote Sensor (ERS)™ System is installed in a high-voltage environment and a fault or installation error occurs, high voltage may be present on the transmitter leads and terminals.
- Use extreme caution when making contact with the leads and terminals.

### **Process leaks could result in death or serious injury.**

- Install and tighten all four flange bolts before applying pressure.
- Do not attempt to loosen or remove flange bolts while the transmitter is in service.
- Replacement equipment or spare parts not approved by Emerson™ for use as spare parts could reduce the pressure retaining capabilities of the transmitter and may render the instrument dangerous.
- Use only bolts supplied or sold by Emerson as spare parts.

### **Improper assembly of manifolds to traditional flange can damage the device.**

- For the safe assembly of the manifold to the transmitter flange, bolts must break the back plane of the flange web (i.e. bolt hole) but must not contact the sensor module.

### **Static electricity can damage sensitive components.**

- Observe safe handling precautions for static-sensitive components.

## 3.2.1 Setting the loop to manual

Whenever sending or requesting data that would disrupt the loop or change the output of the transmitter, set the process application loop to manual. The Field Communicator or AMS Device Manager will prompt to set the loop to manual when necessary. Acknowledging this prompt does not set the loop to manual. The prompt is only a reminder; set the loop to manual as a separate operation.

## 3.3 Wiring diagrams

Connect a Field Communicator or AMS Device Manager using a wiring configuration as shown in [Figure 2-9](#), [Figure 2-10](#), or [Figure 2-11](#). The Field Communicator or AMS Device Manager may be connected at “PWR/COMM” on the terminal block of the Rosemount 3051S ERS Primary Transmitter, across the load resistor, or at any termination point in the signal loop.

The Field Communicator or AMS Device Manager will search for a HART®-compatible device and indicate when the connection is made. If the Field Communicator or AMS Device Manager fail to connect, it indicates that no device was found. If this occurs, refer to [Section 5: Troubleshooting](#).

## 3.4 Basic setup

It is recommended that the following items are verified and configured to ensure the proper functionality of the ERS System.

### 3.4.1 Device tagging

<b>Fast Keys</b>	2, 1, 1, 1
------------------	------------

#### Tag

An 8-character free-form text field that can be used to uniquely identify the device.

#### Long tag

A 32-character free-form text field that can be used to uniquely identify the device. Long tag is only supported by host systems that are HART Revision 6 or higher.

#### Descriptor

A 16-character free-form text field that can be used to further describe the device or application.

#### Message

A 32-character free-form text field that can be used to save a message or memo about the device or application.

#### Date

A formatted field (mm/dd/yyyy) available to enter and store a date (such as the day of installation or last calibration).

### 3.4.2 Units of measure

<b>Fast Keys</b>	2, 1, 1, 2, 1
------------------	---------------

The Differential Pressure, P<sub>HI</sub> Pressure, and P<sub>LO</sub> Pressure measurements can be independently configured for any of the units shown in [Table 3-1](#).

The P<sub>HI</sub> and P<sub>LO</sub> Module Temperatures can be independently configured for Fahrenheit or Celsius.

**Table 3-1. Pressure Units of Measure**

inH <sub>2</sub> O @ 68 °F	bar	Torr
inHg @ 0 °C	mbar	Atm
ftH <sub>2</sub> O @ 68 °F	g/cm <sup>2</sup>	MPa
mmH <sub>2</sub> O @ 68 °F	kg/cm <sup>2</sup>	inH <sub>2</sub> O at 4 °C
mmHg @ 0 °C	Pa	mmH <sub>2</sub> O at 4 °C
Psi	kPa	in H <sub>2</sub> O @ 60 °F

### 3.4.3 Damping

<b>Fast Keys</b>	2, 1, 1, 2, 2
------------------	---------------

The damping software feature introduces a delay in processing which increases the response time of the measurement, smoothing variations in output readings caused by rapid input changes. Determine the appropriate damping setting based on the necessary response time, signal stability, and other requirements of your application.

Damping can be set independently for the Differential Pressure, P<sub>HI</sub> Pressure, and P<sub>LO</sub> Pressure measurements. Damping values can be set anywhere from 0 to 60 seconds.

### 3.4.4 Variable mapping

<b>Fast Keys</b>	2, 1, 1, 3
------------------	------------

Select which ERS System parameters to assign to each HART variable.

#### Primary variable

The parameter assigned to the HART Primary Variable controls the 4–20 mA Analog Output. The following ERS System parameters can be assigned to the Primary Variable:

- Differential Pressure
- P<sub>HI</sub> Pressure
- P<sub>LO</sub> Pressure
- Scaled Variable

#### 2<sup>nd</sup>, 3<sup>rd</sup>, and 4<sup>th</sup> variables

The 2<sup>nd</sup>, 3<sup>rd</sup>, and 4<sup>th</sup> variables can be accessed digitally through a HART host. A HART-to-Analog converter, such as the Rosemount 333 Tri-Loop™, can also be used to convert each of the variables to a separate 4–20 mA analog output signal. These variables can also be accessed wirelessly by using an Emerson Smart Wireless THUM™ Adapter. The following ERS System parameters can be assigned to the 2<sup>nd</sup>, 3<sup>rd</sup>, and 4<sup>th</sup> variables:

- Differential Pressure
- P<sub>HI</sub> Pressure
- P<sub>LO</sub> Pressure
- P<sub>HI</sub> Module Temperature
- P<sub>LO</sub> Module Temperature
- Scaled Variable

### 3.4.5 Analog output

<b>Fast Keys</b>	2, 1, 1, 4
------------------	------------

Configure the lower and upper range values, which correspond to the 4 and 20 mA analog output range points. The 4 mA point represents the 0% of span reading, and the 20 mA point represents the 100% of span reading.

The analog output range points can also be set using the zero and span adjustment buttons located on the electronics of the Rosemount 3051S ERS Primary Transmitter (see [Figure 3-1](#)) and a pressure source.

1. Using a pressure source with an accuracy three to ten times the desired calibrated accuracy, apply a pressure equivalent to the lower range value to the P<sub>HI</sub> transmitter.
2. Push and hold the zero adjustment button for at least two seconds but no longer than 10 seconds.
3. Apply a pressure equivalent to the upper range value to the P<sub>HI</sub> transmitter.
4. Push and hold the span adjustment button for at least two seconds but no longer than 10 seconds.

**Figure 3-1. Zero and Span Buttons**



A. Zero  
B. Span

### 3.4.6 Alarm and saturation levels

<b>Fast Keys</b>	2, 1, 1, 5
------------------	------------

The Rosemount 3051S ERS Transmitter automatically and continuously performs self-diagnostic routines. If a self-diagnostic routine detects a failure, the ERS System will drive the output to the configured alarm value that is based on the position of the failure mode alarm switch (see “[Configure process alerts](#)” on page 38). The ERS System will also drive the output to configured saturation values if the applied pressure goes outside the 4–20 mA range values.

The Rosemount 3051S ERS System has three options for configuring the failure mode alarm and saturation levels:

**Note**

The ERS System will drive the output to alarm level (high or low) if the pressure applied to either sensor is outside of the Lower sensor limit (LSL) or Upper sensor limit (USL).

**Table 3-2. Alarm and Saturation Values**

Rosemount (standard)		
Switch position	Saturation level	Alarm level
Low	3.9 mA	≤ 3.75 mA
High	20.8 mA	≥ 21.75 mA

NAMUR-compliant		
Switch position	Saturation level	Alarm level
Low	3.8 mA	≤ 3.6 mA
High	20.5 mA	≥ 22.5 mA

Custom		
Switch position	Saturation level	Alarm level
Low	3.7 – 3.9 mA	3.54 – 3.8 mA
High	20.1 – 21.5 mA	20.2 – 23.0 mA

Additional considerations when using custom alarm and saturation values:

- Low alarm must be less than low saturation
- High alarm must be higher than high saturation
- Alarm and saturation levels must be separated by at least 0.1 mA.

## 3.5 Additional configuration

The following items are considered optional and may be configured as needed. Refer to [Figure 3-7 on page 39](#) for the full Field Communicator menu tree.

### 3.5.1 Local display

<b>Fast Keys</b>	2, 1, 3
------------------	---------

A local display is available as an orderable option on the Rosemount 3051S ERS Primary Transmitter. The display will show a 0–100% scaled bar graph, the selected measurements from [Table 3-3](#), and any diagnostic or error messages. At least one parameter from [Table 3-3](#) must be selected. If more than one item is selected, the display will scroll through the selected parameters, showing each for three seconds.

**Table 3-3. Available Parameters for Local Display**

Differential pressure	P <sub>HI</sub> module temperature	Output (% of range)
P <sub>HI</sub> pressure	P <sub>LO</sub> module temperature	N/A
P <sub>LO</sub> pressure	Scaled variable	N/A

### 3.5.2 Burst mode

<b>Fast Keys</b>	2, 2, 5, 3
------------------	------------

When configured for burst mode, ERS provides faster digital communication from the ERS System to the control system by eliminating the time required for the control system to request information from the ERS System.

When in burst mode, the ERS System will continue to output a 4–20 mA analog signal. Because the HART protocol features simultaneous digital and analog data transmission, the analog value can drive other equipment in the loop while the control system is receiving the digital information. Burst mode applies only to the transmission of dynamic data (process variables in engineering units, primary variable in percent of span, and the analog output reading), and does not affect the way other transmitter data is accessed.

Access to information that is not burst can be obtained through the normal poll/response method of HART communication. A Field Communicator, AMS Device Manager, or the control system may request any of the information that is normally available while the ERS System is in burst mode.

### Burst mode configuration

To have the ERS System configured to communicate in burst mode:

1. Set the Burst Mode parameter to “on.”
2. Select a Burst Option from [Table 3-4](#) below. This parameter determines what information is communicated through burst mode.

**Table 3-4. Burst Command Options**

HART command	Burst option	Description
1	PV	Primary Variable
2	% range/current	Percent of range and mA output
3	Dyn vars/current	All process variables and mA output
9	Devices vars w/status	Burst variables and status information
33	Device variables	Burst variables

**Note**

If using an ERS System with the Rosemount 333 HART Tri-Loop, the burst option should be set to “Dyn vars/current.”

### Burst variable slot definition

If either **Device vars w/status** or **Device Variables** is selected as the Burst Option, you will need to configure which variables are communicated in Burst Mode. This is accomplished by assigning a variable to a Burst Slot. ERS System has four available Burst Slots for burst communication.

## 3.5.3 Multidrop communication

<b>Fast Keys</b>	2, 2, 5, 2
------------------	------------

The HART protocol allows several transmitters to communicate digitally on a single transmission line when wired in a Multidrop network. If using an ERS System in a multidrop network, the connection to the network is made through the primary sensor as shown in [Figure 3-2](#).

**Note**


[Figure 3-2](#) shows a typical multidrop network. This figure is not intended as an installation diagram.

Communication between the host and the transmitters takes place digitally, and the analog output on each transmitter is deactivated.

**Note**

A transmitter in multidrop mode with “Loop Current Mode” disabled has the analog output fixed at 4 mA.

**Figure 3-2. Typical Multidrop Network**

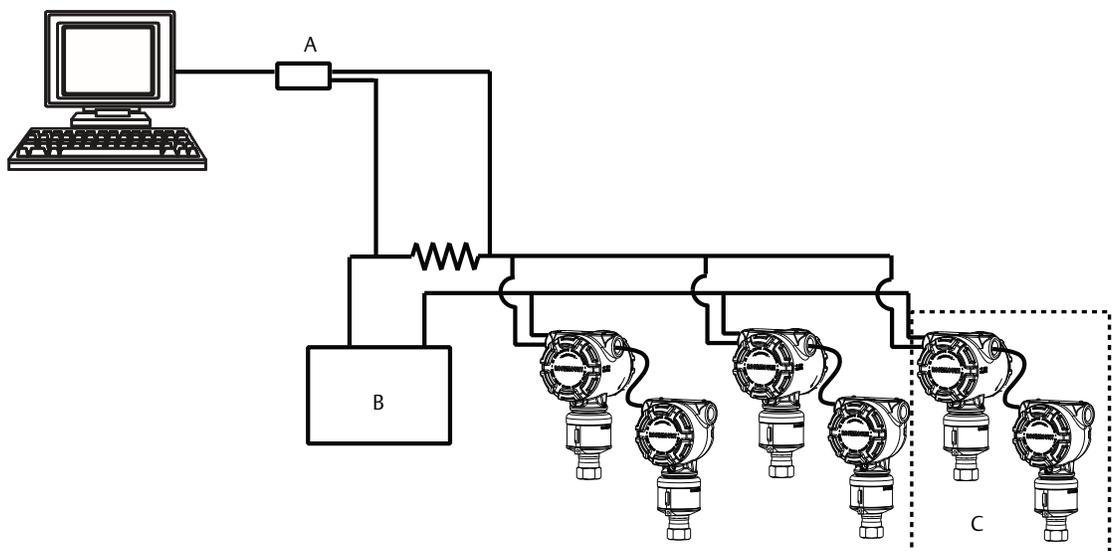

- A. HART modem
- B. Power supply
- C. ERS System

## Enabling multidrop configuration

To configure an ERS System to be part of a multidrop network:

1. Assign a unique address to the ERS System. For a HART Revision 5 system, the valid address range is 1–15. For systems that are HART Revision 6 or above, the valid address range is 1-63. All Rosemount transmitters are shipped from the factory with the default address of zero (0).
2. Disable “Loop Current Mode.” This will cause the analog output of the ERS System to be fixed at 4 mA.

### Note

When an ERS System is configured for multidrop communication, a failure or alarm condition will no longer be indicated through the analog output. Failure signals in multidropped transmitters are communicated digitally through HART messages.

## Disabling multidrop configuration

To configure an ERS System with the factory default point-to-point communication:

1. Assign the ERS System with an address of zero (0).
2. Enable “Loop Current Mode.”

### 3.5.4

## Scaled variable

<b>Fast Keys</b>	2, 2, 3
------------------	---------

Scaled variable can be used to convert the Differential Pressure (DP) that is calculated by the ERS System into an alternative measurement such as level, mass, or volume. For example, an ERS System that measures 0–500 mbar of DP can be configured to output a level measurement of 0–5 meters. The Scaled Variable calculation can be shown on the LCD display and can also be assigned to the 4–20 mA output.

Anywhere from two to 20 points can be used to define the mathematical relationship between the measured DP and the calculated scaled variable.

## Configuring scaled variable to calculate level

<b>Fast Keys</b>	2, 2, 3, 5, 1
------------------	---------------

Because level can be linearly derived from DP, only two scaled variable points are required to configure ERS to calculate a Level measurement. The steps required to configure scaled variable for a Level application are highlighted below:

1. Enter in a text string (up to five characters: A–Z, -, %, /, \*, and “space”) to define the unit of measure for the scaled output. Examples include METER, FEET, or INCH.
2. Enter the minimum DP (in engineering units) that the ERS System will measure. This value will usually be zero (0).
3. Enter the scaled variable value (in terms of the scaled units defined in [Step 1](#)) that corresponds to the minimum DP from [Step 2](#).
4. Enter the maximum DP that the ERS System will measure.
5. Enter the scaled variable value that corresponds to the DP from [Step 4](#).
6. To have the 4–20 mA signal of the ERS System output the scaled variable measurement, map scaled variable to the HART Primary Variable and configure the upper and lower range values.

Figure 3-3. Scaled Variable - Level

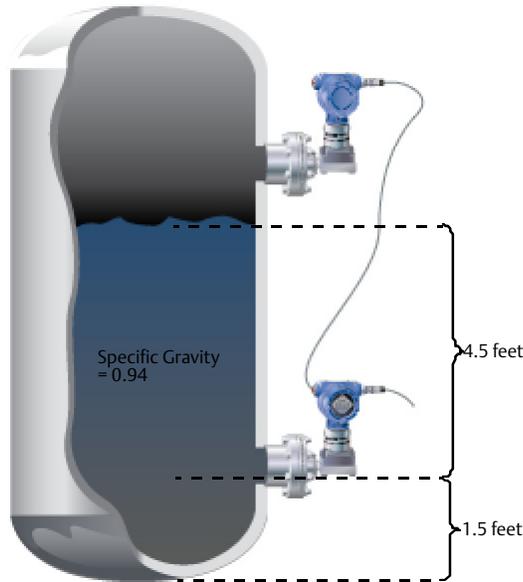


Table 3-5. Scaled Variable Configuration Option

Variable	Unit
Scaled Units	Feet (Meter)
DP <sub>1</sub> (Minimum DP)	0 inH <sub>2</sub> O ( 0 mmH <sub>2</sub> O)
Scaled <sub>1</sub> (Level at min. DP)	1.5 feet (0.46 meter)
DP <sub>2</sub> (DP at max level)	50.76 inH <sub>2</sub> O (1289 mmH <sub>2</sub> O)
Scaled <sub>2</sub> (max Level)	6.0 feet (1.83 meters)
Primary variable	Scaled variable
LRV (4 mA)	1.5 feet (0.46 meters)
URV (20 mA)	6.0 feet (1.83 meters)

## Configuring scaled variable to calculate mass or volume

<b>Fast Keys</b>	2, 2, 3, 5, 1
------------------	---------------

To derive a mass or volume calculation from a DP measurement, more than two scaled variable points may be required depending on the tank shape and geometry. ERS supports three different methods for configuring scaled variable for mass or volume applications:

- Direct: manually configure scaled variable using anywhere from two to 20 points.
- Tank formulas: scaled variable will automatically be configured by inputting the tank shape, tank geometry, and specific gravity of the process.
- Strapping table: scaled variable will automatically be configured by inputting a traditional “Level vs. Volume” strapping table.

## Direct method

The steps required to configure scaled variable for a mass or volume application using the direct method are highlighted below:


1. Enter in a text string (up to five characters: A–Z, -, %, /, \*, and “space”) to define the unit of measure for the scaled output. Examples include GALNS, POUND, or LITER.
2. Define the number of scaled variable points that will be configured (valid range = 2 – 20).
3. Enter the first DP value (in engineering units) and the corresponding scaled variable value.
4. Repeat [Step 3](#) for the number of scaled variable points defined in [Step 2](#).

### Note

The values entered for each successive DP and scaled variable pair must be greater than or equal to the previous pair.

5. The ERS System will not be able to calculate mass or volume if the process is below the  $P_{HI}$  pressure tap. If the scaled variable configuration needs to be adjusted to account for the mounting location of  $P_{HI}$  sensor, you can enter in an offset:
  - No offset: the scaled variable configuration defined in [Step 3](#) and [Step 4](#) already accounts for the mounting location of the  $P_{HI}$  transmitter.
  - Offset A: Adjust the scaled variable configuration by providing the height of the  $P_{HI}$  pressure tap (relative to the bottom of the vessel) and the specific gravity of the process.
  - Offset B: Adjust the scaled variable configuration by defining how much mass or volume is located below the  $P_{HI}$  pressure tap (this will define how much scaled output is present when the ERS System is reading “0 DP”).
6. If an offset was used in [Step 5](#), a new scaled variable configuration will automatically be created which accounts for the mounting location of the  $P_{HI}$  transmitter.

Figure 3-4. Scaled Variable - Direct Method

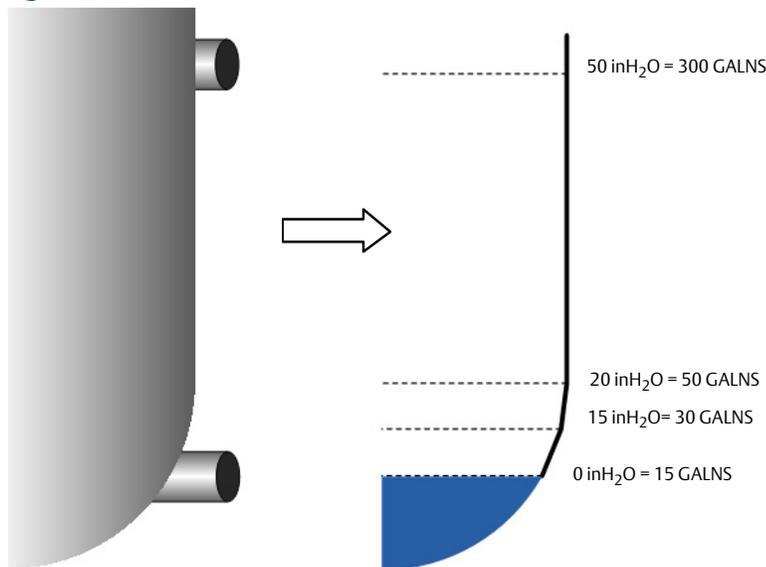

**Table 3-6. Scaled Variable Configuration Options**


Variable	Unit
Scaled units	GALNS (LITER)
Number of scaled points	4
DP <sub>1</sub> Scaled <sub>1</sub>	0 inH <sub>2</sub> O (0 mmH <sub>2</sub> O) 15 GALNS (57 LITER)
DP <sub>2</sub> Scaled <sub>2</sub>	15 inH <sub>2</sub> O (381 mmH <sub>2</sub> O) 30 GALNS (114 LITER)
DP <sub>3</sub> Scaled <sub>3</sub>	20 inH <sub>2</sub> O (508 mmH <sub>2</sub> O) 50 GALNS (189 LITER)
DP <sub>4</sub> Scaled <sub>4</sub>	50 inH <sub>2</sub> O (1270 mmH <sub>2</sub> O) 300 GALNS (1136 LITER)
Offset	No offset
Primary variable	Scaled variable
LRV (4 mA)	15 GALNS (57 LITER)
URV (20 mA)	50 GALNS (189 LITER)

### Tank formula method

The tank formula method for configuring scaled variable can be used if the ERS System is installed on one of the types of tanks shown in [Figure 3-5](#). The steps for using the tank formula method are described below:

1. Enter in a text string (up to five characters: A–Z, -, %, /, \*, and “space”) to define the unit of measure for the scaled output. Examples include GALNS, POUND, or LITER.
2. Select the type of tank for the ERS application (reference [Figure 3-5](#)).
3. Define the following information about the tank:
  - Units of measure used for tank dimensions
  - Tank length (L) (not applicable for spherical tanks) (reference [Figure 3-5](#))
  - Tank radius (R) (reference [Figure 3-5](#))
  - Location of P<sub>HI</sub> pressure tap (T) (reference [Figure 3-5](#))
  - Maximum capacity of vessel (in terms of unit of measure defined in [Step 1](#))
  - Specific gravity of process fluid
4. A scaled variable configuration will automatically be generated based on the information from [Step 3](#). Verify and modify the scaled variable configuration if necessary.
5. To have the 4–20 mA signal of the ERS System output the scaled variable measurement, map scaled variable to the HART primary variable and configure the upper and lower range values.

Figure 3-5. Supported Tank Shapes for “Tank Formula” Configuration Method

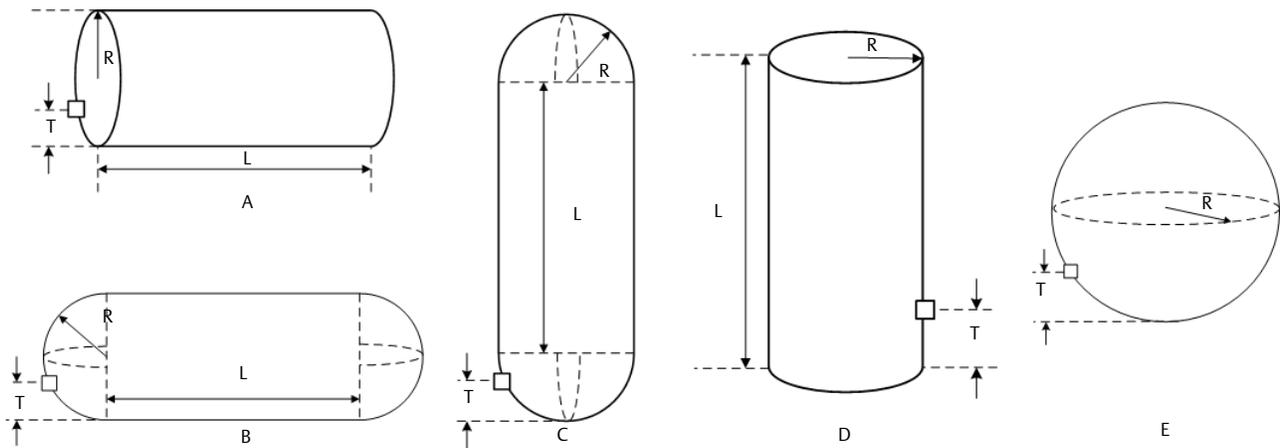

- A. Horizontal cylinder
- B. Horizontal bullet
- C. Vertical bullet
- D. Vertical cylinder
- E. Sphere

## Strapping table method

Scaled variable can also be configured by inputting a traditional “Level vs. Volume” strapping table. The steps for using the strapping table method are described below:

1. Select the unit of measure that the level data will be inputted.
2. Enter in a text string (up to five characters: A–Z, -, %, /, \*, and “space”) to define the unit of measure for the volume data. Examples include GALNS or LITER.
3. Define the specific gravity of the process fluid.
4. Define the number of strapping table points that will be inputted.
5. Enter the first level value (in engineering units) and the corresponding volume value.
6. Repeat [Step 5](#) for the number of strapping table points defined in [Step 4](#).
7. A scaled variable configuration will automatically be generated based on the provided strapping table information. Verify and modify the scaled variable configuration if necessary.
8. To have the 4–20 mA signal of the ERS System output the scaled variable measurement, map scaled variable to the HART primary variable and configure the upper and lower range values.

### 3.5.5 Module assignments

<b>Fast Keys</b>	2, 2, 6
------------------	---------

The ERS System calculates DP by taking the pressure measurement from the P<sub>HI</sub> transmitter and subtracting the pressure measurement from the P<sub>LO</sub> transmitter.

Rosemount 3051S ERS Transmitters are shipped from the factory preconfigured so the primary sensor (4–20 loop termination and optional LCD display) is assigned as the P<sub>HI</sub> device, and the secondary sensor (junction box housing) is assigned as the P<sub>LO</sub> device. In installations where the primary transmitter is installed on the P<sub>LO</sub> process connection (such as at the top of a tank), these designations may be switched electronically using a Field Communicator.

#### Change the P<sub>HI</sub> and P<sub>LO</sub> module assignments

1. View the neck label on each Rosemount 3051S ERS Transmitter and note the serial number and pressure location (P<sub>HI</sub> vs. P<sub>LO</sub>) of the transmitter.
2. Using a Field Communicator, view the serial number and the assigned pressure location for either “Module 1” or “Module 2.”
3. If the currently assigned P<sub>HI</sub>/P<sub>LO</sub> designations do not reflect the actual installation as recorded from [Step 1](#), change the P<sub>HI</sub>/P<sub>LO</sub> assignments using either of the following commands:
  - Set Module 1 = P<sub>HI</sub>, Module 2 = P<sub>LO</sub>
  - Set Module 1 = P<sub>LO</sub>, Module 2 = P<sub>HI</sub>

View the DP measurement from the ERS System and verify the calculation is of positive magnitude. If the DP measurement is of negative magnitude, use the other module assignment command from [Step 3](#).

Figure 3-6. Example of How to Change the P<sub>HI</sub> and P<sub>LO</sub> Module Assignments



## 3.5.6 Process alerts

<b>Fast Keys</b>	2, 3
------------------	------

Process alerts allow for the configuration of the ERS System to output a HART message when a parameter (such as the measured DP) exceeds a user-defined operating window. An alert will be communicated to the HART host (such as a Field Communicator or AMS Device Manager) when polled, and on the LCD display of the ERS System. The alert will reset once the value returns within range.

Process alerts may be configured for the following parameters:

- Differential pressure
- P<sub>HI</sub> pressure
- P<sub>LO</sub> pressure
- P<sub>HI</sub> module temperature
- P<sub>LO</sub> module temperature

### Configure process alerts

1. Select a parameter for which the process alert will be configured.
2. Set the Alert Mode to “enable.”
3. Define the low alert value. If the measured value for the parameter goes below the low alert value, an alert message will be generated.
4. Define the high alert value. If the measured value for the parameter goes above the high alert value, an alert message will be generated.

### Disable process alerts

1. Select a parameter for which the process alert will be disabled.
2. Set the Alert Mode to “disabled.”

## 3.6 HART menu trees

Figure 3-7. Overview

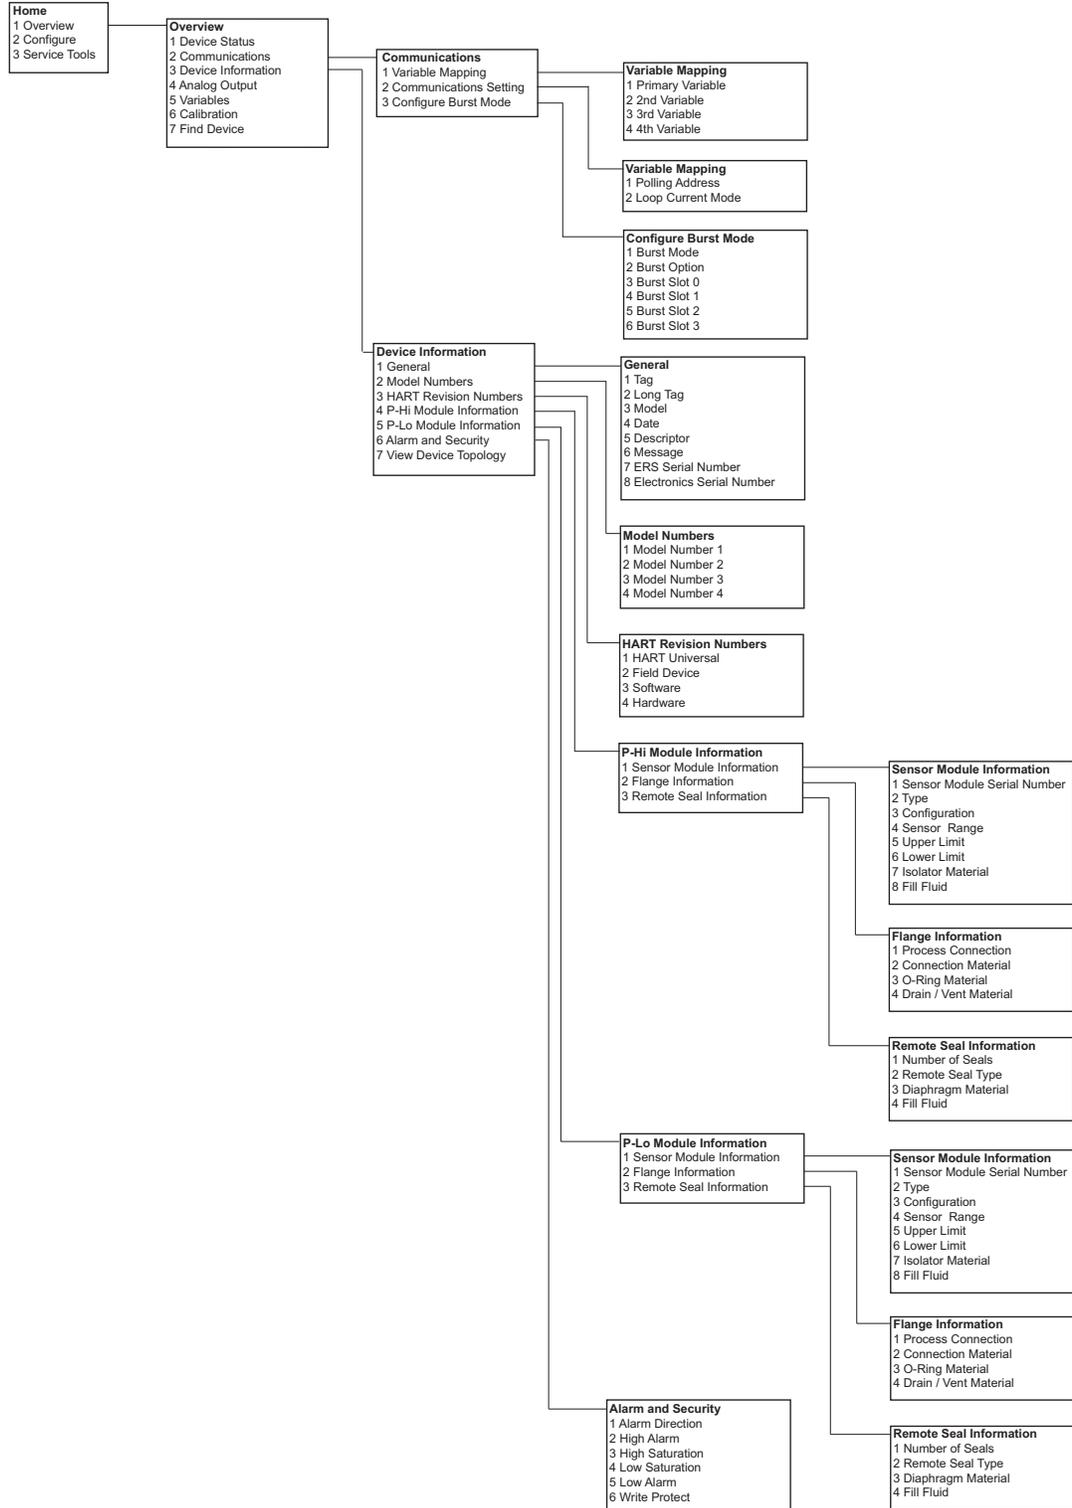


Figure 3-8. Configure


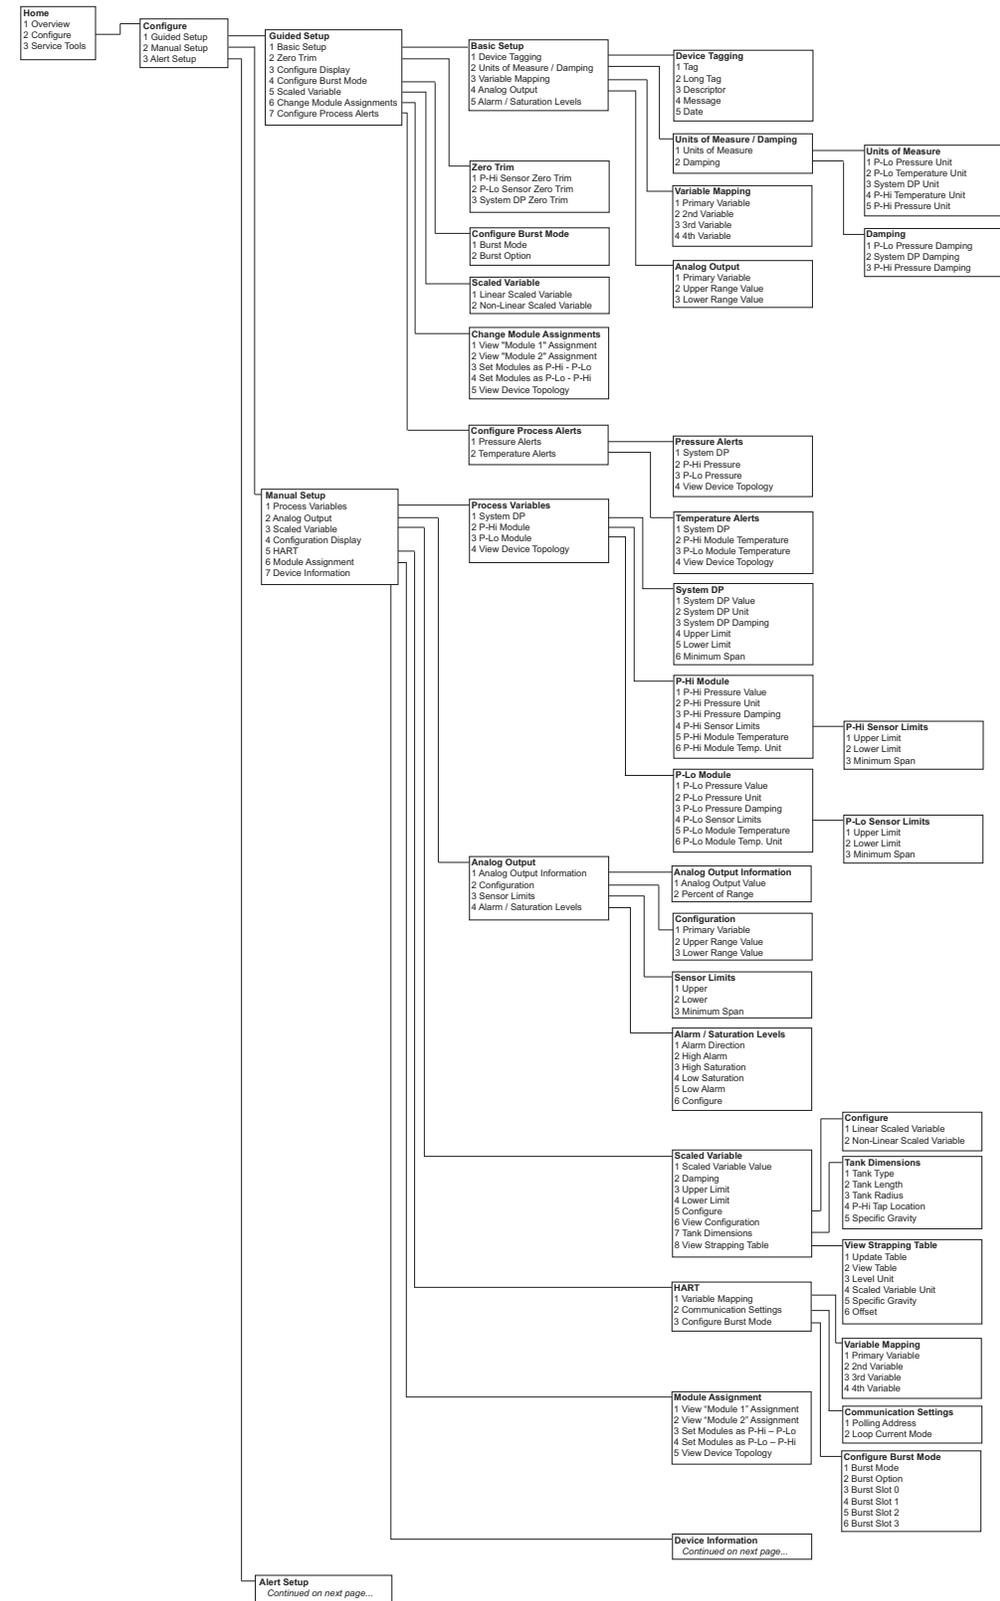


Figure 3-9. Alert Setup, Device Information, and Service Tools



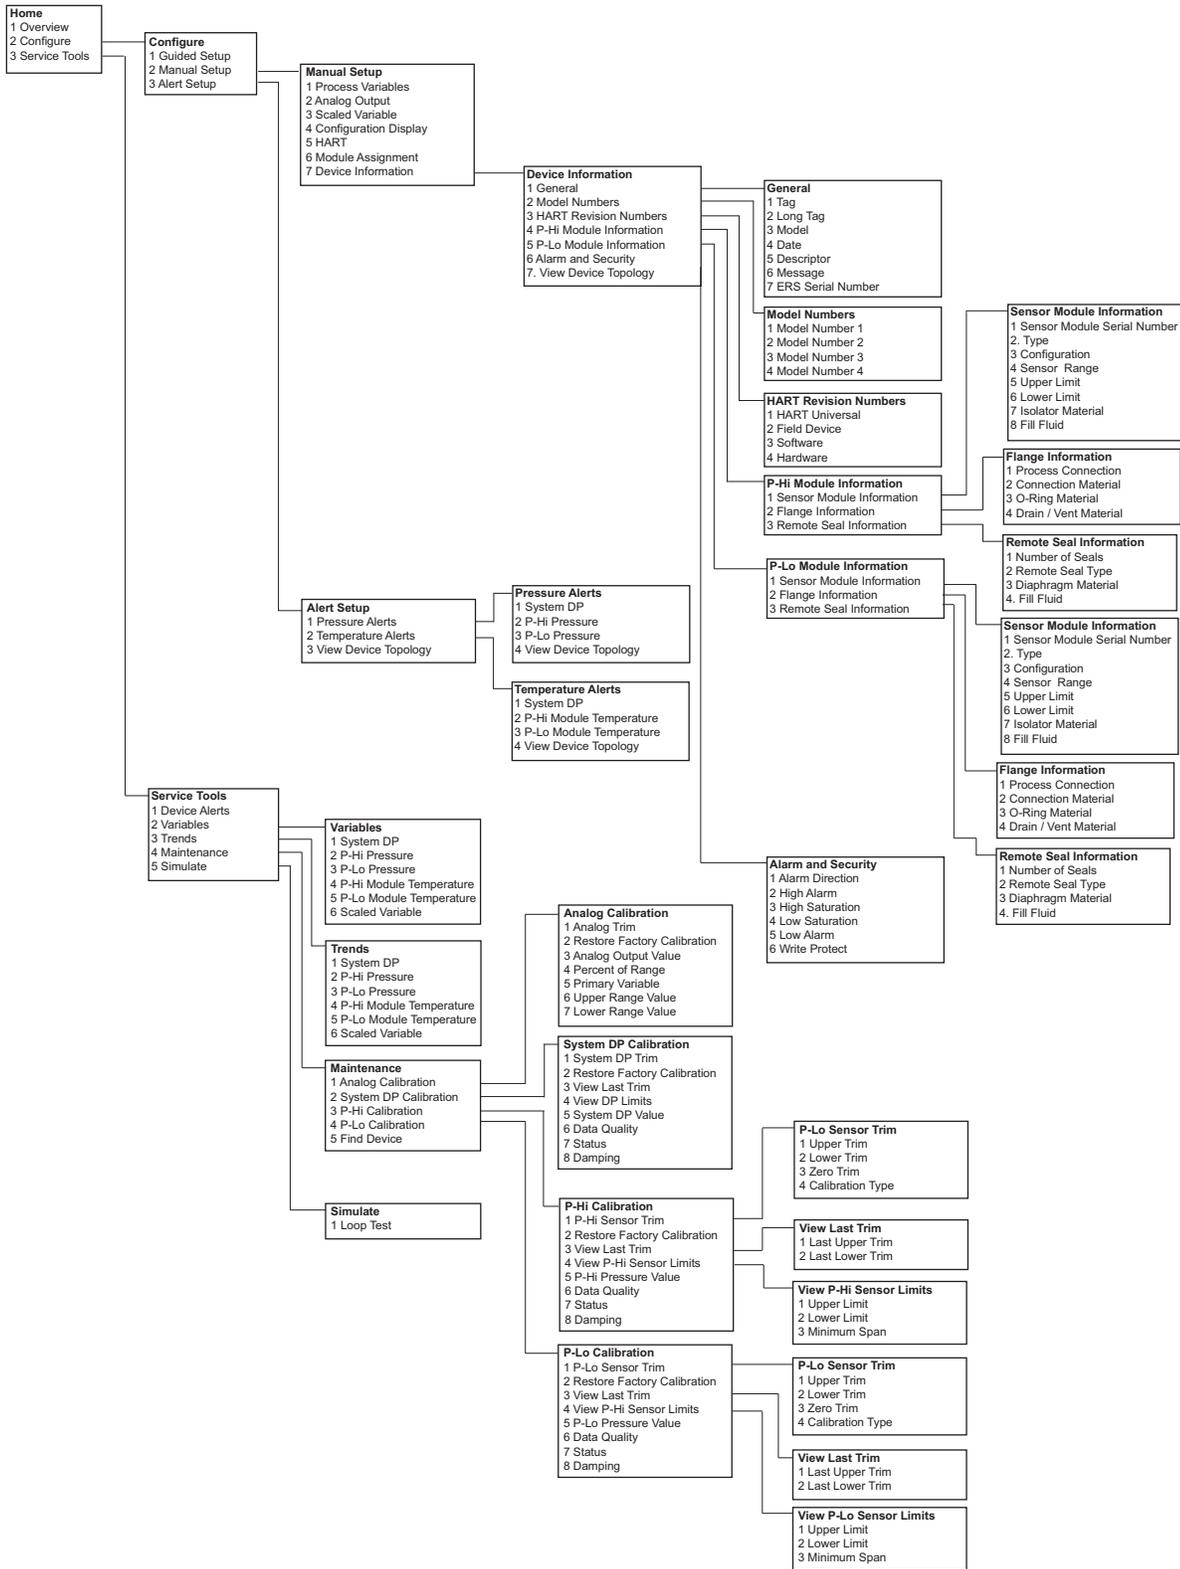

# Section 4      Operation and Maintenance

---

Overview .....	page 43
Safety messages .....	page 43
Calibration .....	page 44
Functional tests .....	page 48
Field upgrades and replacements .....	page 49

---

## 4.1      Overview

This section contains information on commissioning and operating a Rosemount™ 3051S Electronic Remote Sensor (ERS)™ System.

Instructions for performing operation and maintenance functions are given for a handheld Field Communicator. For convenience, Field Communicator Fast Key sequences are labeled “Fast Keys” for each software function below the appropriate headings.

### Example software function

<b>Fast Keys</b>	1, 2, 3, etc.
------------------	---------------

## 4.2      Safety messages

Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operation. Information that raises potential safety issues is indicated with a warning symbol (⚠). Refer to the following safety messages before performing an operation preceded by this symbol.

### **⚠ WARNING**

**Failure to follow these installation guidelines could result in death or serious injury.**

- Make sure only qualified personnel perform the installation.

**Explosions could result in death or serious injury.**

- Do not remove the transmitter covers in explosive atmospheres when the circuit is live.
  - Before connecting a Field Communicator in an explosive atmosphere, make sure the instruments in the loop are installed in accordance with intrinsically safe or non-incendive field wiring practices.
  - Both transmitter covers must be fully engaged to meet flameproof/explosion-proof requirements.
  - Verify the operating atmosphere of the transmitter is consistent with the appropriate hazardous location certifications.
-

## ⚠ WARNING

### **Electrical shock could cause death or serious injury.**

- If the ERS System is installed in a high-voltage environment and a fault or installation error occurs, high voltage may be present on the transmitter leads and terminals.
- Use extreme caution when making contact with the leads and terminals.

### **Process leaks could result in death or serious injury.**

- Install and tighten all four flange bolts before applying pressure.
- Do not attempt to loosen or remove flange bolts while the transmitter is in service.
- Replacement equipment or spare parts not approved by Emerson™ for use as spare parts could reduce the pressure retaining capabilities of the transmitter and may render the instrument dangerous.
- Use only bolts supplied or sold by Emerson as spare parts.

### **Improper assembly of manifolds to traditional flange can damage the device.**

- For the safe assembly of the manifold to the transmitter flange, bolts must break the back plane of the flange web (i.e. bolt hole) but must not contact the sensor module.

### **Static electricity can damage sensitive components.**

- Observe safe handling precautions for static-sensitive components.

## 4.3 Calibration

### 4.3.1 Calibration overview

Calibrating a Rosemount ERS System involves the following tasks:

1. Configure process variables.
  - See “Basic setup” on page 26 for additional details on configuring the following:
    - Units of measure
    - Damping
    - Variable mapping
    - 4 and 20 mA range points
    - Alarm and saturation levels
2. Calibrate the P<sub>HI</sub> and P<sub>LO</sub> pressure sensors.
  - Calibrate each pressure sensor by performing a zero/lower and an upper sensor trim.
3. Differential Pressure zero trim.
  - Perform a zero-trim on the Differential Pressure (DP) reading to establish a zero-based measurement.
4. Calibrate the 4–20 mA output.
  - Adjust the analog output to match the control loop.

### 4.3.2 P<sub>HI</sub> and P<sub>LO</sub> sensor calibration

<b>P<sub>HI</sub> Sensor</b>	3, 4, 3, 1
<b>P<sub>LO</sub> Sensor</b>	3, 4, 4, 1

Each pressure sensor in the Rosemount 3051S ERS System can be individually calibrated. The calibration trim functions for both pressure sensors can be accessed by connecting to the entire ERS System with a Field Communicator or AMS™ Device Manager as shown in [Figure 2-10](#), [Figure 2-11](#), and [Figure 2-12](#). It is recommended to zero trim P<sub>HI</sub> and P<sub>LO</sub> at initial installation to remove any mounting position effects. While not mandatory, full calibration (upper and zero trims) can eliminate any stability error.

#### Zero trim

A zero trim is a single-point offset adjustment. It is useful for compensating for mounting position effects and is most effective when performed after the transmitter is installed in its final mounting position.

---

#### Note

The pressure reading from the sensor must be within three percent of the true zero (atmospheric pressure) in order to calibrate with the zero trim function.

---

A zero trim cannot be performed on an absolute-style pressure sensor. To correct for mounting position effects on an absolute sensor, perform a lower sensor trim. The lower sensor trim function provides an offset correction similar to the zero trim, but it does not require a zero-based input.

To perform a zero trim, follow the procedure below:

1. Vent the P<sub>HI</sub>/P<sub>LO</sub> sensor to atmosphere.
2. Wait for the P<sub>HI</sub>/P<sub>LO</sub> pressure measurement to stabilize.
3. Using AMS Device Manager or a Field Communicator, perform the zero trim function on the P<sub>HI</sub>/P<sub>LO</sub> sensor.

#### Upper and lower sensor trims

Sensor trim is a two-point sensor calibration where lower and upper end-point pressures are applied, and all readings are linearized between the two points. Always perform a lower sensor trim first to establish the correct offset. The upper sensor trim provides a slope correction to the sensor characterization curve based on the lower sensor trim value.

---

#### Note

Use a pressure reference source that is at least three times more accurate than the actual transmitter sensor, and allow the input pressure to stabilize for a minimum of 10 seconds prior to entering any values.

---

To perform a two-point sensor trim on the P<sub>HI</sub> or P<sub>LO</sub> sensor, follow the procedure below:

1. Launch the “Lower Sensor Trim” function using AMS Device Manager or a Field Communicator.
2. Physically apply the desired low pressure value to the P<sub>HI</sub>/P<sub>LO</sub> sensor using a reference pressure device such as a high-accuracy dead-weight tester.
3. Wait for the P<sub>HI</sub>/P<sub>LO</sub> pressure measurement to stabilize.
4. When prompted by AMS Device Manager or the Field Communicator, define the amount of pressure that was applied to the P<sub>HI</sub>/P<sub>LO</sub> sensor.

5. Launch the “Upper Sensor Trim” function using AMS Device Manager or a Field Communicator.
6. Physically apply the desired high-pressure value to the  $P_{HI}/P_{LO}$  sensor using a reference pressure device such as a high-accuracy dead-weight tester.
7. Wait for the  $P_{HI}/P_{LO}$  pressure measurement to stabilize.
8. When prompted by AMS Device Manager or the Field Communicator, define the amount of pressure that was applied to the  $P_{HI}/P_{LO}$  sensor.

### 4.3.3 DP calibration

<b>Fast Keys</b>	3, 4, 2, 1
------------------	------------

The DP calibration function can be used to adjust the calculated DP measurement of the ERS System. For example, a DP zero trim can be performed if the calculated DP of the Rosemount 3051S ERS System has a small offset when the expected output should be “0 DP.”

---

#### Note

Because the DP calculation is dependent on the  $P_{HI}$  and  $P_{LO}$  pressure measurements, all DP calibration functions should be performed after completing the calibration functions on the individual  $P_{HI}$  and  $P_{LO}$  sensors.

Zero trim for PHI and PLO eliminates the DP offset. Performing a zero DP trim will establish a new DP zero point (and eliminate any residual DP zero trims). A zero DP trim should be performed after installing and calibrating the individual pressure sensors and before subjecting the ERS System to the actual process conditions in order to establish a zero-based DP measurement.

---

### DP zero trim

The DP zero trim function establishes a true zero-based DP calculation by taking the current measurement output and forcing that value as the new zero-reference. A DP zero trim should only be performed when the expected output of the ERS System is “0 DP.” For non-zero based trims, a DP Lower Trim should be performed instead.

The DP zero trim function requires both pressure sensors to be wired and connected.

To perform a DP zero trim, follow the procedure below:

1. Ensure that the individual  $P_{HI}$  and  $P_{LO}$  pressure sensors have been calibrated as detailed on [page 45](#) and are wired together as shown in [Figure 2-10](#), [Figure 2-11](#), or [Figure 2-12](#).
2. Launch the “DP Zero Trim” function using AMS Device Manager or a Field Communicator.
3. Apply “0 DP” to the ERS System and wait for the DP measurement to stabilize.
4. Using AMS Device Manager or a Field Communicator, perform the zero trim function on the ERS System.

### Upper and lower DP trims

The DP calculation can be trimmed using a two-point calibration where lower and upper end-point pressures are applied, and all readings are linearized between the two points.

Unlike the DP zero trim function, the upper and lower DP trims can be performed when the ERS System is pressurized under actual process conditions.

Always perform a lower DP trim first to establish the correct offset. The upper DP trim provides a slope correction.

To perform a two-point DP trim, follow the procedure below:

1. Launch the “Lower DP Trim” function using AMS Device Manager or a Field Communicator.
2. Physically apply the desired low DP value to the entire ERS System. This may require the use of two separate reference pressure devices.
3. Wait for the DP value to stabilize.
4. When prompted by AMS Device Manager or the Field Communicator, define the amount of DP that was applied to the ERS System.
5. Launch the “Upper DP Trim” function using AMS Device Manager or a Field Communicator.
6. Physically apply the desired high DP value to the entire ERS System. This may require the use of two separate reference pressure devices.
7. Wait for the DP value to stabilize.
8. When prompted by AMS Device Manager or the Field Communicator, define the amount of DP that was applied to the ERS System.

### 4.3.4 Analog output trim

<b>Fast Keys</b>	3, 4, 1, 1
------------------	------------

The analog output trim command allows for the adjustment of the 4–20 mA output of the ERS System to match a plant or control system standard. This command only impacts the digital-to-analog conversion that drives the analog output and does not affect the actual DP calculation.

To perform an analog output trim, follow the procedure below:

1. Launch the “Analog Trim” function using AMS Device Manager or a Field Communicator.
 

Connect a reference milliamp meter to the 4–20 mA output of the ERS Primary Sensor. Connect the positive lead to the positive terminal and the negative lead to the test terminal.
2. The “Analog Trim” function will then force the analog output of the ERS System to 4 mA. Enter the mA reading from the reference meter when prompted.
3. The mA output of the ERS System will be adjusted based on the value entered in [Step 2](#).
  - a. If the reference meter still does not read “4 mA,” select **NO**, and repeat [Step 2](#).
  - b. If the reference meter reads “4 mA,” select **YES** and continue to [Step 4](#).
4. Repeat [Step 2](#) and [Step 3](#) for the 20 mA output.

### 4.3.5 Recall factory trim

<b>Analog output</b>	3, 4, 1, 2
<b>DP</b>	3, 4, 2, 2
<b>P<sub>HI</sub> sensor</b>	3, 4, 3, 2
<b>P<sub>LO</sub> sensor</b>	3, 4, 4, 2

The recall factory trim command allows the restoration of the as-shipped factory settings of the analog output, DP, and the P<sub>HI</sub> and P<sub>LO</sub> sensor calibrations. This command can be useful for recovering from an inadvertent trim or an inaccurate pressure source.

## 4.4 Functional tests

<b>Fast Keys</b>	3, 5, 5
------------------	---------

The loop test command verifies the output of the ERS System, the integrity of the 4–20 mA loop, and the operations of any recorders or similar devices installed in the loop.

To perform a loop test, follow the procedure below:

1. Connect a reference meter to the Rosemount ERS System by either connecting the meter to the test terminals on the terminal block of the ERS primary sensor or shunting power through the meter at some point in the loop.
2. Launch the loop test function using AMS Device Manager or a Field Communicator.
3. When prompted, select a mA value to have the ERS System output on the 4–20 mA loop.
4. Check the reference meter installed in the test loop to verify and compare the reading to the expected mA output of the ERS System.
  - a. If the values match, the ERS System and the loop are configured and functioning properly.
  - b. If the values do not match, the reference meter may be attached to the wrong loop, there may be a fault in the wiring, the ERS System may require an analog output trim, or the reference meter may be malfunctioning.

### 4.4.1 Find device

<b>Fast Keys</b>	1, 7
------------------	------

The find device function causes the ERS System to flash a unique pattern of characters ([Figure 4-1](#)) on the LCD display, making the system easily identifiable in person. The Find Device function requires a digital display to be installed on the Rosemount 3051S ERS Primary Transmitter.

**Figure 4-1. “Find Device” Pattern**

**0 - 0 - 0 - 0**

To run the find device function, follow the procedure below:

1. Launch the find device function using AMS Device Manager or a Field Communicator.
2. The ERS System will continue to display the pattern shown in [Figure 4-1](#) until the Find Device function is stopped. Note that it may take up to 60 seconds for the ERS display to return to normal operation upon completion of the Find Device function.

## 4.5 Field upgrades and replacements

### 4.5.1 Disassembly considerations

- ⚠ During disassembly, do not remove any instrument covers in explosive atmospheres when the circuit is live as this may result in serious injury or death. Also, be aware of the following:
- ⚠
  - Follow all plant safety rules and procedures.
  - Isolate and vent the process from the transmitter before removing the transmitter from service.
  - Disconnect optional process temperature sensor leads and cable.
  - Remove all other electrical leads and conduit.
  - Detach the process flange by removing the four flange bolts and two alignment screws that secure it.
  - Do not scratch, puncture, or depress the isolating diaphragms.
  - Clean isolating diaphragms with a soft rag and a mild cleaning solution, then rinse with clear water.
  - Whenever the process flange or flange adapters are removed, visually inspect the PTFE O-rings. Emerson recommends reusing O-rings if possible. If the O-rings show any signs of damage, such as nicks or cuts, they should be replaced.

### 4.5.2 Labeling

#### Field device labels

The label on the SuperModule™ reflects the replacement model code for reordering a complete ERS Transmitter, including both the SuperModule assembly and the electronics housing. The Rosemount 300 ERS model code stamped on the electronics housing nameplate can be used to reorder an electronics housing assembly.

### 4.5.3 Remove the terminal block

Electrical connections are located on the terminal block in the compartment labeled “FIELD TERMINALS.”

#### Rosemount 3051S ERS primary (PlantWeb™ housing)


Loosen the two small screws located at the 10 o'clock and 4 o'clock positions, and pull the entire terminal block out.

#### Rosemount 3051S ERS secondary (junction box)

Loosen the two small screws located at the 8 o'clock and 4 o'clock positions, and pull the entire terminal block out. This procedure will expose the SuperModule connector (see [Figure 4-3](#)). Grasp the SuperModule connector and pull upwards.

**Figure 4-2. Terminal Blocks**

**Rosemount 3051S ERS Primary    Rosemount 3051S ERS Secondary**

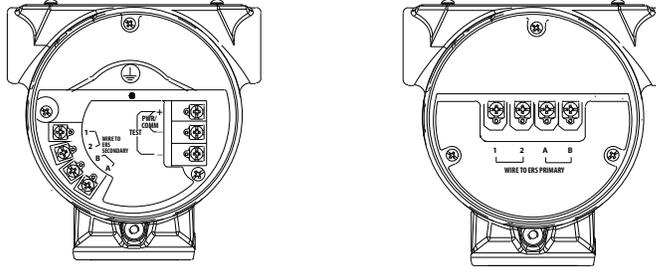


## 4.5.4 Removing the electronics

To remove the electronics feature board from a Rosemount 3051S ERS Primary Transmitter:

1. Remove the housing cover opposite the field terminal side.
2. Remove the LCD display (if applicable). Do this by holding in the two clips and pulling outward. This will provide better access to the two screws located on the electronics feature board.
3. Loosen the two small screws located on the assembly in the 8 o'clock and 2 o'clock positions.
4. Pull out the assembly to expose the SuperModule connector (see [Figure 4-3](#)).
5. Grasp the SuperModule connector and pull upwards (avoid pulling wires). Housing rotation may be required to access locking tabs.

**Figure 4-3. SuperModule Electrical Connector**

**Rosemount 3051S ERS Primary    Rosemount 3051S ERS Secondary**

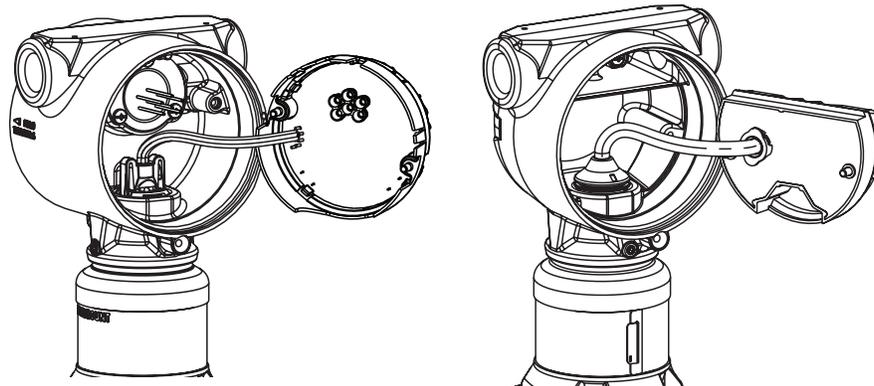


## 4.5.5 Remove the SuperModule from the housing

### Important

To prevent damage to the SuperModule cable, remove the feature board or terminal block assembly with the connector before separating the SuperModule from the housing assembly.

1. Loosen the housing rotation set screw by one full turn with a  $\frac{3}{32}$ -in. hex wrench.
2. Unscrew the housing from the SuperModule.

Figure 4-4. Location of Housing Rotation Set Screw

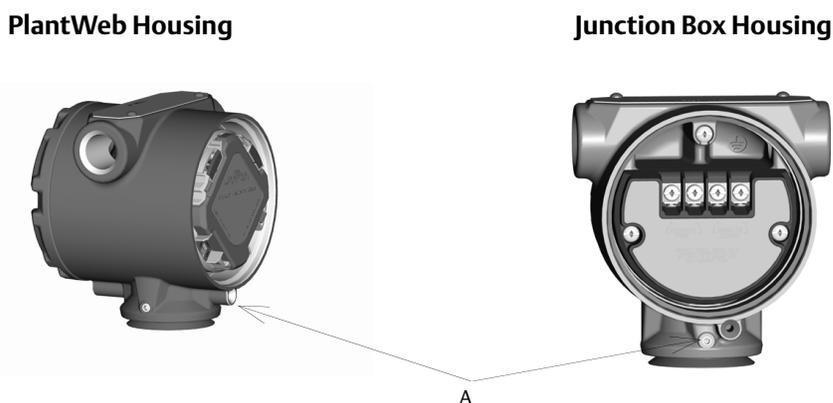

A. Housing rotation set screw ( $\frac{3}{32}$ -in.)

## 4.5.6 Attach the SuperModule to the housing

### Important

The V-Seal must be installed at the bottom of the housing.

1. Apply a light coat of low temperature silicon grease to the SuperModule threads and O-ring.
- ⚠ 2. Thread the housing completely onto the SuperModule. The housing must be no more than one full turn from flush with the SuperModule to comply with explosion-proof requirements.
3. Tighten the housing rotation set screw using  $\frac{3}{32}$ -in. hex wrench.

## 4.5.7 Install electronics assembly

1. Apply a light coat of low temperature silicon grease to the SuperModule connector.
2. Insert the SuperModule connector into the top of the SuperModule.
3. Gently slide the assembly into the housing, making sure the pins from the PlantWeb housing properly engage the receptacles on the assembly.
4. Tighten the captive mounting screws.
- ⚠ 5. Attach the PlantWeb housing cover and tighten so that metal contacts metal to meet explosion-proof requirements.

## 4.5.8 Install the terminal block

### Rosemount 3051S ERS primary (PlantWeb housing)

1. Gently slide the terminal block into the housing, making sure the pins from the PlantWeb housing properly engage the receptacles on the terminal block.
2. Tighten the captive screws on the terminal block.
- △ 3. Attach the PlantWeb housing cover and tighten so that metal contacts metal to meet explosion-proof requirements.

### Rosemount 3051S ERS secondary (junction box)

1. Apply a light coat of low temperature silicon grease to the SuperModule connector.
2. Insert the SuperModule connector into the top of the SuperModule.
3. Push the terminal block into the housing and hold for screw position alignment.
4. Tighten the captive mounting screws.
- △ 5. Attach the Junction box housing cover and tighten so that metal contacts metal to meet explosion-proof requirements.

## 4.5.9 Reassemble the process flange

---

### Note

If the installation uses a manifold, see “Rosemount manifolds” on page 21.

---

- △ 1. Inspect the SuperModule PTFE O-rings. If the O-rings are undamaged, reusing them is recommended. If the O-rings are damaged (if they have nicks or cuts, for example), replace them with new O-rings.

---

### Note

If replacing the O-rings, be careful not to scratch or deface the O-ring grooves or the surface of the isolating diaphragm when removing the damaged O-rings.

---

2. Install the process flange on the SuperModule. To hold the process flange in place, install the two alignment screws to finger tight (screws are not pressure retaining). Do not over-tighten; this will affect module-to-flange alignment.
3. Install the appropriate flange bolts.
  - a. If the installation requires a 1/4–18 NPT connection(s), use four 1.75-in. flange bolts. Go to [Step d](#).
  - b. If the installation requires a 1/2–14 NPT connection(s), use two 2.88-in. process flange/adaptor bolts and two 1.75-in. bolts. Go to [Step c](#).
  - c. Hold the flange adapters and adapter O-rings in place while finger-tightening the bolts. Go to [Step e](#).
  - d. Finger-tighten the bolts.
  - e. Tighten the bolts to the initial torque value using a crossed pattern. See [Table 4-1 on page 53](#) for appropriate torque values.
  - f. Tighten the bolts to the final torque value using a crossed pattern. See [Table 4-1](#) for appropriate torque values. When fully tightened, the bolts should extend through the top of the module housing.

- g. If the installation uses a conventional manifold, then install flange adapters on the process end of the manifold using the 1.75-in. flange bolts supplied with the Rosemount 3051S ERS Sensor.

**Table 4-1. Bolt Installation Torque Values**

Bolt material	Initial torque value	Final torque value
CS-ASTM-A445 Standard	300 in-lb. (34 N-m)	650 in-lb. (73 N-m)
316 SST - Option L4	150 in-lb. (17 N-m)	300 in-lb. (34 N-m)
ASTM-A-193-B7M - Option L5	300 in-lb. (34 N-m)	650 in-lb. (73 N-m)
Alloy K-500 - Option L6	300 in-lb. (34 N-m)	650 in-lb. (73 N-m)
ASTM-A-453-660 - Option L7	150 in-lb. (17 N-m)	300 in-lb. (34 N-m)
ASTM-A-193-B8M - Option L8	150 in-lb. (34 N-m)	300 in-lb. (34 N-m)

4. If replacing the PTFE SuperModule O-rings, re-torque the flange bolts after installation to compensate for cold flow.
5. Install the drain/vent valve.
  - a. Apply sealing tape to the threads on the seat. Starting at the base of the valve with the threaded end pointing toward the installer, apply two clockwise turns of sealing tape.
  - b. Take care to place the opening on the valve so that process fluid will drain toward the ground and away from human contact when the valve is opened.
  - c. Tighten the drain/vent valve to 250 in-lb. (28.25 N-m).



# Section 5 Troubleshooting

---

Overview .....	page 55
Device overview .....	page 55
Measurement quality status .....	page 59

---

## 5.1 Overview

This section contains information for troubleshooting the Rosemount™ 3051S Electronic Remote Sensor (ERS)™ System. Diagnostic messages are communicated via the LCD display or a HART® host.

## 5.2 Device overview

Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operation. Information that raises potential safety issues is indicated with a warning symbol (⚠). Refer to the following safety messages before performing an operation preceded by this symbol.

### 5.2.1 HART host diagnostics

The ERS System provides numerous diagnostic alerts via a HART host, including a Field Communicator and AMS™ Device Manager.

Table 5-1 lists the possible diagnostic alerts that may be shown with the ERS System. The table provides a brief description of each alert and the recommended actions.

Table 5-2 provides summarized maintenance and troubleshooting suggestions for the most common operating problems. If a malfunction is suspected despite the absence of any diagnostic messages on a Field Communicator or host, follow the procedures described here to verify that ERS System and process connections are in good working order.

### 5.2.2 LCD display diagnostics

The optional LCD display on the ERS System can show abbreviated operation, error, and warning messages for troubleshooting. Messages appear according to their priority; normal operating messages appear last. To determine the cause of a message, use a HART host to further interrogate the ERS System. A description of each LCD diagnostic message follows.

#### Error messages

An error indicator message appears on the LCD display to warn of serious problems affecting the operation of the ERS System. The error message is displayed until the error condition is corrected; *ERROR* appears at the bottom of the display.

#### Warning messages

Warning messages appear on the LCD display to alert the user of user-repairable problems with the ERS System, or current operations. Warning messages appear alternately with other information until the warning condition is corrected or the ERS System completes the operation that triggered the warning message.

**Table 5-1. Diagnostic Message Troubleshooting**

LCD display message	Host diagnostic message	Possible problems	Recommended actions
CURR SAT	mA Output Saturated	The primary variable has exceeded the range points defined for the 4–20 mA analog output signal. The analog output is fixed at the high or low saturation point and is not representative of the current process conditions.	Verify the process conditions and modify the Analog Range Values if necessary.
DP ALERT	System DP Alert	The ERS System is measuring a differential pressure value that exceeds the configured upper or lower alert value.	Verify the measured DP is beyond the trip limits. If necessary, modify the trip limits or disable the diagnostic.
FAIL BOARD ERROR	Electronics Error	The electronics feature board in the ERS Primary Unit has malfunctioned.	Replace the electronics feature board.
FAIL P <sub>HI</sub> ERROR	P <sub>HI</sub> Module Failure	The P <sub>HI</sub> sensor module has failed.	Verify the P <sub>HI</sub> Module Temperature is within the operating limits of the sensor. Replace the P <sub>HI</sub> sensor module if necessary.
FAIL P <sub>LO</sub> ERROR	P <sub>LO</sub> Module Failure	The P <sub>LO</sub> sensor module has failed.	Verify the P <sub>LO</sub> Module Temperature is within the operating limits of the sensor. Replace the P <sub>LO</sub> sensor module if necessary.
FAIL T <sub>HI</sub> ERROR	P <sub>HI</sub> Module Failure	The P <sub>HI</sub> sensor module has failed.	Verify the P <sub>HI</sub> Module Temperature is within the operating limits of the sensor. Replace the P <sub>HI</sub> sensor module if necessary.
FAIL T <sub>LO</sub> ERROR	P <sub>LO</sub> Module Failure	The P <sub>LO</sub> sensor module has failed.	Verify the P <sub>LO</sub> Module Temperature is within the operating limits of the sensor. Replace the P <sub>LO</sub> sensor module if necessary.
P <sub>HI</sub> ALERT	P <sub>HI</sub> Pressure Alert	The P <sub>HI</sub> sensor module has detected a pressure value that exceeds the configured upper or lower alert value.	Verify the measured P <sub>HI</sub> Pressure is beyond the trip limits. If necessary, modify the trip limits or disable the diagnostic.
P <sub>HI</sub> COMM ERROR	P <sub>HI</sub> Module Communication Error	Communication between the P-Hi sensor module and the electronics feature board has been lost.	Verify the wiring between the P <sub>HI</sub> module and the electronics feature board and cycle power to the entire ERS System. Replace the P <sub>HI</sub> module and/or electronics feature board if necessary.
P <sub>HI</sub> LIMIT	P <sub>HI</sub> Pressure Out of Limits	The P <sub>HI</sub> Pressure reading has exceeded the sensor's maximum measurement range.	Check the process for potential overpressure conditions.
P <sub>LO</sub> ALERT	P <sub>LO</sub> Pressure Alert	The P <sub>LO</sub> sensor module has detected a pressure value that exceeds the configured upper or lower alert value.	Verify the measured P <sub>LO</sub> Pressure is beyond the trip limits. If necessary, modify the trip limits or disable the diagnostic.
P <sub>LO</sub> COMM ERROR	P <sub>LO</sub> Module Communication Error	Communication between the P <sub>LO</sub> sensor module and the electronics feature board has been lost.	Verify the wiring between the P <sub>LO</sub> module and the electronics feature board and cycle power to the entire ERS System. Replace the P <sub>LO</sub> module and/or electronics feature board if necessary.
P <sub>LO</sub> LIMIT	P <sub>LO</sub> Pressure Out of Limits	The P <sub>LO</sub> Pressure reading has exceeded the sensor's maximum measurement range.	Check the process for potential overpressure conditions.
LOOP TEST	mA Output Fixed	The analog output of the ERS System is in "fixed current mode" and is not representative of the HART PV.	Using a Field Communicator or AMS Device Manager, disable "Loop Current Mode."
SNSR COMM ERROR	Sensor Module Missing	A sensor module is missing or not detected.	Verify that both sensors are connected and properly wired.
SNSR CONFIG ERROR	No P <sub>HI</sub> Module Configuration Present	Neither of the modules in the ERS System are configured as the P <sub>HI</sub> sensor.	Verify that both sensors are connected and properly wired. Change the pressure designation of one of the two modules to "P <sub>HI</sub> " using a Field Communicator or AMS Device Manager.

**Table 5-1. Diagnostic Message Troubleshooting**

LCD display message	Host diagnostic message	Possible problems	Recommended actions
SNSR CONFIG ERROR	No P <sub>LO</sub> Module Configuration Present	Neither of the modules in the ERS System are configured as the P <sub>LO</sub> sensor.	Verify that both sensors are connected and properly wired. Change the pressure designation of one of the two modules to “P <sub>LO</sub> ” using a Field Communicator or AMS Device Manager.
SNSR CONFIG ERROR	Unknown Sensor Module Configuration	The configuration of one or both sensor modules is unknown.	Verify that both sensors are connected and properly wired. Using a Field Communicator or AMS Device Manager, assign one of the modules as the “P <sub>HI</sub> ” sensor and the other module as the “P <sub>LO</sub> ” sensor.
SNSR INCOMP ERROR	Sensor Module Incompatibility	The ERS System contains two sensor modules that will not work together.	The ERS System cannot contain one gage and one absolute sensor. Replace one of the two modules so that both sensors are either gage or absolute.
STUCK KEY	Stuck “Span” Button	The “Span” button on the electronics feature board is stuck.	Locate the ERS Primary Unit, remove the front housing cover (considering hazardous location requirements), and gently pry the span button.
STUCK KEY	Stuck “Zero” Button	The “Zero” button on the electronics feature board is stuck.	Locate the ERS Primary Unit, remove the front housing cover (considering hazardous location requirements), and gently pry the zero button.
T <sub>HI</sub> ALERT	P <sub>HI</sub> Temperature Alert	The P <sub>HI</sub> sensor module has detected a temperature value that exceeds the configured upper or lower alert value.	Verify the measured P <sub>HI</sub> temperature is beyond the trip limits. If necessary, modify the trip limits or disable the diagnostic.
T <sub>HI</sub> LIMIT	P <sub>HI</sub> Module Temp. Out of Limits	The internal temperature sensor on the P <sub>HI</sub> Pressure module has exceeded the safe operating range.	Verify the ambient conditions do not exceed the temperature limits of the pressure module (–40 to 185 °F/–40 to 85 °C).
T <sub>LO</sub> ALERT	P <sub>LO</sub> Temperature Alert	The P <sub>LO</sub> sensor module has detected a temperature value that exceeds the configured upper or lower alert value.	Verify the measured P <sub>LO</sub> temperature is beyond the trip limits. If necessary, modify the trip limits or disable the diagnostic.
T <sub>LO</sub> LIMIT	P <sub>LO</sub> Module Temp. Out of Limits	The internal temperature sensor on the P <sub>LO</sub> Pressure module has exceeded the safe operating range.	Verify the ambient conditions do not exceed the temperature limits of the pressure module (–40 to 185 °F/–40 to 85 °C).
XMTR INFO	Non-Volatile Memory Warning	ERS System information data is incomplete. ERS System operation will not be affected.	Replace the electronics feature board at the next maintenance shutdown.
XMTR INFO ERROR	Non-Volatile Memory Error	Non-volatile data of the device is corrupt.	Replace the electronics feature board.
(LCD is blank)	LCD Update Error	The electronics circuit board on the ERS Primary Unit has lost communication with the LCD display.	Examine the LCD Connector and reinstall and re-power the LCD display. If the problem persists, first replace the LCD display then replace the feature board electronics if necessary.
NO UPDATE	LCD Update Error	The LCD display on the ERS Primary Unit is not updating	Make sure the correct LCD display has been installed (refer to <a href="#">Spare parts</a> for LCD display part number).


**Table 5-2. Rosemount ERS System Troubleshooting**

Symptom	Corrective actions
The mA output of the Rosemount ERS System is zero	<ul style="list-style-type: none"> <li>• Verify power is applied to “+” and “-” PWR/COMM terminals on the ERS primary unit</li> <li>• Check power wires for reversed polarity</li> <li>• Verify terminal voltage is 16 to 42.4 Vdc</li> <li>• Check for open diode across test terminals on the ERS primary unit.</li> </ul>
The Rosemount ERS System is not communicating with a Field Communicator or AMS Device Manager	<ul style="list-style-type: none"> <li>• Verify the output is between 4 and 20 mA or saturation levels</li> <li>• Verify clean DC Power to transmitter (Max AC noise 0.2 volts peak to peak)</li> <li>• Check loop resistance, 250–1321 <math>\Omega</math>                      Loop Resistance = (Power supply voltage – transmitter voltage)/loop current</li> <li>• Check if ERS System is at an alternate HART address</li> </ul>
The mA output of Rosemount ERS System is low or high	<ul style="list-style-type: none"> <li>• Verify applied process conditions</li> <li>• Verify the desired process variable is mapped to the HART PV</li> <li>• Verify 4 and 20 mA range points</li> <li>• Verify output is not in alarm or saturation condition</li> <li>• An analog output trim or sensor trim may be required</li> </ul>
The Rosemount ERS System is not responding to changes in measured process variables	<ul style="list-style-type: none"> <li>• Check to ensure isolation valves are not closed</li> <li>• Check test equipment</li> <li>• Check impulse piping or manifold for blockage</li> <li>• Verify primary variable measurement is between the 4 and 20 mA set points</li> <li>• Verify output is not in alarm or saturation condition</li> <li>• Verify ERS System is not in Loop Test, Multidrop, Test Calculation, or Fixed Variable mode</li> </ul>
Digital Variable output is too low or high	<ul style="list-style-type: none"> <li>• Check test equipment (verify accuracy)</li> <li>• Check impulse piping for blockage or low fill in wet leg</li> <li>• Verify sensor trim on each pressure sensor</li> <li>• Verify measured variables are within all sensor limits</li> </ul>
Digital Variable output is erratic	<ul style="list-style-type: none"> <li>• Verify power source to ERS System has adequate voltage and current</li> <li>• Check for external electrical interference</li> <li>• Verify ERS System is properly grounded</li> <li>• Verify shield for twisted pairs only grounded at both ends</li> </ul>
The Rosemount ERS System output is normal, but the LCD display is off and diagnostics indicate an LCD display problem	<ul style="list-style-type: none"> <li>• Verify LCD display is installed correctly</li> <li>• Replace LCD display</li> </ul>
The DP calculation is negative	<ul style="list-style-type: none"> <li>• The AO is saturated low, verify that DP variable is a possible value – if negative, P<sub>HI</sub> and P<sub>LO</sub> may be reversed.</li> </ul>

## 5.3 Measurement quality status

The Rosemount ERS System is compliant with the HART Revision 6 Standard. One of the most noticeable enhancements available with the HART Revision 6 standard is that each variable has a measurement quality status. These statuses can be viewed in AMS Device Manager, with a Field Communicator, or with any HART Revision 6 compatible host system.

Figure 5-1. Measurement Quality Status

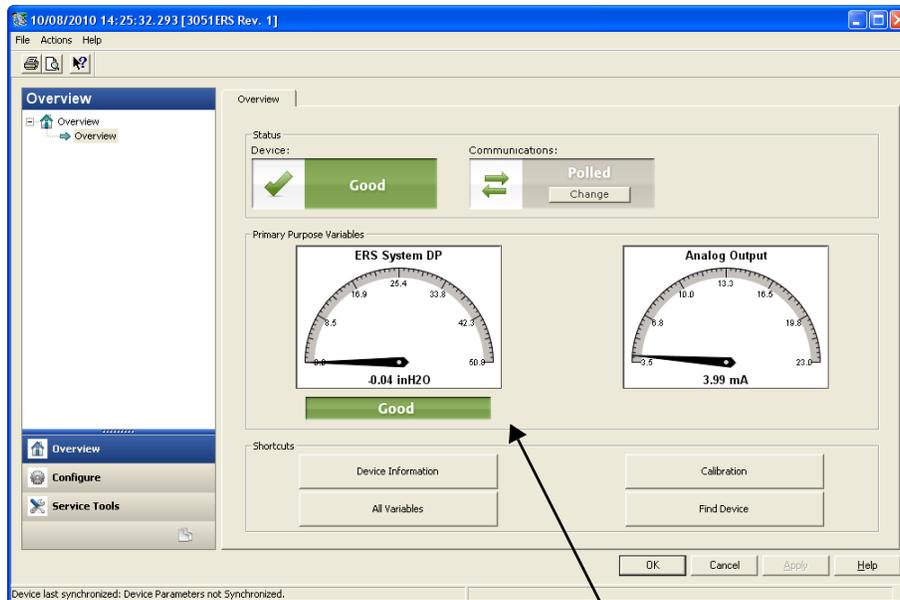

A. Quality status on DP measurement status

### Possible measurement quality statuses

- Good: Displayed during normal device operation.
- Poor: Indicates the accuracy of the measured variable has been compromised. For example, the P-Hi Module Temperature has failed and is no longer compensating the P-Hi Pressure measurement.
- Bad: Indicates the variable has failed. For example, the P-Hi Pressure sensor has failed.

## 5.4 Service support

To expedite the return process outside of the United States, contact the nearest Rosemount representative.

Within the United States, call the Emerson Instrument and Valves Response Center using the 1-800-654-RSMT (7768) toll-free number. This center, available 24 hours a day, will assist you with any needed information or materials.

The center will ask for product model and serial numbers, and will provide a Return Material Authorization (RMA) number. The center will also ask for the process material to which the product was last exposed.

**⚠ CAUTION**

Individuals who handle products exposed to a hazardous substance can avoid injury if they are informed of and understand the hazard. If the product being returned was exposed to a hazardous substance as defined by OSHA, a copy of the required Material Safety Data Sheet (MSDS) for each hazardous substance identified must be included with the returned goods.

---

Emerson Instrument and Valves Response Center representatives will explain the additional information and procedures necessary to return goods exposed to hazardous substances.

---

# Section 6 Safety Instrumented Systems Requirements

---

Safety Instrumented Systems (SIS) Certification ..... page 61

---

## 6.1 Safety Instrumented Systems (SIS) Certification

The Rosemount™ 3051S Electronic Remote Sensor (ERS)™ System is a two wire, 4–20 mA architecture that calculates differential pressure electronically using two pressure sensors that are linked together with a digital cable. The transmitter system uses standard, well-proven sensor boards in combination with a microprocessor board that performs diagnostics. It is programmed to send its output to a specified failure state, either high or low, when an internal failure is detected. It is assumed that the 4–20 mA output is used as a primary safety variable. No other output variants are covered by this report; Type B.

- SIL 2 for random integrity @ HFT = 0
- SIL 3 for random integrity @ HFT = 1
- SIL 3 for systematic integrity

### 6.1.1 Rosemount ERS Systems safety certified identification

All Rosemount 3051S Transmitters must be identified as safety certified before installing into SIS systems.

To identify a safety certified Rosemount ERS System, verify the following information:

- Model string should contain 3051SAM, 3051SAL\_P, or 3051SAL\_S
- Software revision should be 57 or higher
- Model string should contain option code QT
- Maximum ERS cable length for SIS certification is 200 feet (60.96 m). Cable must also meet the specifications from “[Rosemount 3051S ERS System cable specifications](#)” on page 16.

### 6.1.2 Installation in SIS applications

Installations are to be performed by qualified personnel. No special installation is required in addition to the standard installation practices outlined in “[Connect wiring and power up](#)” on page 15. Always ensure a proper seal by installing the electronics housing cover(s) so that metal contacts metal.

Environmental and operational limits are available in [Appendix A: Specifications and Reference Data](#).

The loop should be designed so the terminal voltage does not drop below 16 Vdc when the transmitter output is set to 23 mA. Refer to [A.2.4: HART specifications](#) to verify limitation.

Position the security switch to the (  ) position to prevent accidental or deliberate change of configuration data during normal operation.

### 6.1.3 Configuring in SIS applications

Use any HART®-capable configuration tool to communicate with and verify configuration of the Rosemount ERS System.

**Note**

Transmitter output is not safety-rated during the following; configuration changes, multidrop, and loop test. Alternative means should be used to ensure process safety during transmitter configuration and maintenance activities.

### Damping


User-selected damping will affect the transmitters ability to respond to changes in the applied process. The damping value + response time must not exceed the loop requirements.

Reference “Damping” on page 27 to change damping value.

### Alarm and saturation levels

Distributed Control System (DCS) or safety logic solver should be configured to match transmitter configuration. **Figure 6-1** identifies the three alarm levels available and their operation values.

**Figure 6-1. Alarm Levels**

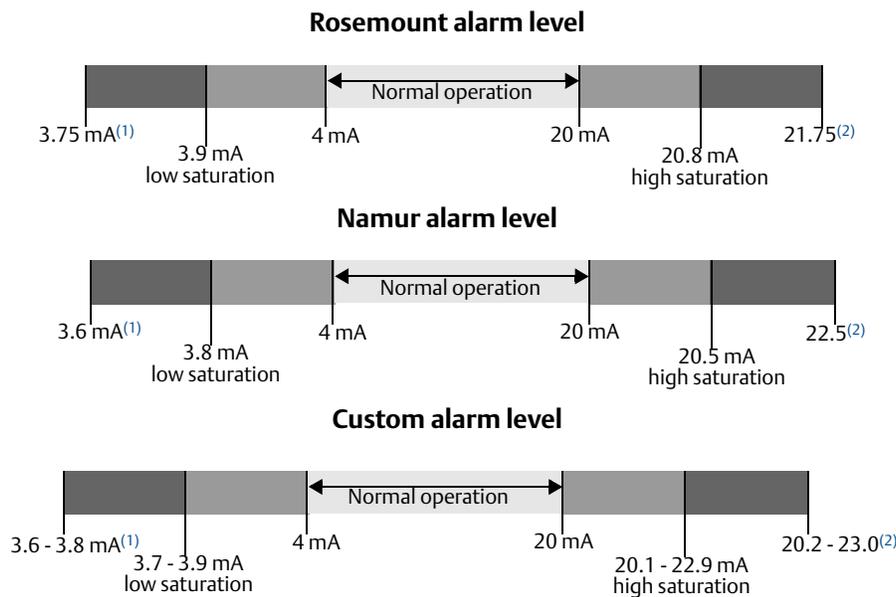

1. Transmitter Failure, hardware or software alarm in LO position.  
2. Transmitter Failure, hardware or software alarm in HI position.

## 6.1.4 Rosemount 3051S SIS operation and maintenance

### Proof test

The following proof tests are recommended.

In the event an error is found in the safety and functionality, proof test results and corrective actions taken can be documented at [Emerson.com/Rosemount/Safety-Web-Apps/Report](http://Emerson.com/Rosemount/Safety-Web-Apps/Report).

All proof test procedures must be carried out by qualified personnel.

Use Fast Keys referenced in “Calibration” on page 44 to perform a Loop Test, Analog Output Trim, or Sensor Trim. Security switch should be in the (  ) position during proof test execution and repositioned in the (  ) position after execution.

### Comprehensive proof test

The comprehensive proof test consists of performing the same steps as the simple suggested proof test and a two point calibration of the pressure sensor. Reference the FMEDA Report for percent of possible DU failures in the device.

FMEDA report can be found at [Emerson.com/Rosemount/Safety](http://Emerson.com/Rosemount/Safety).

Required tools: Field Communicator and pressure calibration equipment.

1. Bypass the safety function and take appropriate action to avoid a false trip.
2. Use HART communications to retrieve any diagnostics and take appropriate action.
3. Send a HART command to the transmitter to go to the high alarm current output and verify that the analog current reaches that value.<sup>(1)</sup>
4. Send a HART command to the transmitter to go to the low alarm current output and verify that the analog current reaches that value.<sup>(2)</sup>
5. Perform complete system calibration (zero and upper trims for P<sub>HI</sub> and P<sub>LO</sub>, zero trim for DP)
6. Remove the bypass and otherwise restore normal operation.
7. Place the Security switch in the (  ) position.

---

#### Note

- The user determines the proof test requirements for impulse piping.
  - Automatic diagnostics are defined for the corrected % DU: The tests performed internally by the device during runtime without requiring enabling or programming by the user.
- 

## 6.1.5 Inspection

### Visual inspection

Not required

### Special tools

Not required

1. This tests for compliance voltage problems such as a low power supply voltage or increased wiring resistance. This also tests for other possible failures.  
2. This tests for possible quiescent current related failures.

## Product repair

The Rosemount 3051S ERS is repairable by major component replacement.

All failures detected by the transmitter diagnostics or by the proof-test must be reported. Feedback can be submitted electronically at [Emerson.com/Rosemount/Safety-Web-Apps/Report](http://Emerson.com/Rosemount/Safety-Web-Apps/Report).

All product repair and part replacement should be performed by qualified personnel.

## Rosemount 3051S ERS SIS reference

The Rosemount 3051S ERS must be operated in accordance to the functional and performance specifications provided in [Appendix A: Specifications and Reference Data](#).

## Failure rate data

The FMEDA report includes failure rates. The report is available at [Emerson.com/Rosemount/Safety](http://Emerson.com/Rosemount/Safety).

## Failure values

- Safety deviation (% of analog span shift that defines a dangerous failure): 2%
- System response time: see “[Dynamic performance](#)” on page 66
- Self-diagnostics test interval: at least once every 60 minutes

## Product life

50 years - based on worst case component wear-out mechanisms (not based on wear-out of process wetted materials)

Report any safety related product information at [Emerson.com/Rosemount/Safety-Products/Equipment-lists](http://Emerson.com/Rosemount/Safety-Products/Equipment-lists).

# Appendix A Specifications and Reference Data

Performance specifications .....	page 65
Functional specifications .....	page 68
Physical specifications .....	page 71
Dimensional drawings .....	page 73
Ordering information .....	page 82
Spare parts .....	page 109

## A.1 Performance specifications

The Rosemount 3051S Electronic Remote Sensor (ERS)<sup>™</sup> System offer three performance class options; Classic, Ultra, and Enhanced ERS System Performance. The Classic and Ultra performance classes are suited to lower static pressure and stable temperature conditions. The Enhanced ERS System Performance class provides better performance across temperature (–40 to 185 °F) with improved performance at higher static pressure.

### A.1.1 Conformance to specification ( $\pm 3\sigma$ )

Technology leadership, advanced manufacturing techniques, and statistical process control ensure specification conformance to at least  $\pm 3\sigma$ .

### A.1.2 Reference accuracy

For zero-based spans, reference conditions, silicone oil fill, glass-filled PTFE O-rings, SST materials, coplanar flange or 1/2–14 NPT process connections, digital trim values set to equal range points. Stated reference accuracy equations include terminal based linearity, hysteresis, and repeatability.

**Table A-1. DP Total Accuracy for Enhanced ERS System Performance<sup>(1)</sup>**

Sensor type	3051SAM__G2, 3051SAL__G2 250 inH <sub>2</sub> O (622,1 mbar)	3051SAM__G3, 3051SAL__G3 1000 inH <sub>2</sub> O (2488,4 mbar)	3051SAM__T1, 3051SAL__T1 30 psi (2,1 bar)	3051SAM__T2, 3051SAL__T2 150 psi (10,34 bar)	3051SAM__G4, 3051SAL__G4 300 psi (20,7 bar)	3051SAM__T3, 3051SAL__T3 800 psi (41,4 bar)
Rosemount 3051SAM <sup>(2)</sup>	0.2 inH <sub>2</sub> O (0,5 mbar)	0.6 inH <sub>2</sub> O (1,4 mbar)	0.9 inH <sub>2</sub> O (2,2 mbar)	1.5 inH <sub>2</sub> O (4,0 mbar)	6.2 inH <sub>2</sub> O (15 mbar)	7.8 inH <sub>2</sub> O (19 mbar)
Rosemount 3051SAL with direct mount seal types and sizes below <sup>(3)</sup> : <ul style="list-style-type: none"> <li>• FF, FC, PF ≥ 2-in./DN50</li> <li>• EF ≥ 3-in./DN80</li> <li>• All RT, RF, RC, SS</li> <li>• SC ≥ 2.5-in.</li> </ul>	2.2 inH <sub>2</sub> O (5,5 mbar)	2.3 inH <sub>2</sub> O (6,0 mbar)	3.0 inH <sub>2</sub> O (7,5 mbar)	3.2 inH <sub>2</sub> O (8,0 mbar)	6.5 inH <sub>2</sub> O (16 mbar)	8.3 inH <sub>2</sub> O (21 mbar)
Rosemount 3051SAL with other seal types and sizes	Consult Instrument Toolkit <sup>™</sup> for performance.					

- Includes full ambient and temperature range from –40 to 85 °C (–40 to 185 °F) requires two transmitters with identical sensor ranges. **Specification are only applicable for spans down to 10:1.**
- For Rosemount 3051SAM assembled to a Rosemount 1199 Diaphragm Seal, use Rosemount 3051SAL specification for identical seal types and sizes.
- For Rosemount 3051SAL with direct mount seals, specification applies to process temperatures from -45 to 205 °C and excludes diaphragm option code SC, 6-mil diaphragm thickness.

**Table A-2. DP Reference Accuracy of ERS System<sup>(1)</sup>**

<b>Two coplanar gage sensors (Rosemount 3051SAM__G)</b>		
	Ultra	Classic
Range 2-4	±0.035% of DP span	±0.049% of DP span
Range 5	±0.071% of DP span	±0.092% of DP span
<b>Two coplanar absolute sensors (Rosemount 3051SAM__A)</b>		
	Ultra	Classic
Ranges 1-4	±0.035% of DP span	±0.049% of DP span
<b>Two in-line gage sensors (Rosemount 3051SAM__T) Two in-line absolute sensors (Rosemount 3051SAM__E)</b>		
	Ultra	Classic
Ranges 1-4	±0.035% of DP span	±0.049% of DP span
<b>Two liquid level sensors (Rosemount 3051SAL)</b>		
	Ultra	Classic
Ranges 1-5	±0.092% of DP span	±0.092% of DP span

1. DP Accuracy specifications for the Rosemount 3051S ERS System assume that the configuration contains two sensors with identical ranges that are calibrated 0–URL, and that the DP Span = 10% of each sensor’s URL.

**Long term stability<sup>(1)</sup>**

<b>Gage/absolute “Ultra/Enhanced” sensor</b>	<b>Gage/absolute “Classic” sensor</b>
±0.21% of URL for 15 years; for ±50 °F (28 °C) temperature changes, up to 1000 psi (68,9 bar) line pressure	±0.28% of URL for 15 years; for ±50 °F (28 °C) temperature changes, up to 1000 psi (68,9 bar) line pressure

1. Long term stability specification is for each gage/absolute pressure sensor of the ERS System and is not reflective of the DP calculation.

**Warranty<sup>(1)</sup>**

<b>Gage/absolute “Ultra/Enhanced” sensor<sup>(2)</sup></b>	<b>Gage/absolute “Classic” sensor<sup>(3)</sup></b>
15-year limited warranty	1-year limited warranty

- Warranty details can be found in Emerson™ Terms and Conditions of Sale, Document 63445, Rev G (10/06).
- Rosemount Ultra and Enhanced Sensors in an ERS configuration have a limited warranty of fifteen (15) years from date of shipment. All other provisions of Emerson standard limited warranty remain the same.
- Goods are warranted for twelve (12) months from the date of initial installation or eighteen (18) months from the date of shipment by seller, whichever period expires first.

**Dynamic performance<sup>(1)</sup>**

- Total Time Response at 75 °F (24 °C), Includes Dead Time: 360 ms
- Dead Time (nominal): 220 ms
- Update Rate: 11 updates per second

1. Consult Instrument Toolkit for Rosemount 3051S ERS configurations that include remote seals.

**Ambient temperature effects per 50 °F (28 °C)<sup>(1)</sup>**

<b>Coplanar gage sensor (Rosemount 3051SAM__G)</b>		
	Ultra	Classic
Range 2-5	±(0.009% URL + 0.025% Span) from 1:1 to 10:1 ±(0.018% URL + 0.05% Span) from >10:1 to 200:1	±(0.0125% URL + 0.0625% Span) from 1:1 to 5:1 ±(0.025% URL + 0.125% Span) from >5:1 to 100:1
<b>Coplanar absolute sensor (Rosemount 3051SAM__A)</b>		
	Ultra	Classic
Ranges 1-4	±(0.0125% URL + 0.0625% Span) from 1:1 to 5:1 ±(0.025% URL + 0.125% Span) from >5:1 to 200:1	±(0.0125% URL + 0.0625% Span) from 1:1 to 5:1 ±(0.025% URL + 0.125% Span) from >5:1 to 100:1
<b>In-Line gage sensor (Rosemount 3051SAM__T) In-Line absolute sensor (Rosemount 3051SAM__E)</b>		
	Ultra	Classic
Ranges 2-4	±(0.009% URL + 0.025% Span) from 1:1 to 10:1 ±(0.018% URL + 0.08% Span) from >10:1 to 200:1	±(0.0125% URL + 0.0625% Span) from 1:1 to 5:1 ±(0.025% URL + 0.125% Span) from >5:1 to 100:1
Ranges 5	±(0.05% URL + 0.075% Span) from 1:1 to 10:1	±(0.05% URL + 0.075% Span) from 1:1 to 10:1
Ranges 1	±(0.0125% URL + 0.0625% Span) from 1:1 to 5:1 ±(0.025% URL + 0.125% Span) from >5:1 to 200:1	±(0.0125% URL + 0.0625% Span) from 1:1 to 5:1 ±(0.025% URL + 0.125% Span) from >5:1 to 100:1
<b>Liquid level sensor (Rosemount 3051SAL)</b>		
	Ultra	Classic
Ranges 1-5	Consult Instrument Toolkit	Consult Instrument Toolkit

1. Ambient Temperature Effects specifications are for each gage/absolute pressure sensor of the ERS System and are not reflective of the DP calculation.

**Mounting position effects<sup>(1)</sup>**

<b>Coplanar gage sensor (Rosemount 3051SAM__G)</b>
Zero shifts up to ±1.25 inH <sub>2</sub> O (3,11 mbar), which can be zeroed Span: no effect
<b>Coplanar absolute sensor (Rosemount 3051SAM__A)</b>
Zero shifts up to ±2.5 inH <sub>2</sub> O (6,22 mbar), which can be zeroed Span: no effect
<b>In-Line gage sensor (Rosemount 3051SAM__T) In-Line absolute sensor (Rosemount 3051SAM__E)</b>
Zero shifts up to ±2.5 inH <sub>2</sub> O (6,22 mbar), which can be zeroed Span: no effect
<b>Liquid level sensor (Rosemount 3051SAL)</b>
With remote seal diaphragm in vertical plane, zero shifts of up to ±1 inH <sub>2</sub> O (2,5 mbar), which can be zeroed With remote seal diaphragm in horizontal plane, zero shifts of up to ±5 inH <sub>2</sub> O (12,5 mbar), which can be zeroed Span: no effect

1. Mounting position effects specifications are for each gage/absolute pressure sensor of the ERS System and are not reflective of the DP calculation.

**Vibration effect<sup>(1)</sup>**

Less than ±0.1% of URL when tested per the requirements of IEC60770-1 field or pipeline with high vibration level (10–60 Hz 0.21 mm displacement peak amplitude/60–2000 Hz 3g).

For housing style codes 1J, 1K, 1L, 2J, and 2M: Less than ±0.1% of URL when tested per the requirements of IEC60770-1 field with general application or pipeline with low vibration level (10–60 Hz 0.15 mm displacement peak amplitude/60–500 Hz 2g).

1. Vibration effect specifications are for each gage/absolute pressure sensor of the ERS System and are not reflective of the DP calculation.

**Transient protection**

Tested in accordance with IEEE C62.41.2-2002, Location Category B

- 6 kV crest (0.5 μs–100 kHz)
- 3 kA crest (8 x 20 microseconds)
- 6 kV crest (1.2 x 50 microseconds)

## A.2 Functional specifications

### A.2.1 Range and sensor limits

<b>Coplanar gage sensor (Rosemount 3051SAM__G, Rosemount 3051SAL__G)</b>		
	Lower range limit (LRL) <sup>(1)</sup>	Upper range limit (URL)
Range 2	-250 inH <sub>2</sub> O (-623 mbar)	250 inH <sub>2</sub> O (623 mbar)
Range 3	-393 inH <sub>2</sub> O (-979 mbar)	1000 in.inH <sub>2</sub> O (2,49 bar)
Range 4	-14.2 psig (-979 mbar)	300 psig (20,7 bar)
Range 5	-14.2 psig (-979 mbar)	2000 psig (137,9 bar)
<b>Coplanar absolute sensor (Rosemount 3051SAM__A, Rosemount 3051SAL__A)</b>		
	Lower range limit (LRL)	Upper range limit (URL)
Range 1	0 psia (0 bar)	30 psia (2,07 bar)
Range 2	0 psia (0 bar)	150 psia (10,34 bar)
Range 3	0 psia (0 bar)	800 psia (55,16 bar)
Range 4	0 psia (0 bar)	4000 psia (275,8 bar)
<b>In-Line gage sensor (Rosemount 3051SAM__T, Rosemount 3051SAL__T)</b>		
	Lower range limit (LRL) <sup>(1)</sup>	Upper range limit (URL)
Range 1	-14.7 psig (-1 bar)	30 psig (2,07 bar)
Range 2	-14.7 psig (-1 bar)	150 psig (10,34 bar)
Range 3	-14.7 psig (-1 bar)	800 psig (55,16 bar)
Range 4	-14.7 psig (-1 bar)	4000 psig (275,8 bar)
Range 5	-14.7 psig (-1 bar)	10000 psig (689,5 bar)
<b>In-Line absolute sensor (Rosemount 3051SAM__E, Rosemount 3051SAL__E)</b>		
	Lower range limit (LRL)	Upper range limit (URL)
Range 1	0 psia (0 bar)	30 psia (2,07 bar)
Range 2	0 psia (0 bar)	150 psia (10,34 bar)
Range 3	0 psia (0 bar)	800 psia (55,16 bar)
Range 4	0 psia (0 bar)	4000 psia (275,8 bar)
Range 5	0 psia (0 bar)	10000 psia (689,5 bar)

1. Assumes atmospheric pressure of 14.7 psig (1 bar).

### A.2.2 Minimum span limits

Table A-3. Minimum Calibrated Span for Each Sensor

The values shown below are the minimum calibrated spans for each pressure sensor range.

<b>Coplanar gage sensor (Rosemount 3051SAM__G, Rosemount 3051SAL__G<sup>(1)</sup>)</b>		
	Ultra	Classic
Range 2	1.3 inH <sub>2</sub> O (3,11 mbar)	2.5 inH <sub>2</sub> O (6,23 mbar)
Range 3	5.0 inH <sub>2</sub> O (12,4 mbar)	10.0 inH <sub>2</sub> O (24,9 mbar)
Range 4	1.5 psig (103,4 mbar)	3.0 psig (206,8 mbar)
Range 5	10.0 psig (689,5 mbar)	20.0 psig (1,38 bar)
<b>Coplanar absolute sensor (Rosemount 3051SAM__A, Rosemount 3051SAL__A<sup>(1)</sup>)</b>		
	Ultra	Classic
Range 1	0.3 psia (20,7 mbar)	0.3 psia (20,7 mbar)
Range 2	0.75 psia (51,7 mbar)	1.5 psia (103,4 mbar)
Range 3	4 psia (275,8 mbar)	8 psia (0,55 bar)
Range 4	20 psia (275,8 mbar)	40 psia (2,76 bar)
<b>In-Line gage sensor (Rosemount 3051SAM__T, Rosemount 3051SAL__T<sup>(1)</sup>)</b>		
	Ultra	Classic
Range 1	0.3 psig (20,7 mbar)	0.3 psig (20,7 mbar)
Range 2	0.75 psig (51,7 mbar)	1.5 psig (103,4 mbar)
Range 3	4 psig (275,8 mbar)	8 psig (0,55 bar)
Range 4	20 psig (1,38 bar)	40 psig (2,76 bar)
Range 5	1000 psig (68,9 bar)	2000 psig (137,9 bar)
<b>In-Line absolute sensor (Rosemount 3051SAM__E, Rosemount 3051SAL__E<sup>(1)</sup>)</b>		
	Ultra	Classic
Range 1	0.3 psia (20,7 mbar)	0.3 psia (20,7 mbar)
Range 2	0.75 psia (51,7 mbar)	1.5 psia (103,4 mbar)
Range 3	4 psia (275,8 mbar)	8 psia (0,55 bar)
Range 4	20 psia (275,8 mbar)	40 psia (2,76 bar)
Range 5	1000 psia (68,9 bar)	2000 psia (137,9 bar)

1. Use "Classic" specification regardless of specified performance class.

### DP span considerations

Consult with your Emerson Sales Representative or Instrument Toolkit when considering a Rosemount 3051S ERS System for use on applications beyond 100:1 rangedown (operating pressure/DP span).

### A.2.3 Service

Liquid, gas, and vapor applications

### A.2.4 HART specifications

#### Zero and span adjustment

Zero and span values can be set anywhere within the range. Span must be greater than or equal to the minimum span.

#### Output

Two-wire 4–20 mA is user-selectable for linear output. Digital process variable superimposed on 4–20 mA signal, available to any host that conforms to HART protocol.


#### Power supply

External power supply required (16–42.4 Vdc with no load)

#### Load limitations

Maximum loop resistance is determined by the voltage level of the external power supply:

- If supply voltage  $\leq 16.74$  Vdc, maximum loop resistance =  $277.8 * (\text{power supply voltage} - 16.0)$
- If supply voltage  $> 16.74$  Vdc, maximum loop resistance =  $3.5 * (\text{power supply voltage} - 12.0)$

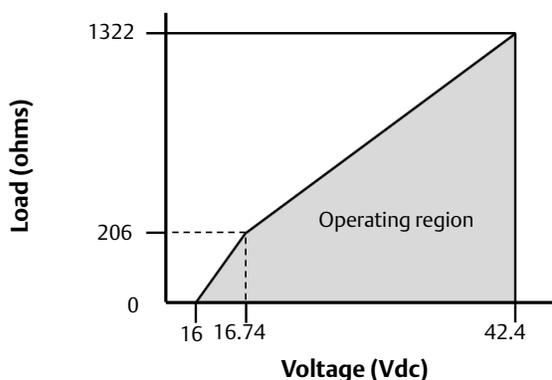

#### Overpressure limits<sup>(1)</sup>

Rosemount 3051S ERS Sensor Modules can withstand the following limits without damage

	Coplanar gage sensor (Rosemount 3051SAM__G)	Coplanar absolute sensor (Rosemount 3051SAM__A)	In-Line gage sensor (Rosemount 3051SAM__T)	In-Line absolute sensor (Rosemount 3051SAM__E)
Range 1	N/A	750 psia (51,7 bar)	750 psia (51,7 bar)	750 psia (51,7 bar)
Range 2	3626 psi (250 bar)	1500 psia (103,4 bar)	1500 psia (103,4 bar)	1500 psia (103,4 bar)
Range 3	3626 psi (250 bar)	1600 psia (110,3 bar)	1600 psia (110,3 bar)	1600 psia (110,3 bar)
Range 4	3626 psi (250 bar)	6000 psia (413,7 bar)	6000 psia (413,7 bar)	6000 psia (413,7 bar)
Range 5	3626 psi (250 bar)	N/A	15000 psig (1034,2 bar)	15000 psig (1034,2 bar)

1. The overpressure limit for configurations with remote seals (including Rosemount 3051SAL) is dependent on the flange rating or sensor rating (whichever is lower). Use Instrument Toolkit to ensure the seal system meets all pressure and temperature limits.

#### Burst pressure limits

- Coplanar gage/absolute sensor module (Rosemount 3051SAM\_\_G, Rosemount 3051SAM\_\_A): 10000 psi (689,5 bar)
- In-Line Gage/Absolute Sensor Module (Rosemount 3051SAM\_\_T, Rosemount 3051SAM\_\_E)
- Ranges 1–4: 11000 psi (758,4 bar)
- Range 5: 26000 psi (1792,64 bar)

#### Storage

- –50 to 185 °F (–46 to 85 °C)
- With LCD display: –40 to 185 °F (–40 to 85 °C)

#### Ambient temperature limits

##### During operation

- –40 to 185 °F (–40 to 85 °C)
- With LCD display<sup>(1)</sup>: –40 to 175 °F (–40 to 80 °C)

1. LCD display may not be readable, and LCD updates will be slower at temperatures below –4 °F (–20 °C)

## A.2.5 Process temperature limits

**Table A-4. Gage/Absolute Sensor**

Configuration	Coplanar gage/absolute sensor (Rosemount 3051SAM__G, Rosemount 3051SAM__A)	In-Line gage sensor/absolute sensor (Rosemount 3051SAM__T, Rosemount 3051SAM__E)
Silicone fill fluid	N/A	-40 to 250 °F (-40 to 121 °C) <sup>(1)(2)</sup>
with coplanar flange	-40 to 250 °F (-40 to 121 °C) <sup>(1)(2)</sup>	N/A
with traditional flange	-40 to 300 °F (-40 to 149 °C) <sup>(1)(2)</sup>	N/A
with level flange	-40 to 300 °F (-40 to 149 °C) <sup>(1)(2)</sup>	N/A
with Rosemount 305 Integral Manifold	-40 to 300 °F (-40 to 149 °C) <sup>(1)(2)</sup>	N/A
Inert fill fluid <sup>(3)</sup>	-40 to 185 °F (-40 to 85 °C) <sup>(4)</sup>	-22 to 250 °F (-30 to 121 °C) <sup>(1)(2)</sup>


1. Process temperatures above 185 °F (85 °C) require derating the ambient limits by a 1.5:1 ratio. For example, for process temperature of 195 °F (91 °C), new ambient temperature limit is equal to 170 °F (77 °C). This can be determined as follows: (195 °F - 185 °F) ÷ 1.5 = 15 °F, 185 °F - 15 °F = 170 °F.
2. 220 °F (104 °C) limit in vacuum service; 130 °F (54 °C) for pressures below 0.5 psia.
3. Not available with Rosemount 3051SAM\_\_A.
4. 160 °F (71 °C) limit in vacuum service.

**Table A-5. Liquid Level Sensor (Rosemount 3051SAL)**

Fill fluid	Process temperature limits at 70 °F (21 °C) ambient and atmospheric pressure or above			
	No extension	2-in. (50 mm) extension	4-in. (100 mm) extension	Thermal optimizer <sup>(1)</sup>
200 Silicone	-49 to 401 °F (-45 to 205 °C)	-49 to 401 °F (-45 to 205 °C)	-49 to 401 °F (-45 to 205 °C)	-49 to 401 °F (-45 to 205 °C)
Dow Corning® Silicone 704 Diffusion Pump Fluid	32 to 401 °F (0 to 205 °C)	32 to 464 °F (0 to 240 °C)	32 to 500 °F (0 to 260 °C)	32 to 599 °F (0 to 315 °C)
Inert (Halocarbon)	-49 to 320 °F (-45 to 160 °C)	-49 to 320 °F (-45 to 160 °C)	-49 to 320 °F (-45 to 160 °C)	-49 to 320 °F (-45 to 160 °C)
SYLTHERM™ XLT Silicone	-102 to 293 °F (-75 to 145 °C)	-102 to 293 °F (-75 to 145 °C)	-102 to 293 °F (-75 to 145 °C)	-102 to 293 °F (-75 to 145 °C)
Glycerin and water	5 to 203 °F (-15 to 95 °C)	5 to 203 °F (-15 to 95 °C)	5 to 203 °F (-15 to 95 °C)	5 to 203 °F (-15 to 95 °C)
Propylene Glycol and water	5 to 203 °F (-15 to 95 °C)	5 to 203 °F (-15 to 95 °C)	5 to 203 °F (-15 to 95 °C)	5 to 203 °F (-15 to 95 °C)
Neobee® M-20	5 to 401 °F (-15 to 205 °C)	5 to 437 °F (-15 to 225 °C)	5 to 437 °F (-15 to 225 °C)	5 to 437 °F (-15 to 225 °C)

1. See Figure A-1 for the specific operating range of using the Thermal Optimizer with D.C. Silicone 704.

Figure A-1. Thermal Optimizer with D.C. Silicone 704 Temperature Limits

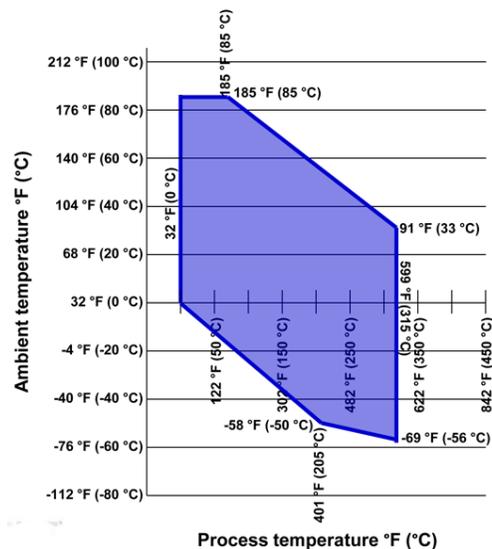

### Humidity limits

0–100% relative humidity

### Turn-on time

The Rosemount ERS System will be within specifications within six seconds from when power is applied to the system.

### Damping

The  $P_{HI}$  and  $P_{LO}$  Pressure measurements and the DP calculation may be independently damped from 0–60 seconds.

### Failure mode alarm

If self-diagnostics detect a gross failure in the Rosemount ERS System, the analog output will be driven off-scale to alert the user. Rosemount standard (default), NAMUR, and custom alarm levels are available. High or low alarm signal is selectable via a switch located on the LCD display/device electronics located in ERS Primary Unit.

Configuration	High alarm	Low alarm
Default (Rosemount standard)	$\geq 21.75$ mA	$\leq 3.75$ mA
NAMUR compliant <sup>(1)</sup>	$\geq 22.5$ mA	$\leq 3.6$ mA
Custom <sup>(2)</sup>	20.2 to 23.0 mA	3.54 to 3.8 mA

- Analog output levels are compliant with NAMUR recommendation NE 43, see option codes C4 or C5.
- Low alarm must be 0.1 mA less than the low saturation. High alarm must be 0.1 mA greater than the high saturation.

## A.3 Physical specifications

### A.3.1 Maximum cable length

For maximum cable lengths, see “Rosemount 3051S ERS System cable specifications” on page 16.

For SIS maximum lengths see “Rosemount ERS Systems safety certified identification” on page 61.

### A.3.2 Electrical connections

1/2–14 NPT, G 1/2, and M20 x 1.5 conduit. HART interface connections fixed to terminal block of ERS primary unit.

### A.3.3 Process connections

Coplanar gage/absolute sensor (Rosemount 3051SAM__G, Rosemount 3051SAL__A)	
Standard	1/4–18 NPT on 2 1/8-in. centers
Flange Adapters	1/2–14 NPT and RC 1/2 on 2-in. (50,8 mm) centers 1/2–14 NPT and RC 1/2 on 2 1/8-in. (54,0 mm) centers 1/2–14 NPT and RC 1/2 on 2 1/4-in. (57,2 mm) centers
In-Line gage sensor/absolute (Rosemount 3051SAM__T, Rosemount 3051SAL__E)	
Standard	1/2–14 NPT female
F11 Code	Non-threaded instrument flange (available in SST for sensor ranges 1-4 only)
G11 Code	G 1/2 A DIN 16288 Male (available in SST for sensor ranges 1–4 only)
H11 Code	Autoclave type F-250C (pressure relieved 9/16–18 gland thread; 1/4 OD high pressure tube 60° cone; available in SST for sensor range 5 only)
Liquid level sensor (Rosemount 3051SAL)	
FF Seal	ANSI/ASME B16.5: 2-, 3-, and 4-in. with Class 150, Class 300, and Class 600 flanges EN 1092-1: DN 50, DN 80, and DN 100 with PN 10/16 and PN 40 flanges JIS B2238: 50A, 80A, and 100A with 10K, 20K, and 40K flanges
EF Seal	ANSI/ASME B16.5: 3-in., and 4-in. with Class 150, Class 300, and Class 600 flanges EN 1092-1: DN 80 and DN 100 with PN10/16 and PN 40 flanges JIS B2238: 80A and 100A with 10K, 20K, and 40K flanges
RF Seal	ANSI/ASME B16.5: 1-in. and 1.5-in. with Class 150, Class 300, and Class 600 flanges EN 1092-1: DN 25 and DN 40 with PN10/16 and PN 40 flanges JIS B2238: 25A and 40A with 10K, 20K, and 40K flanges
RT Seal	1/4–18 NPT, 1/2–14 NPT, 3/4–14 NPT, and 1–11.5 NPT
SC Seal	1 1/2-, 2-, and 3-in. Tri-Clover style Tri Clamp
SS Seal	4-in. Sch.5 Tri Clamp

### A.3.4 Process wetted parts

#### Process isolating diaphragms

<b>Coplanar gage/absolute sensor (Rosemount 3051SAM__G, Rosemount 3051SAL__A)</b>	
316L SST (UNS S31603), Alloy C-276 (UNS N10276), Alloy 400 (UNS N04400), Tantalum (UNS R05440), Gold-Plated Alloy 400, Gold-Plated 316L SST	
<b>In-Line gage sensor/absolute (Rosemount 3051SAM__T, Rosemount 3051SAL__E)</b>	
316L SST (UNS S31603), Alloy C-276 (UNS N10276)	
<b>Liquid level sensor (Rosemount 3051SAL)</b>	
FF Seal	316L SST, Alloy C-276, Tantalum
EF Seal	
RF Seal	
RT Seal	
SC Seal	316L SST, Alloy C-276
SS Seal	

#### Drain/vent valves

316 SST, Alloy C-276, or Alloy 400/K-500 material (drain/vent seat: Alloy 400, drain/vent stem: Alloy K-500)

#### Process flanges and adapters

- Plated carbon steel
- SST: CF-8M (Cast 316 SST) per ASTM A743
- Cast C-276: CW-12MW per ASTM A494
- Cast Alloy 400: M-30C per ASTM A494

#### Wetted O-rings

Glass-filled PTFE, Graphite-filled PTFE (used only with gold-plated alloy 400 isolating diaphragm)

### A.3.5 Non-wetted parts

#### Electronics housing

Low-copper aluminum alloy or CF-8M (Cast 316 SST)

NEMA® 4X, IP 66, IP 68

#### Coplanar sensor module housing

SST: CF-3M (Cast 316L SST)

#### Bolts

- Plated carbon steel per ASTM A449, Type 1
- Austenitic 316 SST per ASTM F593
- ASTM A453, Class D, Grade 660 SST
- ASTM A193, Grade B7M alloy steel
- ASTM A193, Class 2, Grade B8M SST
- Alloy K-500

#### Sensor module fill fluid

Silicone or Inert (halocarbon)

#### Seal fill fluid (Rosemount 3051SAL Liquid Level Sensor)

Silicone 200, D.C. Silicone 704, SYLTHERM™ XLT, Inert (halocarbon), Glycerin and water, Neobee® M-20, Propylene Glycol, and Water

#### Paint


Polyurethane

#### Cover O-rings

Buna-N


## A.4 Dimensional drawings

Figure A-2. Rosemount 3051S ERS Coplanar™ Sensor and Flange with PlantWeb™ Housing

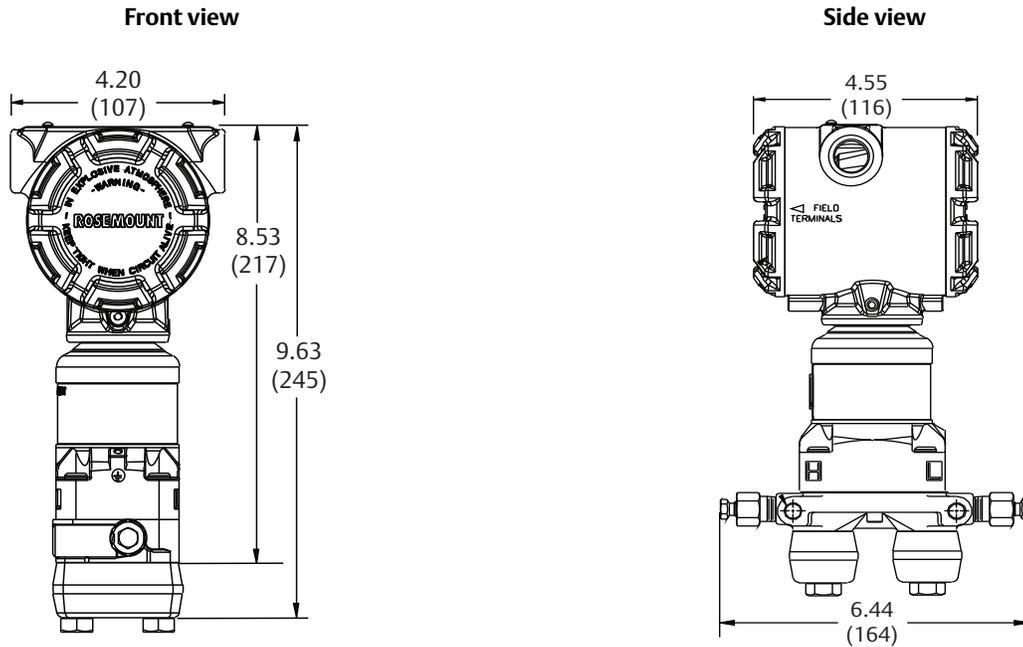


Dimensions are in inches (millimeters).

Figure A-3. Rosemount 3051S ERS Coplanar Sensor and Flange with Junction Box Housing

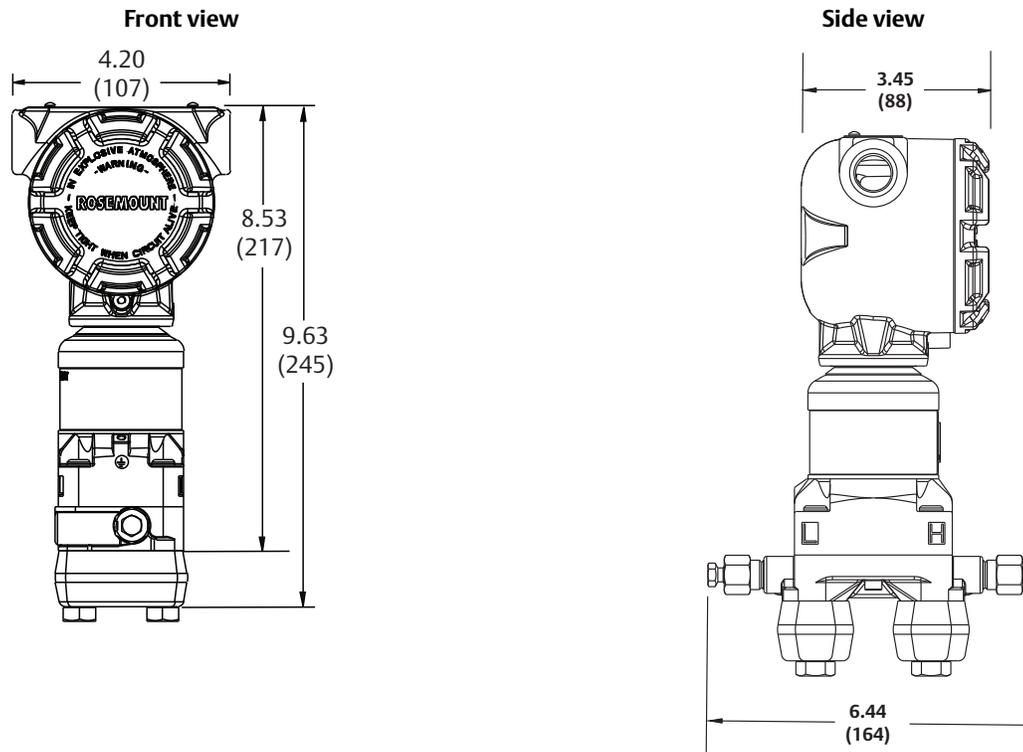


Dimensions are in inches (millimeters).

Figure A-4. Rosemount 3051S ERS Coplanar Sensor with Traditional Flange and PlantWeb Housing

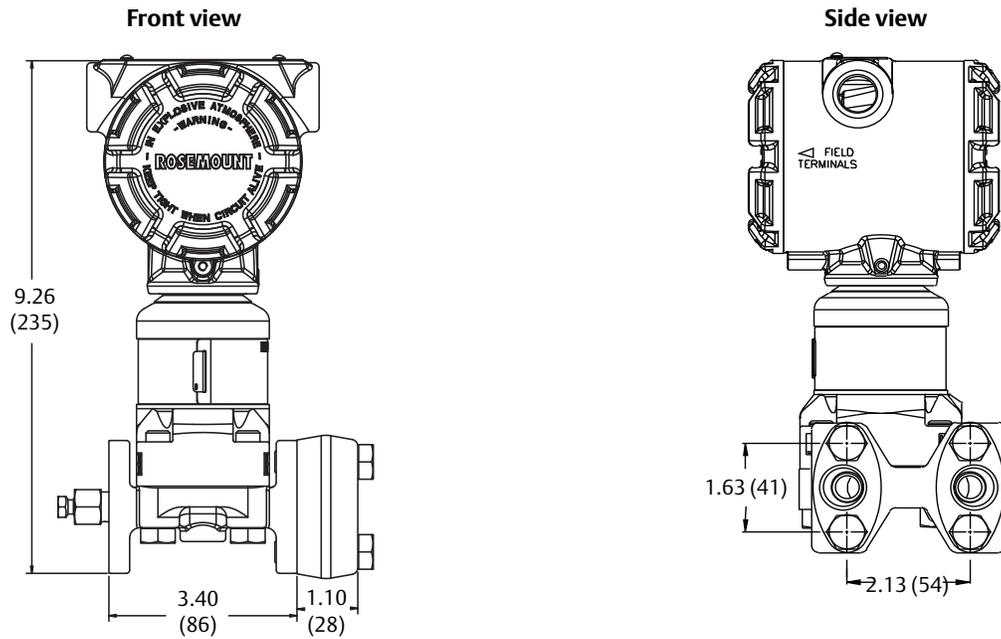


Dimensions are in inches (millimeters).

Figure A-5. Rosemount 3051S ERS Coplanar Sensor with Traditional Flange and Junction Box Housing

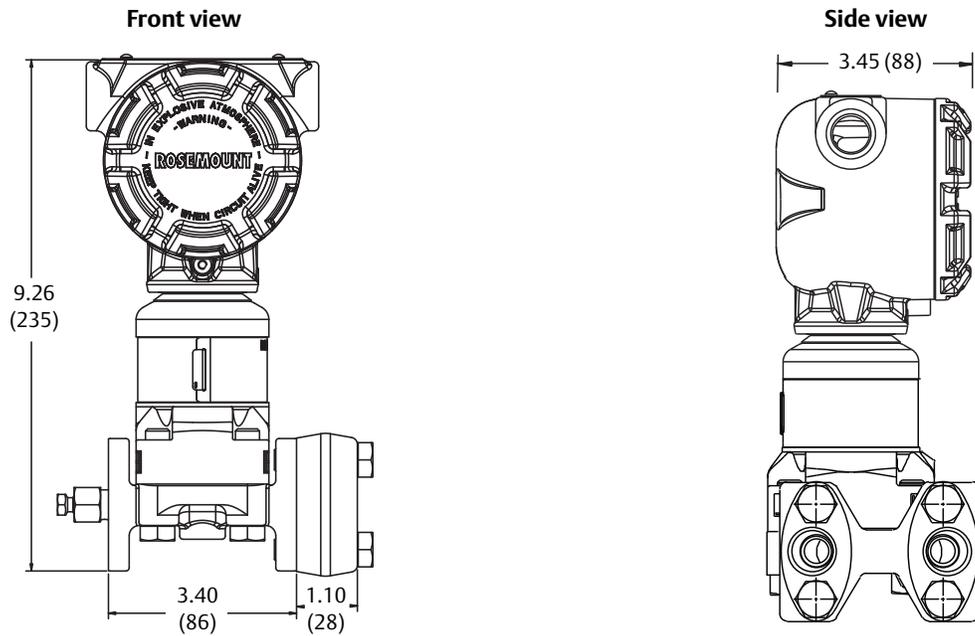


Dimensions are in inches (millimeters).

Figure A-6. Rosemount 3051S ERS In-Line Sensor with PlantWeb Housing

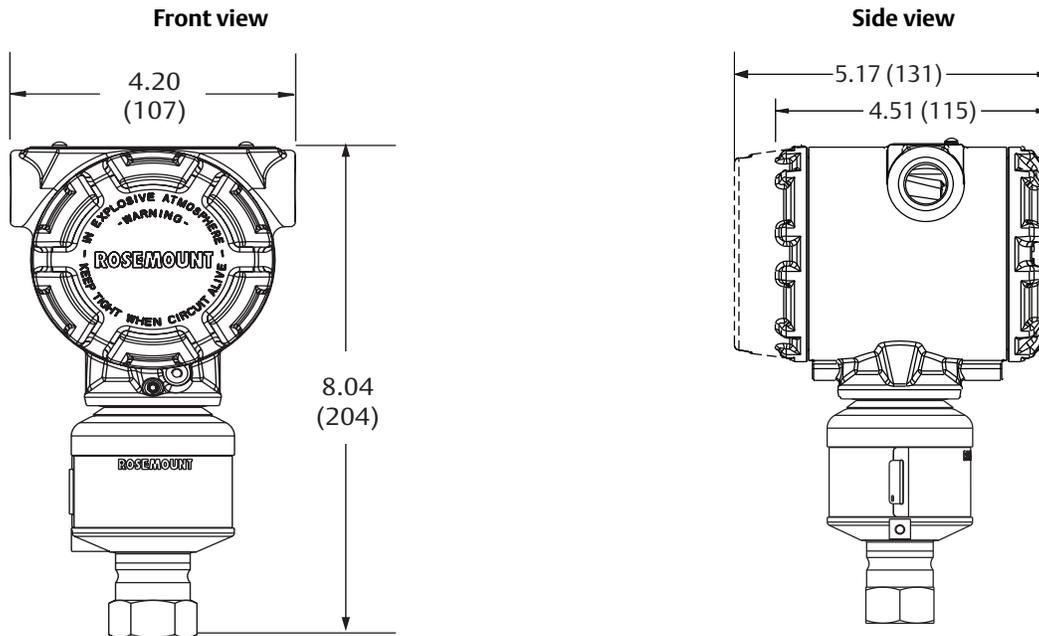


Dimensions are in inches (millimeters).

Figure A-7. Rosemount 3051S ERS In-Line Sensor with Junction Box Housing

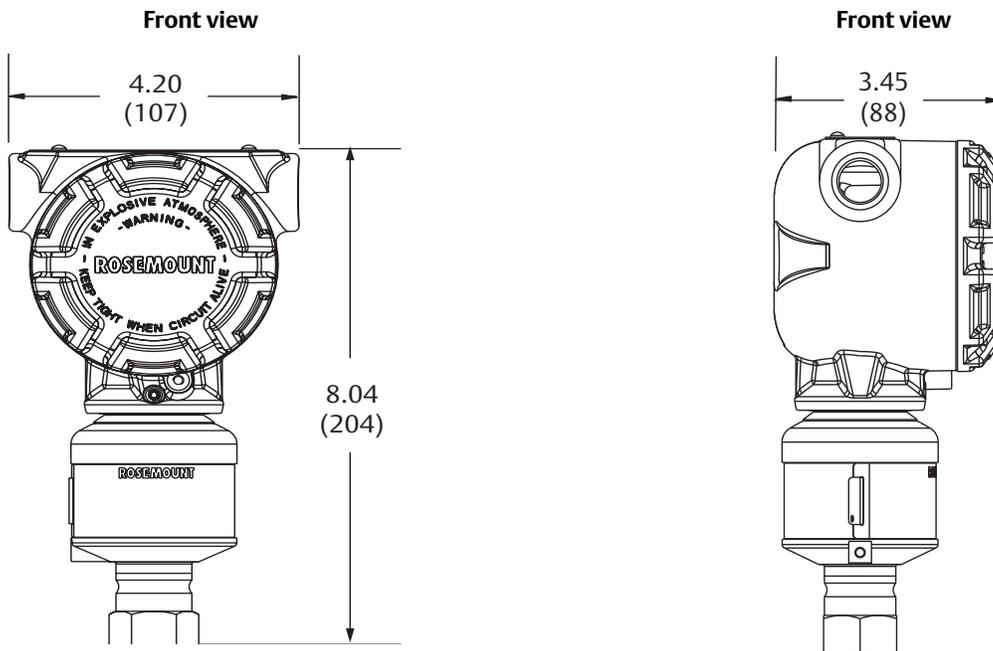


Dimensions are in inches (millimeters).

Figure A-8. Coplanar Mounting Configurations (B4 Bracket)

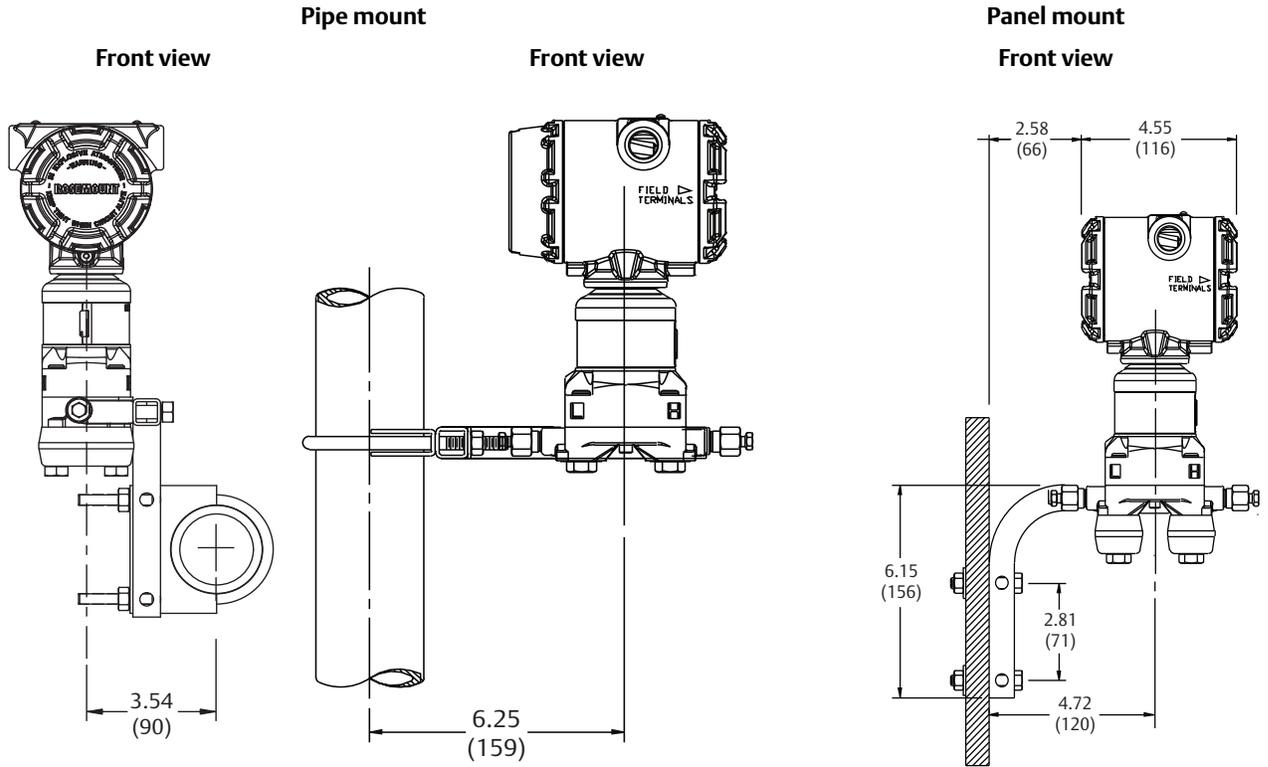


Dimensions are in inches (millimeters).

Figure A-9. Traditional Mounting Configurations

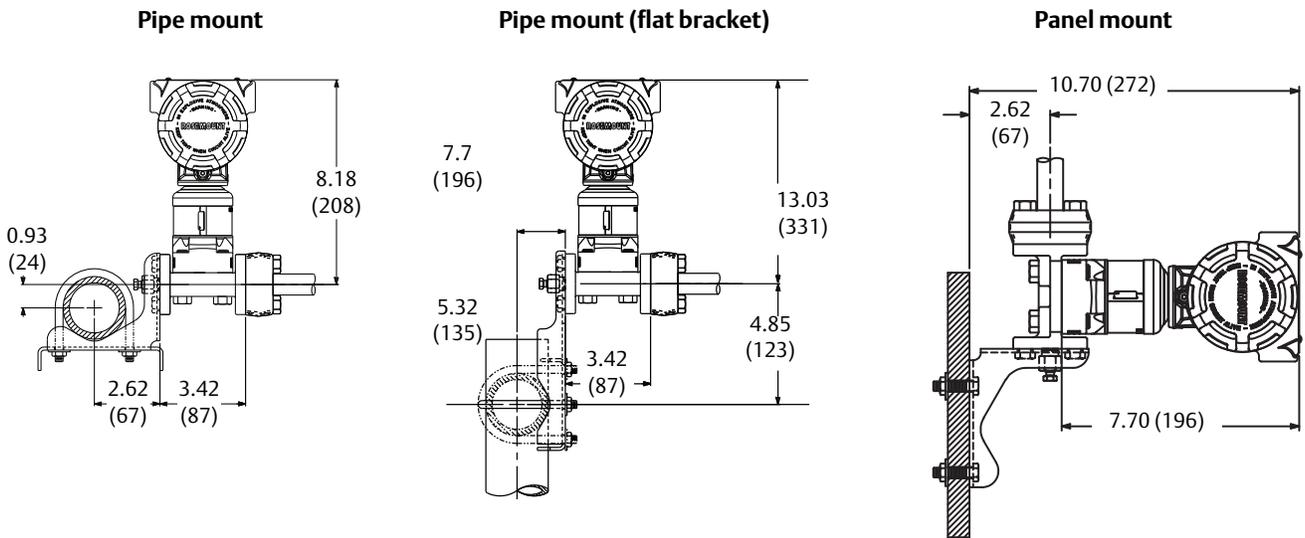


Dimensions are in inches (millimeters).

Figure A-10. In-Line Mounting Configurations (B4 Bracket)

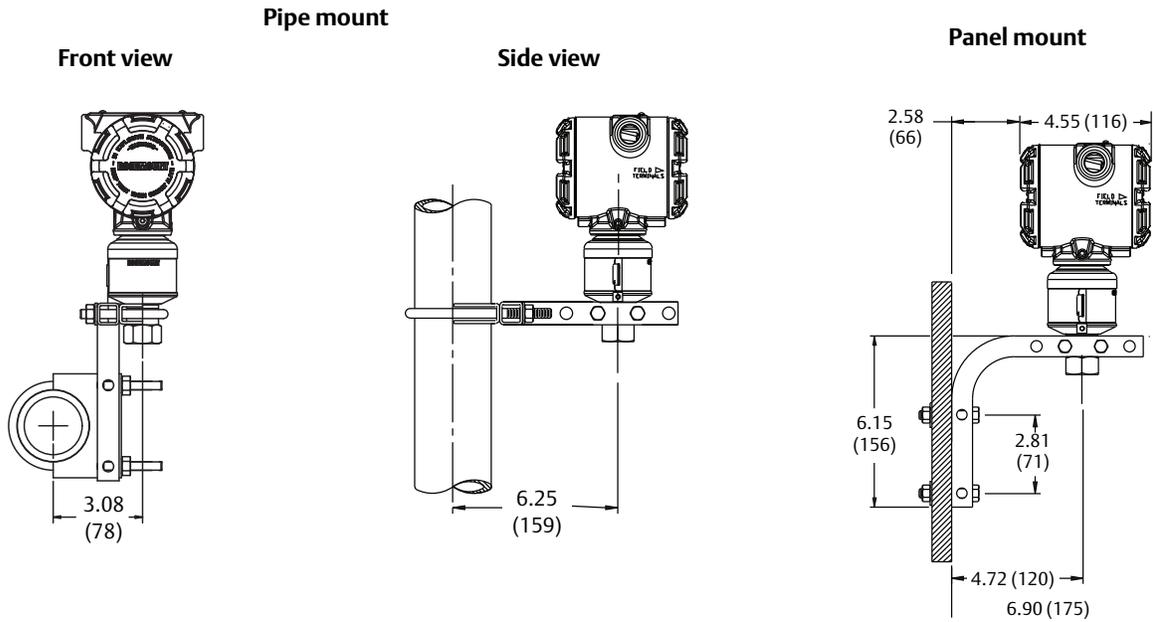


Dimensions are in inches (millimeters).

Figure A-11. Remote Display Mounting Configurations (B4 Bracket)

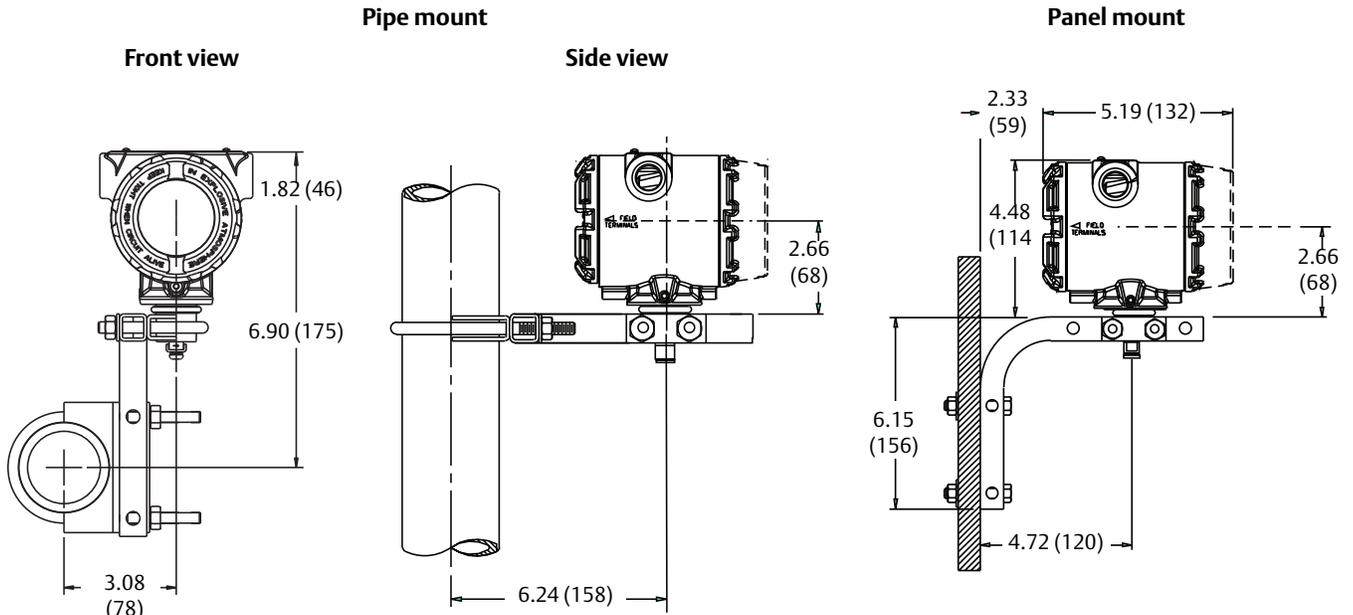


Dimensions are in inches (millimeters).

Figure A-12. Rosemount 3051S ERS Measurement Transmitter—Coplanar Style

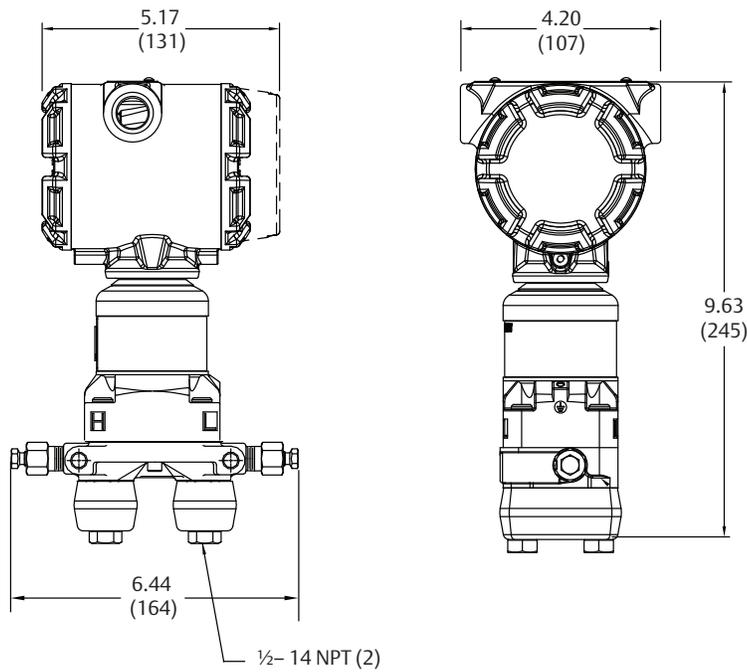

Dimensions are in inches (millimeters).

Figure A-13. Rosemount 3051S ERS Measurement Transmitter—In Line Style

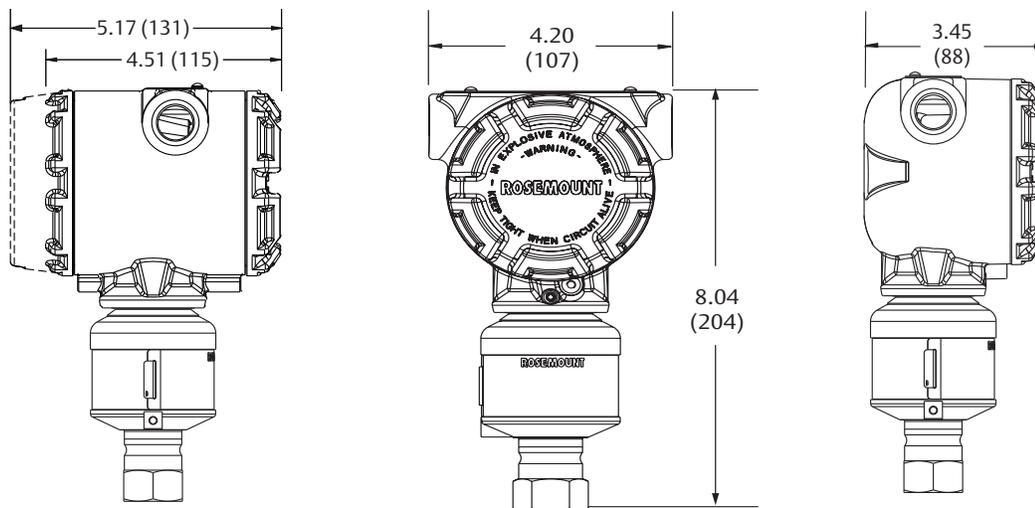

Dimensions are in inches (millimeters).

Figure A-14. Rosemount 3051S Scalable™ Level Transmitter with FF Seal<sup>(1)(2)</sup>


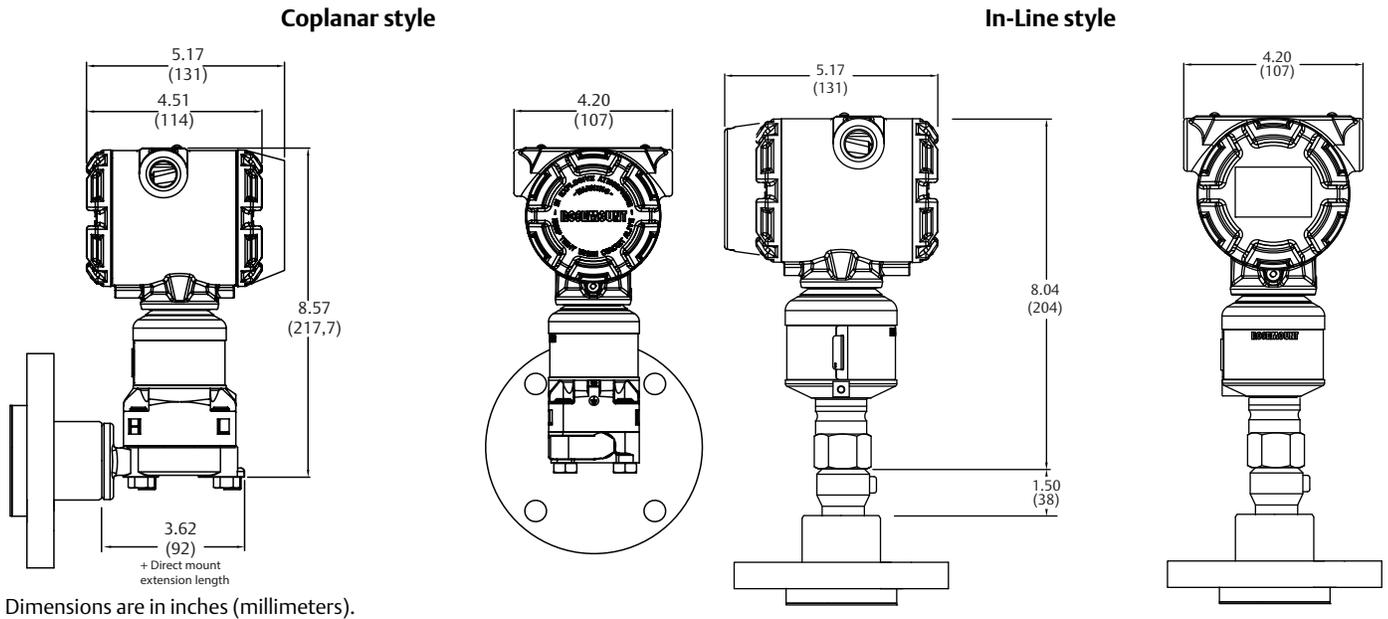


Figure A-15. Rosemount 3051S Scalable Level Transmitter with EF Seal<sup>(3)</sup>

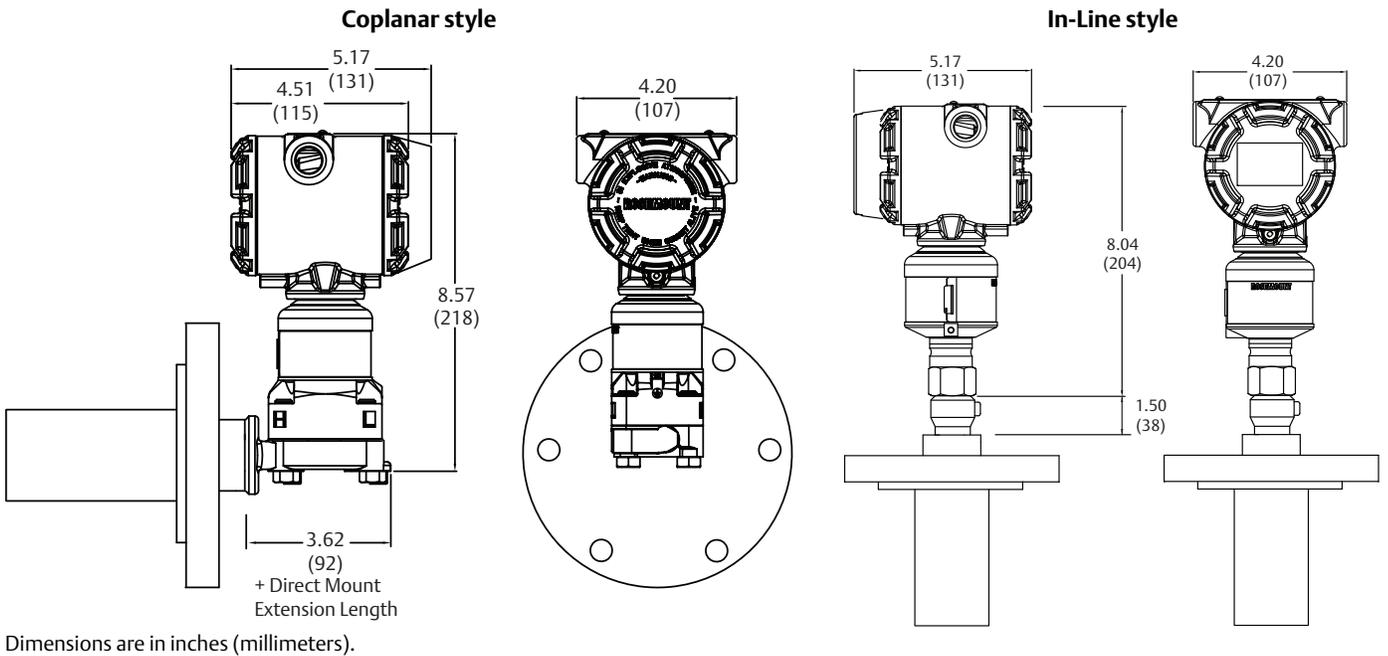

1. FF (FFW) seal dimensions and pressure ratings can be found on [page 95](#).
2. Lower housing (flushing ring) is available with FFW style flange.
3. EF (EFW) seal dimensions and pressure ratings can be found on [page 97](#).

Figure A-16. Rosemount 3051S Scalable Level Transmitter with RF Seal<sup>(1)</sup>



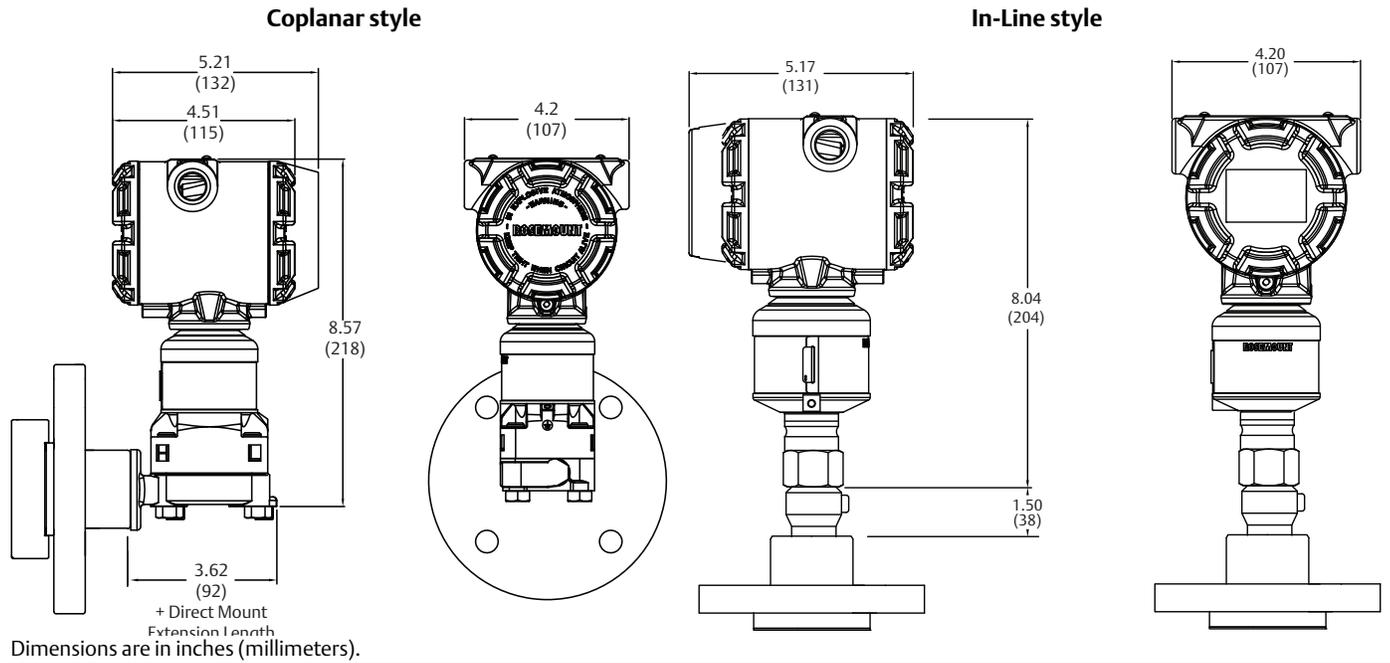


Figure A-17. Rosemount 3051S Scalable Level Transmitter with RT Seal<sup>(2)</sup>

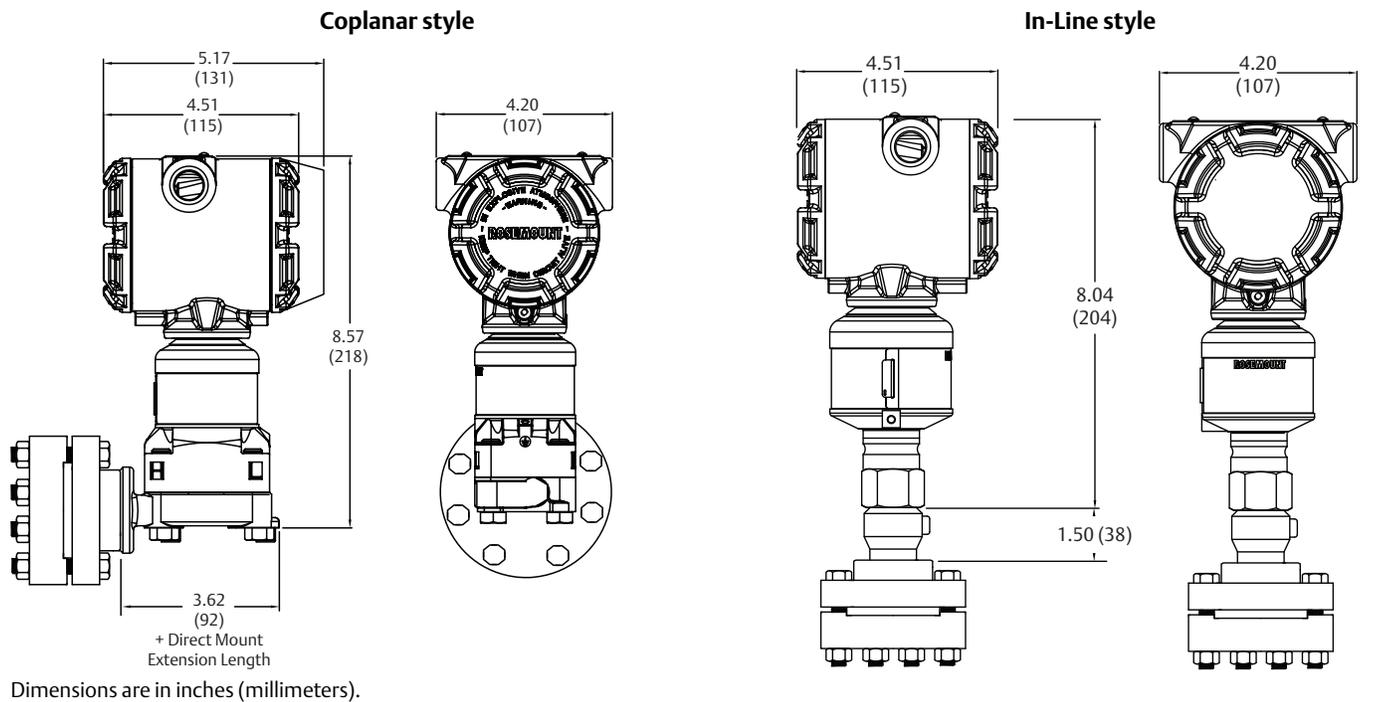

1. RF (RFW) seal dimensions and pressure ratings can be found on [page 99](#).
2. RT (RTW) seal dimensions can be found on [page 101](#).

Figure A-18. Rosemount 3051S Scalable Level Transmitter with SS Seal<sup>(1)</sup>

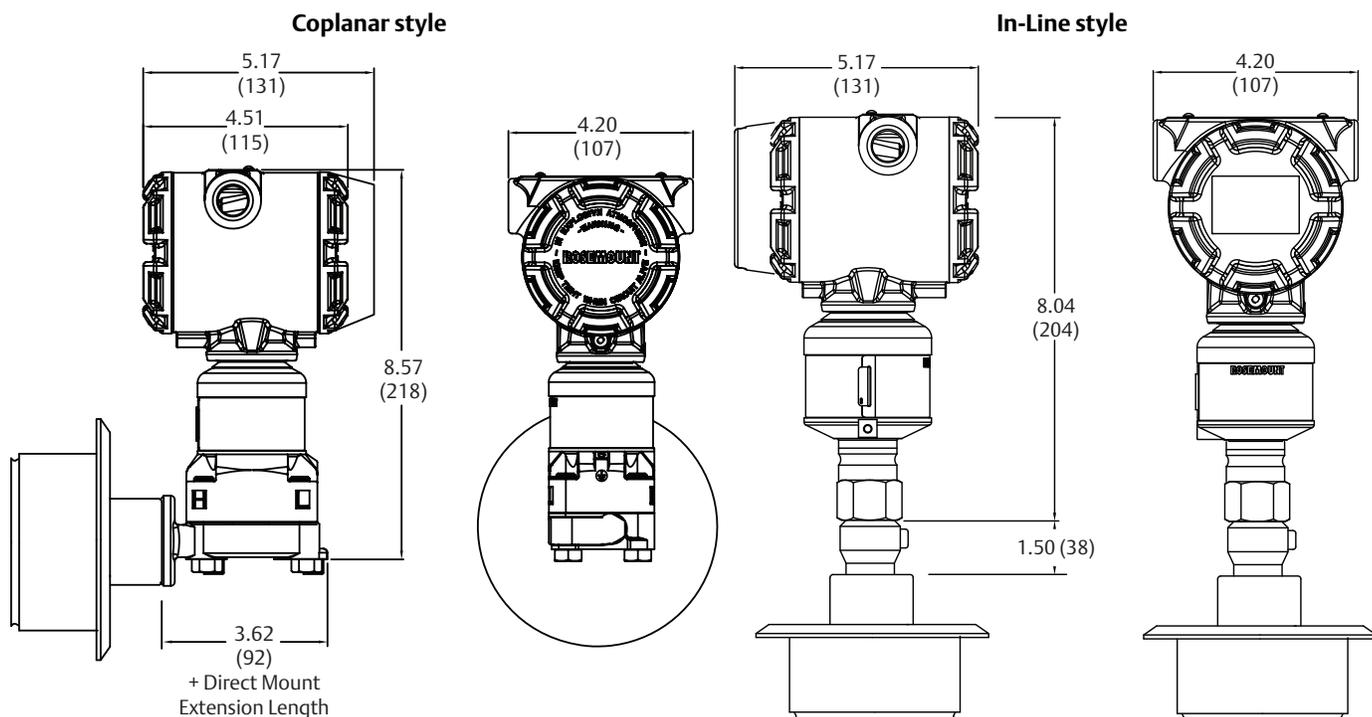

Dimensions are in inches (millimeters).

Class	Pipe size	Flange thickness A	Bolt circle diameter B	Outside diameter C	No. of bolts	Bolt hole diameter	Extension diameter <sup>(1)</sup> D	E	H
ASME B16.5 (ANSI) 150	2 (51)	0.69 (18)	4.75 (121)	6.0 (152)	4	0.75 (19)	N/A	3.6 (92)	5.65 (143)
	3 (76)	0.88 (22)	6.0 (152)	7.5 (191)	4	0.75 (19)	2.58 (66)	5.0 (127)	5.65 (143)
	4 (102)	0.88 (22)	7.5 (191)	9.0 (229)	8	0.75 (19)	3.5 (89)	6.2 (158)	5.65 (143)
ASME B16.5 (ANSI) 300	2 (51)	0.82 (21)	5.0 (127)	6.5 (165)	8	0.75 (19)	N/A	3.6 (92)	5.65 (143)
	3 (76)	1.06 (27)	6.62 (168)	8.25 (210)	8	0.88 (22)	2.58 (66)	5.0 (127)	5.65 (143)
	4 (102)	1.19 (30)	7.88 (200)	10.0 (254)	8	0.88 (22)	3.5 (89)	6.2 (158)	5.65 (143)
ASME B16.5 (ANSI) 600	2 (51)	1.00 (25)	5.0 (127)	6.5 (165)	8	0.75 (19)	N/A	3.6 (92)	7.65 (194)
	3 (76)	1.25 (32)	6.62 (168)	8.25 (210)	8	0.88 (22)	2.58 (66)	5.0 (127)	7.65 (194)
DIN 2501 PN 10-40	DN 50	20 mm	125 mm	165 mm	4	18 mm	N/A	4.0 (102)	5.65 (143)
DIN 2501 PN 25/40	DN 80	24 mm	160 mm	200 mm	8	18 mm	66 mm	5.4 (138)	5.65 (143)
	DN 100	24 mm	190 mm	235 mm	8	22 mm	89 mm	6.2 (158)	5.65 (143)
DIN 2501 PN 10/16	DN 100	20 mm	180 mm	220 mm	8	18 mm	89 mm	6.2 (158)	5.65 (143)

1. Tolerances are 0.040 (1.02), -0.020 (0.51).

1. SS (SSW) seal dimensions and pressure ratings can be found on page 104.

## A.5 Ordering information



### Rosemount 3051SAM Transmitter for ERS Applications

- Coplanar and In-Line sensor module platforms
- Variety of process connections including threaded NPT, flanges, manifolds, and Rosemount 1199 Remote Seals
- Available with 15-year stability and limited 15-year warranty

**Table A-6. Rosemount 3051SAM Scalable Advanced Measurement Transmitter for ERS Applications Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Model	Transmitter type				
3051SAM	Scalable ERS Measurement Transmitter				
<b>Performance class</b>					
1	Ultra: 0.025% span accuracy, 200:1 rangedown, 15-year stability, 15-year limited warranty				★
2	Classic: 0.035% span accuracy, 150:1 rangedown, 15-year stability				★
4	Enhanced ERS System performance, 15-year stability, 15-year limited warranty				★
<b>Configuration type</b>					
P	Electronic Remote Sensor - Primary				★
S	Electronic Remote Sensor - Secondary				★
<b>Pressure module type</b>		<b>Pressure sensor type</b>			
G	Coplanar	Gage		★	
T	In-Line	Gage		★	
E	In-Line	Absolute		★	
A	Coplanar	Absolute			
<b>Pressure range<sup>(1)</sup></b>					
	<b>Coplanar gage</b>	<b>In-line gage</b>	<b>In-line absolute</b>	<b>Coplanar absolute</b>	
1A	N/A	-14.7 to 30 psig (-1,0 to 2,06 bar)	0 to 30 psia (0 to 2,06 bar)	0 to 30 psia (0 to 2,06 bar)	★
2A	-250 to 250 inH <sub>2</sub> O (-623 to 623 mbar)	-14.7 to 150 psig (-1,0 to 10,34 bar)	0 to 150 psia (0 to 10,34 bar)	0 to 150 psia (0 to 10,34 bar)	★
3A	-393 to 1000 inH <sub>2</sub> O (-0,98 to 2,49 bar)	-14.7 to 800 psig (-1,0 to 55,2 bar)	0 to 800 psia (0 to 55,2 bar)	0 to 800 psia (0 to 55,2 bar)	★
4A	-14.2 to 300 psig (-0,98 to 20,7 bar)	-14.7 to 4000 psig (-1,0 to 275,8 bar)	0 to 4000 psia (0 to 275,8 bar)	0 to 4000 psia (0 to 275,8 bar)	★
5A	-14.2 to 2000 psig (-0,98 to 137,9 bar)	-14.7 to 10000 psig (-1,0 to 689,5 bar)	0 to 10000 psia (0 to 689,5 bar)	N/A	★

**Table A-6. Rosemount 3051SAM Scalable Advanced Measurement Transmitter for ERS Applications Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Isolating diaphragm			
2 <sup>(2)</sup>	316L SST		★
3 <sup>(2)</sup>	Alloy C-276		★
4 <sup>(3)</sup>	Alloy 400		
5 <sup>(3)(4)</sup>	Tantalum		
6 <sup>(3)</sup>	Gold-plated Alloy 400 (includes graphite-filled PTFE O-Ring)		
7 <sup>(3)</sup>	Gold-plated 316L SST		
Process connection			
	Coplanar module type	In-Line module type	
000	None	N/A	★
A11 <sup>(5)</sup>	Assemble to Rosemount 305 Manifold	Assemble to Rosemount 306 Manifold	★
A12 <sup>(5)</sup>	Assemble to Rosemount 304 or AMF Manifold with SST Traditional Flange	N/A	★
B11 <sup>(5)(6)</sup>	Assemble to one Rosemount 1199 Remote Diaphragm Seal with SST transmitter flange	Assemble to One Rosemount 1199 Remote Diaphragm	★
E11	Coplanar flange (CS), 1/4–18 NPT, 316 SST drain vents	1/2–14 NPT Female	★
E12	Coplanar flange (SST), 1/4–18 NPT, 316 SST drain vents	N/A	★
E13 <sup>(2)</sup>	Coplanar flange (Cast C-276), 1/4–18 NPT, Alloy C-276 drain vents	N/A	★
E14	Coplanar flange (Cast Alloy 400), 1/4–18 NPT, Alloy 400/K-500 drain vents	N/A	★
E15 <sup>(2)</sup>	Coplanar flange (SST), 1/4–18 NPT, Alloy C-276 drain vents	N/A	★
E16 <sup>(2)</sup>	Coplanar flange (CS), 1/4–18 NPT, Alloy C-276 drain vents	N/A	★
E21	Coplanar flange (CS), RC 1/4, 316 SST drain vents	N/A	★
E22	Coplanar flange (SST), RC 1/4, 316 SST drain vents	N/A	★
E23 <sup>(2)</sup>	Coplanar flange (Cast C-276), RC 1/4, Alloy C-276 drain vents	N/A	★
E24	Coplanar flange (Cast Alloy 400), RC 1/4, alloy 400/K-500 drain vents	N/A	★
E25 <sup>(2)</sup>	Coplanar flange (SST), RC 1/4, Alloy C-276 drain vents	N/A	★
E26 <sup>(2)</sup>	Coplanar flange (CS), RC 1/4, Alloy C-276 drain vents	N/A	★
F12	Traditional flange (SST), 1/4–18 NPT, 316 SST drain vents	N/A	★
F13 <sup>(2)</sup>	Traditional flange (Cast C-276), 1/4–18 NPT, Alloy C-276 drain vents	N/A	★
F14	Traditional flange (Cast Alloy 400), 1/4–18 NPT, Alloy 400/K-500 drain vents	N/A	★
F15 <sup>(2)</sup>	Traditional flange (SST), 1/4–18 NPT, Alloy C-276 drain vents	N/A	★
F22	Traditional flange (SST), RC 1/4, 316 SST drain vents	N/A	★
F23 <sup>(2)</sup>	Traditional flange (Cast C-276), RC 1/4, Alloy C-276 drain vents	N/A	★

**Table A-6. Rosemount 3051SAM Scalable Advanced Measurement Transmitter for ERS Applications Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

F24	Traditional flange (Cast Alloy 400), RC 1/4, Alloy 400/K500 drain vents	N/A	★
F25 <sup>(2)</sup>	Traditional flange (SST), RC 1/4, Alloy C-276 drain vents	N/A	★
F52	DIN-compliant traditional flange (SST), 1/4-18 NPT, 316 drain vents, 7 to 16-in. bolting	N/A	★
G11	Vertical mount level flange (SST), 2-in. ANSI Class 150, 316 SST drain vents	G 1/2 A DIN 16288 male (range 1-4 only)	★
G12	Vertical mount level flange (SST), 2-in. ANSI Class 300, 316 SST drain vents	N/A	★
G21	Vertical mount level flange (SST), 3-in. ANSI Class 150, 316 SST drain vents	N/A	★
G22	Vertical mount level flange (SST), 3-in. ANSI Class 300, 316 SST drain vents	N/A	★
G31	Vertical mount level flange (SST), DIN-DN 50 PN 40, 316 SST drain vents	N/A	★
G41	Vertical mount level flange (SST), DIN-DN 80 PN 40, 316 SST drain vents	N/A	
F11	Traditional flange (CS), 1/4-18 NPT, 316 SST drain/vents	Non-threaded instrument flange (I-Flange)	
F32	Bottom vent traditional flange (SST), 1/4-18 NPT, 316 SST drain vents	N/A	
F42	Bottom vent traditional flange (SST), RC 1/4, 316 SST drain vents	N/A	
F62	DIN-compliant traditional flange (316 SST), 1/4-18 NPT, 316 drain vents, M10 bolting	N/A	
F72	DIN-compliant traditional flange (316 SST), 1/4-18 NPT, 316 drain vents, M12 bolting	N/A	
P11	N/A	Level flange (SST), 2-in. ANSI Class 150	★
P12	N/A	Level flange (SST), 2-in. ANSI Class 300	★
P21	N/A	Level flange (SST), 3-in. ANSI Class 150	★
P22	N/A	Level flange (SST), 3-in. ANSI Class 300	★
P31	N/A	Level flange (SST), DIN-DN 50 PN 40	★
P41	N/A	Level flange (SST), DIN-DN 80 PN 40	★
<b>Transmitter output</b>			
A	4-20 mA with digital signal based on HART protocol		★
<b>Housing style</b>		<b>Material</b>	<b>Conduit entry size</b>
<b>Housings for ERS Primary - Configuration Type code P</b>			
1A	PlantWeb housing	Aluminum	1/2-14 NPT ★
1B	PlantWeb housing	Aluminum	M20 x 1.5 (CM 20) ★
1J	PlantWeb housing	SST	1/2-14 NPT ★
1K	PlantWeb housing	SST	M20 x 1.5 (CM 20) ★

**Table A-6. Rosemount 3051SAM Scalable Advanced Measurement Transmitter for ERS Applications Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

2E	Junction box with remote display output	Aluminum	1/2–14 NPT	★
2F	Junction box with remote display output	Aluminum	M20 x 1.5 (CM 20)	★
2M	Junction box with remote display output	SST	1/2–14 NPT	★
<b>Housings for ERS Secondary - Configuration Type code S</b>				
2A	Junction box	Aluminum	1/2–14 NPT	★
2B	Junction box	Aluminum	M20 x 1.5 (CM 20)	★
2J	Junction box	SST	1/2–14 NPT	★
<b>Housings for ERS Primary - Configuration Type code P</b>				
1C	PlantWeb housing	Aluminum	G1/2	
1L	PlantWeb housing	SST	G1/2	
2G	Junction box with remote display output	Aluminum	G1/2	
<b>Housings for ERS Secondary - Configuration Type code S</b>				
2C	Junction box	Aluminum	G1/2	

**Options (include with select ed model number)**

<b>Electronic remote sensor connection cable</b>				
R02	25 ft (7,62 m) of Electronic Remote Sensors cable (gray color)			★
R05	50 ft. (15,2 m) of Electronic Remote Sensors cable (gray color)			★
R10	100 ft. (30,5 m) of Electronic Remote Sensors cable (gray color)			★
R15	150 ft. (45,72 m) of Electronic Remote Sensors cable (gray color)			★
R20 <sup>(7)</sup>	200 ft (60,96 m) of Electronic Remote Sensors cable (gray color)			★
R22 <sup>(8)</sup>	225 ft (68,58 m) of Electronic Remote Sensors cable (gray color)			★
R30	300 ft (91,44 m) of Electronic Remote Sensors cable (gray color)			★
R40	400 ft (121,92 m) of Electronic Remote Sensors cable (gray color)			★
R50	500 ft (152,4 m) of Electronic Remote Sensors cable (gray color)			★
H02	25 ft (7,62 m) of Electronic Remote Sensors cable (blue color)			★
H05	50 ft (15,2 m) of Electronic Remote Sensors cable (blue color)			★
H10	100 ft (30,5 m) of Electronic Remote Sensors cable (blue color)			★
H15	150 ft (45,7 m) of Electronic Remote Sensors cable (blue color)			★
H20 <sup>(7)</sup>	200 ft (60,96 m) of Electronic Remote Sensors cable (blue color)			★
H22 <sup>(8)</sup>	225 ft (68,58 m) of Electronic Remote Sensors cable (blue color)			★
J02	25 ft (7,62 m) of Electronic Remote Sensors armored cable			
J05	50 ft (15,2 m) of Electronic Remote Sensors armored cable			
J07	75 ft (22,8 m) of Electronic Remote Sensors armored cable			
J10	100 ft (30,5 m) of Electronic Remote Sensors armored cable			
J12 <sup>(8)</sup>	125 ft (38,1 m) of Electronic Remote Sensors armored cable			

**Table A-6. Rosemount 3051SAM Scalable Advanced Measurement Transmitter for ERS Applications Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

<b>Mounting bracket</b>		
B1 <sup>(3)</sup>	Traditional flange bracket, CS, 2-in. pipe	★
B2 <sup>(3)</sup>	Traditional flange bracket, CS, panel	★
B3 <sup>(3)</sup>	Traditional flange flat bracket, CS, 2-in. pipe	★
B4	Bracket, all SST, 2-in. pipe and panel	★
B7 <sup>(3)</sup>	Traditional flange bracket, B1 with SST bolts	★
<b>Mounting bracket<sup>(3)</sup></b>		
B8	Traditional flange bracket, B2 with SST bolts	★
B9	Traditional flange bracket, B3 with SST bolts	★
BA	Traditional flange bracket, B1, all SST	★
BC	Traditional flange bracket, B3, all SST	★
<b>Special configuration (software)</b>		
C1 <sup>(9)</sup>	Customer software configuration (Configuration Data Sheet must be completed)	★
C3	Gage pressure calibration on Rosemount 3051SAM_ _A4 only	★
C4 <sup>(9)</sup>	NAMUR alarm and saturation levels, high alarm	★
C5 <sup>(9)</sup>	NAMUR alarm and saturation levels, low alarm	★
C6 <sup>(9)</sup>	Custom alarm and saturation levels, high alarm (requires C1 and Configuration Data Sheet)	★
C7 <sup>(9)</sup>	Custom alarm and saturation levels, low alarm (requires C1 and Configuration Data Sheet)	★
C8 <sup>(9)</sup>	Low alarm (standard Rosemount alarm and saturation levels)	★
<b>Special configuration (hardware)</b>		
D2 <sup>(10)</sup>	1/2–14 NPT flange adapters	★
D4	External ground screw assembly	★
D5 <sup>(10)</sup>	Delete transmitter drain/vent valves (install plugs)	★
D7 <sup>(10)</sup>	Coplanar flange without drain/vent ports	
D9 <sup>(10)</sup>	RC 1/2 flange adapters	
<b>Product certifications</b>		
E1	ATEX Flameproof	★
I1	ATEX Intrinsic Safety	★
N1	ATEX Type n	★
K1	ATEX Flameproof and Intrinsically Safe, Type n, Dust	★
ND	ATEX Dust	★
E4	TIIS Flameproof	★
E5	FM Explosion-proof, Dust Ignition-proof	★

**Table A-6. Rosemount 3051SAM Scalable Advanced Measurement Transmitter for ERS Applications Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

I5	FM Intrinsically Safe, Division 2	★
K5	FM Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2	★
E6 <sup>(11)</sup>	CSA Explosion-proof, Dust Ignition-proof, Division 2	★
I6	CSA Intrinsically Safe	★
K6 <sup>(11)</sup>	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2	★
E7	IECEX Flameproof	★
I7	IECEX Intrinsic Safety	★
N7	IECEX Type n	★
K7	IECEX Flameproof, Intrinsic Safety, Type n	★
E2	INMETRO Flameproof	★
I2	INMETRO Intrinsically Safe	★
K2	INMETRO Flameproof, Intrinsic Safety, Type n	★
E3	China Flameproof	★
I3	China Intrinsic Safety, Dust Ignition-proof	★
KA <sup>(11)</sup>	ATEX and CSA Flameproof, Intrinsically Safe, Division 2	★
KB <sup>(11)</sup>	FM and CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2	★
KC	FM and ATEX Explosion-proof, Intrinsically Safe, Division 2	★
KD <sup>(11)</sup>	FM, CSA, and ATEX Explosion-proof, Intrinsically Safe	★
<b>Special certifications</b>		
Q4	Calibration certificate	★
QP	Calibration certificate and tamper evident seal	★
Q8	Material traceability certification per EN 10204 3.1	★
Q16	Surface finish certification for hygienic remote seals	★
QZ <sup>(12)</sup>	Remote seal system performance calculation report	★
T1 <sup>(9)</sup>	Transient terminal block	★
L1 <sup>(13)</sup>	Inert sensor fill fluid	★
L2	Graphite-filled PTFE O-ring	★
L4 <sup>(10)</sup>	Austenitic 316 SST bolts	★
L5 <sup>(2)(10)</sup>	ASTM A 193, Grade B7M bolts	★
<b>Special certifications<sup>(10)</sup></b>		
L6	Alloy K-500 bolts	★
L7 <sup>(2)</sup>	ASTM A 453, Class D, Grade 660 bolts	★
L8	ASTM A 193, Class 2, Grade B8M bolts	★

**Table A-6. Rosemount 3051SAM Scalable Advanced Measurement Transmitter for ERS Applications Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Display type (ERS Primary Only) <sup>(9)</sup>		
M5	PlantWeb LCD display	★
M7	Remote mount LCD display and interface, PlantWeb housing, no cable, SST bracket	★
M8	Remote mount LCD display and interface, PlantWeb housing, 50 ft. (15,2 m) cable, SST bracket	★
M9	Remote mount LCD display and interface, PlantWeb housing, 100 ft. (30,5 m) cable, SST bracket	★
Special procedures		
Pressure testing		
P1	Hydrostatic testing with certificate	
Special cleaning <sup>(10)</sup>		
P2	Cleaning for special services	
P3	Cleaning for less than 1 PPM Chlorine/Fluorine	
Typical model number: 3051SAM 1 ST 2A 2 E11 A 2A		


1. The pressure range should be specified based on the maximum static pressure, not differential pressure.
2. Materials of construction comply with metallurgical requirements highlighted within NACE® MR 0175/ISO 15156 for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR 0103 for sour refining environments.
3. Not available with pressure sensor/module codes T or E.
4. Tantalum diaphragm material is only available with Pressure Sensor/Module code G.
5. "Assemble to" items are specified separately and require a completed model number.
6. Consult an Emerson representative for performance specifications.
7. Maxium cable distance for SIS installations. See "Rosemount ERS Systems safety certified identification" on page 61 for more information.
8. Maxium cable distance for IS (Intrinsically safe) installations. Other options may not be valid at longer distances.
9. Not available with Configuration Type code S.
10. Not available with Process Connection code A11.
11. Not available with M20 or G<sup>1</sup>/2 conduit entry size.
12. The QZ report quantifies the performance of the entire ERS System. One report is provided per ERS System. The QZ option is specified on the primary transmitter (Configuration Type code P).
13. Silicone fill fluid is standard.



**Rosemount 3051SAL Level Transmitter for ERS Applications**

- Integrated transmitter and remote seal in a single model number
- Variety of process connections including flanged, threaded, and hygienic remote seals
- Available with 10-year stability and limited 12-year warranty

A Rosemount 3051SAL Transmitter consists of three parts. First, specify the transmitter model codes found on [page 82](#). Then, specify a remote seal found on [page 95](#). Finish the model number by specifying all desired options on [page 92](#).

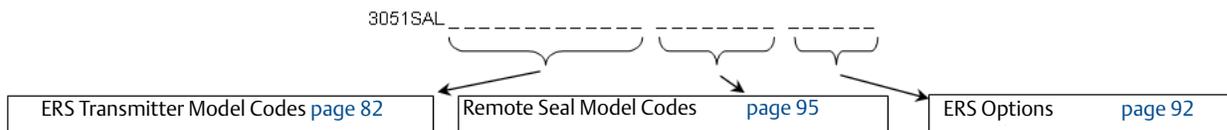

**Table A-7. Rosemount 3051SAL Scalable Advanced Level Transmitter for ERS Applications Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Model	Transmitter type				
3051SAL	Scalable level transmitter				
<b>Performance class</b>					
1	Ultra: 0.065% span accuracy, 100:1 rangedown, 15-year limited warranty			★	
2	Classic: 0.065% span accuracy, 150:1 rangedown			★	
4	Enhanced ERS System performance, limited 15-year warranty			★	
<b>Configuration type</b>					
P	Electronic Remote Sensor - Primary			★	
S	Electronic Remote Sensor - Secondary			★	
<b>Pressure module type</b>		<b>Pressure sensor type</b>			
G	Coplanar	Gage		★	
T	In-Line	Gage		★	
E	In-Line	Absolute		★	
A	Coplanar	Absolute			
<b>Pressure range<sup>(1)</sup></b>					
	<b>Coplanar gage</b>	<b>In-Line gage</b>	<b>In-Line absolute</b>	<b>Coplanar absolute</b>	
1A	N/A	-14.7 to 30 psig (-1,0 to 2,06 bar)	0 to 30 psia (0 to 2,06 bar)	0 to 30 psia (0 to 2,06 bar)	★
2A	-250 to 250 inH <sub>2</sub> O (-623 to 623 mbar)	-14.7 to 150 psig (-1,0 to 10,34 bar)	0 to 150 psia (0 to 10,34 bar)	0 to 150 psia (0 to 10,34 bar)	★
3A	-393 to 1000 inH <sub>2</sub> O (-0,98 to 2,49 bar)	-14.7 to 800 psig (-1,0 to 55,2 bar)	0 to 800 psia (0 to 55,2 bar)	0 to 800 psia (0 to 55,2 bar)	★
4A	-14.2 to 300 psig (-0,98 to 20,7 bar)	-14.7 to 4000 psig (-1,0 to 275,8 bar)	0 to 4000 psia (0 to 275,8 bar)	0 to 4000 psia (0 to 275,8 bar)	★
5A	-14.2 to 2000 psig (-0,98 to 137,9 bar)	-14.7 to 10000 psig (-1,0 to 689,5 bar)	0 to 10000 psia (0 to 689 bar)	N/A	★

**Table A-7. Rosemount 3051SAL Scalable Advanced Level Transmitter for ERS Applications Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Transmitter output				
A	4–20 mA with digital signal based on HART Protocol			★
Housing style	Material	Conduit entry size		
Housings for ERS Primary - Configuration Type code P				
1A	PlantWeb housing	Aluminum	1/2–14 NPT	★
1B	PlantWeb housing	Aluminum	M20 x 1.5 (CM 20)	★
1J	PlantWeb housing	SST	1/2–14 NPT	★
1K	PlantWeb housing	SST	M20 x 1.5 (CM 20)	★
2E	Junction box with remote display output	Aluminum	1/2–14 NPT	★
2F	Junction box with remote display output	Aluminum	M20 x 1.5 (CM 20)	★
2M	Junction box with remote display output	SST	1/2–14 NPT	★
Housings for ERS Secondary - Configuration Type code S				
2A	Junction box	Aluminum	1/2–14 NPT	★
2B	Junction box	Aluminum	M20 x 1.5 (CM 20)	★
2J	Junction box	SST	1/2–14 NPT	★
Housings for ERS Primary - Configuration Type code P				
1C	PlantWeb housing	Aluminum	G1/2	
1L	PlantWeb housing	SST	G1/2	
2G	Junction box with remote display output	Aluminum	G1/2	
Housings for ERS Secondary - Configuration Type code S				
2C	Junction box	Aluminum	G1/2	
Seal system type				
1	Direct-mount seal system			★
Direct-mount extension (between transmitter flange and seal)				
0	No extension			★
2	2-in. (50 mm) extension			★
4	4-in. (100 mm) extension			★
5	Thermal optimizer			★
Transmitter reference pressure connection				
00	None (in-line style sensor)			★
20	316L SST isolator/SST transmitter flange			★
30	Alloy C-276 isolator/SST transmitter flange			★

**Table A-7. Rosemount 3051SAL Scalable Advanced Level Transmitter for ERS Applications Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Seal fill fluid		Specific gravity at 77 °F (25 °C)	Temperature limits <sup>(2)</sup>				
			No extension	2-in. (50 mm) extension	4-in. (100 mm) extension	Thermal optimizer	
A	SYLTHERM XLT	0.85	-102 to 293 °F (-75 to 145 °C)	-102 to 293 °F (-75 to 145 °C)	-102 to 293 °F (-75 to 145 °C)	-102 to 293 °F (-75 to 145 °C)	★
C	D.C. Silicone 704	1.07	32 to 401 °F <sup>(3)</sup> (0 to 205 °C)	32 to 464 °F <sup>(3)</sup> (0 to 240 °C)	32 to 500 °F <sup>(3)</sup> (0 to 260 °C)	32 to 599 °F (0 to 315 °C)	★
D	Silicone 200	0.93	-49 to 401 °F (-45 to 205 °C)	-49 to 401 °F (-45 to 205 °C)	-49 to 401 °F (-45 to 205 °C)	-49 to 401 °F (-45 to 205 °C)	★
H	Inert (Halocarbon)	1.85	-49 to 320 °F (-45 to 160 °C)	-49 to 320 °F (-45 to 160 °C)	-49 to 320 °F (-45 to 160 °C)	-49 to 320 °F (-45 to 160 °C)	★
G <sup>(4)(5)</sup>	Glycerin and Water	1.13	5 to 203 °F (-15 to 95 °C)	5 to 203 °F (-15 to 95 °C)	5 to 203 °F (-15 to 95 °C)	5 to 203 °F (-15 to 95 °C)	★
N <sup>(4)</sup>	Neobee M-20	0.92	5 to 401 °F <sup>(3)</sup> (-15 to 205 °C)	5 to 437 °F (-15 to 225 °C)	5 to 437 °F (-15 to 225 °C)	5 to 437 °F (-15 to 225 °C)	★
P <sup>(4)(5)</sup>	Propylene Glycol and Water	1.02	5 to 203 °F (-15 to 95 °C)	5 to 203 °F (-15 to 95 °C)	5 to 203 °F (-15 to 95 °C)	5 to 203 °F (-15 to 95 °C)	★

Continue specifying a completed model number by choosing a remote seal type below.

	<a href="#">page 95</a>	FF Flush Flanged Seal	Process connections: 2-in./DN 50/50A 3-in./DN 80/80A 4-in./ DN 100/100A
	<a href="#">page 97</a>	EF Extended Flanged Seal	Process connections: 3-in./DN 80/80A 4-in./DN 100/100A
	<a href="#">page 99</a>	RF Remote Flanged Seal	Process connections: 1-in./DN 25/25A 1 1/2-in./DN 40/40A
	<a href="#">page 101</a>	RT Remote Threaded Seal	Process connections: 1/4-18 NPT 1/2-14 NPT 3/4-14 NPT 1-11.5 NPT
	<a href="#">page 103</a>	SC Hygienic Tri Clamp Seal	Process connections: 1 1/2-in. 2-in. 3-in.
	<a href="#">page 104</a>	SS Hygienic Tank Spud Seal	Process connections: 4-in.

**Table A-7. Rosemount 3051SAL Scalable Advanced Level Transmitter for ERS Applications Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

**Options (include with selected model number)**

<b>Electronic remote sensor connection cable</b>		
R02	25 ft (7,62 m) of Electronic Remote Sensors cable (gray color)	★
R05	50 ft. (15,2 m) of Electronic Remote Sensors cable (gray color)	★
R10	100 ft. (30,5 m) of Electronic Remote Sensors cable (gray color)	★
R15	150 ft. (45,72 m) of Electronic Remote Sensors cable (gray color)	★
R20 <sup>(6)</sup>	200 ft (60,96 m) of Electronic Remote Sensors cable (gray color)	★
R22 <sup>(7)</sup>	225 ft (68,58 m) of Electronic Remote Sensors cable (gray color)	★
R30	300 ft (91,44 m) of Electronic Remote Sensors cable (gray color)	★
R40	400 ft (121,92 m) of Electronic Remote Sensors cable (gray color)	★
R50	500 ft (152,4 m) of Electronic Remote Sensors cable (gray color)	★
H02	25 ft (7,62 m) of Electronic Remote Sensors cable (blue color)	★
H05	50 ft (15,2 m) of Electronic Remote Sensors cable (blue color)	★
H10	100 ft (30,5 m) of Electronic Remote Sensors cable (blue color)	★
H15	150 ft (45,7 m) of Electronic Remote Sensors cable (blue color)	★
H20 <sup>(6)</sup>	200 ft (60,96 m) of Electronic Remote Sensors cable (blue color)	★
H22 <sup>(7)</sup>	225 ft (68,58 m) of Electronic Remote Sensors cable (blue color)	★
J02	25 ft (7,62 m) of Electronic Remote Sensors armored cable	
J05	50 ft (15,2 m) of Electronic Remote Sensors armored cable	
J07	75 ft (22,8 m) of Electronic Remote Sensors armored cable	
J10	100 ft (30,5 m) of Electronic Remote Sensors armored cable	
J12 <sup>(7)</sup>	125 ft (38,1 m) of Electronic Remote Sensors armored cable	
<b>Software configuration</b>		
C1 <sup>(8)</sup>	Custom software configuration (requires Configuration Data Sheet)	★
<b>Gage pressure calibration</b>		
C3	Gage pressure calibration on Rosemount 3051SAL_ _A4 only	★
<b>Alarm limit<sup>(8)</sup></b>		
C4	NAMUR alarm and saturation levels, high alarm	★
C5	NAMUR alarm and saturation levels, low alarm	★
C6	Custom alarm and saturation levels, high alarm (requires C1 and Configuration Data Sheet)	★
C7	Custom alarm and saturation levels, low alarm (requires C1 and Configuration Data Sheet)	★
C8	Low alarm (standard Rosemount alarm and saturation levels)	★
<b>Ground screw</b>		
D4	External ground screw assembly	★

**Table A-7. Rosemount 3051SAL Scalable Advanced Level Transmitter for ERS Applications Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

<b>Conduit plug</b>		
DO	316 SST conduit plug	★
<b>Product certifications</b>		
E1	ATEX Flameproof	★
I1	ATEX Intrinsic Safety	★
N1	ATEX Type n	★
K1	ATEX Flameproof and Intrinsically Safe, Type n, Dust	★
ND	ATEX Dust	★
E4	TIIS Flameproof	★
E5	FM Explosion-proof, Dust Ignition-proof	★
I5	FM Intrinsically Safe, Division 2	★
K5	FM Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2	★
E6 <sup>(8)</sup>	CSA Explosion-proof, Dust Ignition-proof, Division 2	★
I6	CSA Intrinsically Safe	★
K6 <sup>(8)</sup>	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2	★
E7	IECEx Flameproof	★
<b>Product certifications</b>		
I7	IECEx Intrinsic Safety	★
N7	IECEx Type n	★
K7	IECEx Flameproof, Intrinsic Safety, Type n	★
E2	INMETRO Flameproof	★
I2	INMETRO Intrinsically Safe	★
K2	INMETRO Flameproof, Intrinsic Safety, Type n	★
KA <sup>(8)</sup>	ATEX and CSA Flameproof, Intrinsically Safe, Division 2	★
KB <sup>(8)</sup>	FM and CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2	★
KC	FM and ATEX Explosion-proof, Intrinsically Safe, Division 2	★
KD <sup>(8)</sup>	FM, CSA, and ATEX Explosion-proof, Intrinsically Safe	★
<b>Sensor fill fluid<sup>(8)</sup></b>		
L1	Inert sensor fill fluid	★
<b>O-ring</b>		
L2	Graphite-filled PTFE O-ring	★
<b>Bolting material</b>		
L4	Austenitic 316 SST bolts	★
L5 <sup>(9)</sup>	ASTM A 193, Grade B7M bolts	★

**Table A-7. Rosemount 3051SAL Scalable Advanced Level Transmitter for ERS Applications Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

L6	Alloy K-500 bolts	★
L7 <sup>(9)</sup>	ASTM A 453, Class D, Grade 660 bolts	★
L8	ASTM A 193, Class 2, Grade B8M bolts	★
<b>Display type (ERS primary only)<sup>(8)</sup></b>		
M5	PlantWeb LCD display	★
M7	Remote mount LCD display and interface, PlantWeb housing, no cable, SST bracket	★
M8	Remote mount LCD display and interface, PlantWeb housing, 50 ft. (15,2 m) cable, SST bracket	★
M9	Remote mount LCD display and interface, PlantWeb housing, 100 ft. (30,5 m) cable, SST bracket	★
<b>Special procedures</b>		
<b>Pressure testing</b>		
P1	Hydrostatic testing with certificate	
<b>Special cleaning</b>		
P2	Cleaning for special services	
P3	Cleaning for less than 1 PPM Chlorine/Fluorine	
<b>Special certifications</b>		
<b>Calibration certification</b>		
Q4	Calibration certificate	★
QP	Calibration certificate with tamper evident seal	★
<b>Material traceability certification</b>		
Q8	Material traceability certification per EN 10204 3.1	★
<b>Toolkit performance reports<sup>(10)</sup></b>		
QZ	Remote seal system performance calculation report	★
<b>Transient protection<sup>(8)</sup></b>		
T1	Transient terminal block	★
<b>Typical model number: 3051SAL 1 P G 4A A 1A 1 0 20 D FF 7 1 DA 0 0 M5</b>		

1. The pressure range should be specified based on the maximum static pressure, not differential pressure.
2. At ambient pressure of 14.7 psia (1 bar-a) and ambient temperature of 70 °F (21 °C). Temperature limits are reduced in vacuum service and may be limited by seal selection.
3. Maximum process temperature is limited by heat transfer to the transmitter electronics and must be further derated if ambient, temperature exceeds 70 °F (21 °C).
4. This is a food grade fill fluid.
5. Not suitable for vacuum applications.
6. Maximum cable distance for SIS installations. See section "6.1 Safety Instrumented Systems (SIS) Certification" for more information.
7. Maximum cable distance for IS (Intrinsically safe) installations. Other options may not be valid at longer distances.
8. Not available with M20 or G<sup>1</sup>/<sub>2</sub> conduit entry size.
9. Materials of construction comply with metallurgical requirements highlighted within NACE MR 0175/ISO 15156 for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR 0103 for sour refining environments.
10. The QZ report quantifies the performance of the entire ERS System. One report is provided per ERS System. The QZ option is specified on the primary transmitter (Configuration Type code P).



### Direct mount seals for Rosemount 3051SAL Flush Flanged (FF) Seal

- Most common seal
- Good for use in general applications
- Easy installation on flanged connections ranging from 2-in. (DN 50) to 4-in. (DN 100)

**Table A-8. FF Flush Flanged Seal Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Model	Process connection			
FF	Flush flanged seal			
<b>Process connection size</b>				
G	2-in./DN 50/50A			★
7	3-in./80A			★
J	DN 80			★
9	4-in./DN 100/100A			★
<b>Flange/pressure rating</b>				
1	ANSI/ASME B16.5 Class 150			★
2	ANSI/ASME B16.5 Class 300			★
4	ANSI/ASME B16.5 Class 600			★
G	PN 40 per EN 1092-1			★
A	10K per JIS B2238			
B	20K per JIS B2238			
D	40K per JIS B2238			
E	PN 10/16 per EN 1092-1, available with DN 100 only			
<b>Materials of construction</b>				
	Isolating diaphragm	Upper housing	Flange	
CA	316L SST	316L SST	CS	★
DA	316L SST	316L SST	316 SST	★
CB <sup>(1)</sup>	Alloy C-276	316L SST	CS	★
DB <sup>(1)</sup>	Alloy C-276	316L SST	316 SST	★
CC	Tantalum	316L SST	CS	★
DC	Tantalum	316L SST	316 SST	★
<b>Flushing connection ring (lower housing)<sup>(2)</sup></b>				
0	None			★
A	316 SST			★
B	Alloy C-276			★

**Table A-8. FF Flush Flanged Seal Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Flushing connection quantity and size		
0	None	★
1	One 1/4-18 NPT flushing connection	★
3	Two 1/4-18 NPT flushing connections	★
7	One 1/2-14 NPT flushing connection	★
9	Two 1/2-14 NPT flushing connections	★

**Options (include with selected model number)**

Cold temperature remote seal applications		
SB	Extra fill fluid for cold temperature applications	
Remote seal diaphragm thickness <sup>(3)</sup>		
SC	0.006-in. (150 μm) diaphragm thickness	
Flushing connection ring plugs		
SD	Alloy C-276 plug(s) for flushing connection(s)	★
SG	SST plug(s) for flushing connection(s)	★
SH	SST drain/vent(s) for flushing connection(s)	★
Flushing connection ring gaskets		
SJ	PTFE gasket	
SK	Barium Sulfate-filled PTFE gasket	
SN	GRAFOIL® gasket	
Additional options		
Remote seal code conformance <sup>(4)</sup>		
ST	Wetted material compliance per NACE MR 0175/ISO 15156, MR 0103	
Remote seal diaphragm coating		
SU <sup>(3)</sup>	0.001-in. ±0.0002-in. (25 μm ±5 μm) gold plated diaphragm	
SV <sup>(5)</sup>	PTFE coated diaphragm for non-stick purposes	

Complete the Rosemount 3051SAL model number by specifying options as needed:

page 92	ERS Transmitter options	
---------	-------------------------	--

1. Not available with option code SC.
2. Supplied with Thermo Tork TN9000 gasket.
3. Not available with Tantalum diaphragms (Material of Construction codes CC and DC).
4. Materials of construction comply with metallurgical requirements highlighted within NACE MR 0175/ISO 15156 for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR 0103 for sour refining environments.
5. Not available with transmitter option code Q8 (Material Traceability per EN 10204 3.1)



**Extended Flanged (EF) Seal**

- Good for use in viscous applications with plugging issues
- Seal diaphragm installed flush with inner tank wall to prevent process plugging
- Easy installation on 3-in. (DN 80) and 4-in. (DN 100) flanged connections

**Table A-9. EF Extended Flanged Seal Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Model	Process connection			
EF	Extended flanged seal			
<b>Process connection size</b>				
7	3-in./DN 80			★
9	4-in./DN 100			★
<b>Flange/pressure rating</b>				
1	Class 150 per ANSI/ASME B16.5			★
2	Class 300 per ANSI/ASME B16.5			★
4	Class 600 per ANSI/ASME B16.5			★
G	PN 40 per EN 1092-1			★
A	10K per JIS B2238			
B	20K per JIS B2238			
D	40K per JIS B2238			
E	PN 10/16 per EN 1092-1			
<b>Materials of construction</b>				
	Isolating diaphragm	Extension/gasket surface	Mounting flange	
CA	316L SST	316L SST	CS	★
DA	316L SST	316L SST	316 SST	★
CB	Alloy C-276	Alloy C-276	CS	★
DB	Alloy C-276	Alloy C-276	316 SST	★
<b>Seal extension length</b>				
20	2-in. (50 mm)			★
40	4-in. (100 mm)			★
60	6-in. (150 mm)			★

**Table A-9. EF Extended Flanged Seal Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

**Options (include with selected model number)**

Cold temperature remote seal applications		
SB	Extra fill fluid for cold temperature applications	★
Remote seal diaphragm thickness		
SC	0.006-in. (150 μm) diaphragm thickness	
Remote seal code conformance		
ST <sup>(1)</sup>	Wetted material compliance per NACE MR 0175/ISO 15156, MR 0103	★
Remote seal diaphragm coating		
SU	0.001-in. ±0.0002-in. (25 μm ±5 μm) gold plated diaphragm	
SV <sup>(2)</sup>	PTFE coated diaphragm for Non-stick purposes	

Complete the Rosemount 3051SAL model number by specifying options as needed:

page 92	ERS Transmitter options	
---------	-------------------------	--

1. Materials of construction comply with metallurgical requirements highlighted within NACE MR 0175/ISO 15156 for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR 0103 for sour refining environments.
2. Not available with transmitter option code Q8 (Material Traceability per EN 10204 3.1)



**Remote Flanged (RF) Seal**

- Designed to improve performance on smaller process connections
- Easy installation on flanged connections ranging from 1- to 1.5-in. (DN 50–DN 40)
- Lower housing/flushing ring required

**Table A-10. RF Remote Flanged Seal Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Model	Process connection			
RF	Remote flanged seal			
<b>Process connection size</b>				
2	1-in.			★
4	1 1/2-in.			★
D	DN 25			★
F	DN 40			★
<b>Flange/pressure rating</b>				
1	Class 150 per ANSI/ASME B16.5			★
2	Class 300 per ANSI/ASME B16.5			★
4	Class 600 per ANSI/ASME B16.5			★
G	PN 40 per EN 1092-1			★
A	10K per JIS B2238			
B	20K per JIS B2238			
D	40K per JIS B2238			
<b>Materials of construction</b>				
	<b>Isolating diaphragm</b>	<b>Upper housing</b>	<b>Flange</b>	
CA	316L SST	316L SST	CS	★
DA	316L SST	316L SST	316 SST	★
CB	Alloy C-276	316L SST	CS	★
DB	Alloy C-276	316L SST	316 SST	★
CC	Tantalum	316L SST	CS	★
DC	Tantalum	316L SST	316 SST	★
<b>Flushing connection ring material (lower housing)<sup>(1)</sup></b>				
A	316L SST			★
B	Alloy C-276			★
D	Plated CS			★

**Table A-10. RF Remote Flanged Seal Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Number of flushing connections		
1	One 1 <sup>1</sup> / <sub>4</sub> -18 NPT flushing connection	★
3	Two 1 <sup>1</sup> / <sub>4</sub> -18 NPT flushing connections	★
5	None	★

**Options (include with selected model number)**

Remote seal diaphragm thickness		
SB	Extra fill fluid for cold temperature applications	★
Remote seal diaphragm thickness <sup>(2)</sup>		
SC	0.006-in. (150 μm) diaphragm thickness	
Remote seal flushing connection plug, drain/vent		
SD	Alloy C-276 plug(s) for flushing connection(s)	★
SG	316 SST plug(s) for flushing connection(s)	★
SH	316 SST drain/vent(s) for flushing connection(s)	★
Remote seal gasket material		
SJ	PTFE gasket (for use with flushing connection ring)	★
SK	Barium sulfate-filled PTFE gasket (for use with flushing connection ring)	
SN	GRAFOIL gasket (for use with flushing connection ring)	
Remote seal code conformance <sup>(3)</sup>		
ST	Wetted material compliance per NACE MR 0175/ISO 15156, MR 0103	★
Remote seal diaphragm coating		
SU <sup>(2)</sup>	0.001-in. ±0.0002-in. (25 μm ±5 μm) gold plated diaphragm	
SV <sup>(4)</sup>	PTFE coated diaphragm for non-stick purposes	

Complete the Rosemount 3051SAL model number by specifying options as needed:

page 92	ERS Transmitter options	
---------	-------------------------	--

1. Supplied with C4401 Aramid fiber gasket.
2. Not available with Tantalum diaphragms (Material of Construction codes CC and DC).
3. Materials of construction comply with metallurgical requirements highlighted within NACE MR 0175/ISO 15156 for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR 0103 for sour refining environments.
4. Not available with transmitter option code Q8 (Material Traceability per EN 10204 3.1)



**Remote Threaded (RT) Seal**

- For use with threaded process connections (1/4-18 to 1-11.5 NPT)
- Rated for use in high-pressure applications (up to 2500 PSI)
- Optional flushing connections available

**Table A-11. RT Remote Threaded Seal Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Process connection style				
RT	Remote threaded seal			★
Process connection size				
3	1/2-14 NPT			★
4	3/4-14 NPT			★
5	1-11.5 NPT			★
1	1/4-18 NPT			
Pressure rating				
0	2500 psi			★
Isolating diaphragm material		Upper housing material	Flange	
CA	316L SST	316L SST	CS	★
DA	316L SST	316L SST	316 SST	★
CB	Alloy C-276	316L SST	CS	★
DB	Alloy C-276	316L SST	316 SST	★
CC	Tantalum	316L SST	CS	★
DC	Tantalum	316L SST	316 SST	★
Flushing connection ring material (lower housing) <sup>(1)(2)</sup>				
A	316L SST			★
B	Alloy C-276			★
D	Plated CS			
Number of flushing connections				
1	One 1/4-in. flushing connection			★
3	Two 1/4-in. flushing connection			★
5	No flushing connection			★

**Table A-11. RT Remote Threaded Seal Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Options (include with selected model number)

Remote seal diaphragm thickness		
SB	Extra fill fluid for cold temperature applications	★
Remote seal diaphragm thickness <sup>(3)</sup>		
SC	0.006-in. (150 μm) diaphragm thickness	
Remote seal flushing plug, drain/vent		
SD	Alloy C-276 plug(s) for flushing connection(s)	★
SG	316 SST plug(s) for flushing connection(s)	★
SH	316 SST drain/vent(s) for flushing connection(s)	★
Remote seal gasket material		
SJ	PTFE gasket (for use with flushing connection ring)	★
SN	GRAFOIL gasket (for use with flushing connection ring)	★
SR	Ethylene propylene gasket (for use with flushing connection ring)	★
SK	Barium sulfate-filled PTFE gasket (for use with flushing connection ring)	
Remote seal bolt		
S3	304 SST bolts	★
S4	316 SST bolts	
Remote seal code conformance <sup>(4)</sup>		
ST	Wetted material compliance per NACE MR 0175/ISO 15156, MR 0103	★
Remote seal diaphragm coating		
SU <sup>(3)</sup>	0.001-in. ±0.0002-in. (25 μm ±5 μm) gold plated diaphragm	
SV <sup>(5)</sup>	PTFE coated diaphragm for non-stick purposes	

Complete the Rosemount 3051SAL model number by specifying options as needed:

page 92	ERS Transmitter options	
---------	-------------------------	--

1. Supplied with C4401 Aramid fiber gasket.
2. Flushing Connection Ring/Lower Housing assembly bolts provided as standard are carbon steel.
3. Not available with Tantalum diaphragms (Material of Construction codes CC and DC).
4. Materials of construction comply with metallurgical requirements highlighted within NACE MR 0175/ISO 15156 for sour oil field production environments. Environmental limits apply to certain materials. Consult latest standard for details. Selected materials also conform to NACE MR 0103 for sour refining environments.
5. Not available with transmitter option code Q8 (Material Traceability per EN 10204 3.1).



**Hygienic Tri Clamp (SC) Seal**

- Good for use in hygienic applications
- Easy installation on Tri-Clover style Tri Clamp connections (1½-in. to 3-in.)
- Conforms to 3-A standard 74-03

**Table A-12. SC Hygienic Tri-Clover Style Tri Clamp Seal Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Process connection <sup>(1)</sup>			
SC	Tri-Clover style Tri Clamp seal		★
Process connection size			
3 <sup>(2)</sup>	1½-in.		★
5 <sup>(2)</sup>	2-in.		★
7	3-in.		★
Maximum working pressure			
0	1000 PSI		★
Isolating diaphragm material		Upper housing material	
LA00	316L SST	316L SST	★
LB00	Alloy C-276	316L SST	

**Options (include with selected model number)**

Diaphragm surface finish and polishing			
R6	Electropolishing		
Remote seal diaphragm surface finish			
RD	10 µin. (0.25 µm) R <sub>a</sub> diaphragm surface finish		
RG	15 µin. (0.375 µm) R <sub>a</sub> diaphragm surface finish		
RH	20 µin. (0.5 µm) R <sub>a</sub> diaphragm surface finish		
Surface finish certification			
Q16	Surface finish certification for hygienic remote seals		★

Complete the Rosemount 3051SAL model number by specifying options as needed:

page 92	ERS Transmitter options
---------	-------------------------

1. Clamp and gasket furnished by user. The maximum working pressure is dependent upon the clamp pressure rating.
2. Consult factory for calibrated spans lower than 5 psi (345 mbar).



**Hygienic Tank Spud (SS) Seal**

- Commonly used in hygienic level applications
- Seal diaphragm installed flush with inner tank wall
- Conforms to 3-A standard 74-03

**Table A-13. SS Hygienic Tank Spud Seal Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Process connection <sup>(1)</sup>			
SS	Hygienic tank spud seal		★
Process connection size			
A	4-in. Sch. 5 Tri Clamp		★
Maximum working pressure (clamp rating)			
0	600 PSI (41 bar)		★
Upper housing			
A	316L SST		★
Diaphragm and wetted, extension material			
	Diaphragm and wetted	Extension	
AL <sup>(2)</sup>	316L SST	316L SST	★
BB	Alloy C-276	316L SST	
Extension length			
2	2 in. (50 mm) extension		★
6	6 in. (150 mm) extension		★

**Options (include with selected model number)**

Remote seal diaphragm thickness			
SC	0.006-in. (150 μm) diaphragm thickness		
Tank spud included with shipment			
S1	Tank spud included with shipment		★
Remote seal diaphragm polishing			
R6	Electropolishing		
Remote seal diaphragm surface finish			
RH	20 μin. (0.5 μm) R <sub>a</sub> diaphragm surface finish		
RG <sup>(3)</sup>	15 μin. (0.375 μm) R <sub>a</sub> diaphragm surface finish		

**Table A-13. SS Hygienic Tank Spud Seal Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

**Additional options**

Surface finish certification		
Q16	Surface finishing certification for hygienic remote seals	★

Complete the Rosemount 3051SAL model number by specifying options as needed:

page 92	ERS Transmitter options
---------	-------------------------

1. Clamp and Ethylene Propylene O-ring (conforms to 3-A standard 74 and USP class VI) supplied.
2. Diaphragm brazed and TIG-welded to extension.
3. Require Option code R6 (Electropolishing).



**Rosemount 300 ERS Transmitter Housing Kit**

- Housing kit for Rosemount 3051SAM and 3051SAL ERS Transmitters
- Upgrade an existing Rosemount 3051S Transmitter to an ERS configuration

**Table A-14. Rosemount 300 ERS Transmitter Housing Kit Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Model				
300ERS	Housing kit for Rosemount 3051SAM and 3051SAL Electronic Remote Sensor Transmitter			
Configuration type				
P	Electronic Remote Sensor - Primary			★
S	Electronic Remote Sensor - Secondary			★
Housing style				
		Material	Conduit entry	
Housing for ERS Primary - Configuration Type P				
1A	PlantWeb housing	Aluminum	1/2-14 NPT	★
1B	PlantWeb housing	Aluminum	M20 x 1.5 (CM20)	★
1J	PlantWeb housing	SST	1/2-14 NPT	★
1K	PlantWeb housing	SST	M20 x 1.5 (CM20)	★
3A	Remote mount display housing	Aluminum	1/2-14 NPT	★
3B	Remote mount display housing	Aluminum	M20 x 1.5 (CM20)	★
3J	Remote mount display housing	SST	1/2-14 NPT	★
Housing for ERS Secondary - Configuration Type S				
2A	Junction box housing	Aluminum	1/2-14 NPT	★
2B	Junction box housing	Aluminum	M20 x 1.5 (CM20)	★
2J	Junction box housing	SST	1/2-14 NPT	★
Housing for ERS Primary - Configuration Type P				
1C	PlantWeb housing	Aluminum	G1/2	
1L	PlantWeb housing	SST	G1/2	
3C	Remote mount display housing	Aluminum	G1/2	
Housing for ERS Secondary - Configuration Type S				
2C	Junction box housing	Aluminum	G1/2	
Transmitter output				
A	4-20 mA with digital signal based on HART Protocol			★

**Table A-14. Rosemount 300 ERS Transmitter Housing Kit Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

**Options (Include with selected model number)**

<b>Electronic remote sensor connection cable</b>		
R02	25 ft (7,62 m) of Electronic Remote Sensors cable (gray color)	
R05	50 ft. (15,2 m) of Electronic Remote Sensors cable (gray color)	★
R10	100 ft. (30,5 m) of Electronic Remote Sensors cable (gray color)	★
R15	150 ft. (45,72 m) of Electronic Remote Sensors cable (gray color)	★
R20 <sup>(1)</sup>	200 ft (60,96 m) of Electronic Remote Sensors cable (gray color)	
R22 <sup>(2)</sup>	225 ft (68,58 m) of Electronic Remote Sensors cable (gray color)	
R30	300 ft (91,44 m) of Electronic Remote Sensors cable (gray color)	
R40	400 ft (121,92 m) of Electronic Remote Sensors cable (gray color)	
R50	500 ft (152,4 m) of Electronic Remote Sensors cable (gray color)	
H02	25 ft (7,62 m) of Electronic Remote Sensors cable (blue color)	
H05	50 ft (15,2 m) of Electronic Remote Sensors cable (blue color)	
H10	100 ft (30,5 m) of Electronic Remote Sensors cable (blue color)	
H15	150 ft (45,7 m) of Electronic Remote Sensors cable (blue color)	
H20 <sup>(1)</sup>	200 ft (60,96 m) of Electronic Remote Sensors cable (blue color)	
H22 <sup>(2)</sup>	225 ft (68,58 m) of Electronic Remote Sensors cable (blue color)	
J02	25 ft (7,62 m) of Electronic Remote Sensors armored cable	
J05	50 ft (15,2 m) of Electronic Remote Sensors armored cable	
J07	75 ft (22,8 m) of Electronic Remote Sensors armored cable	
J10	100 ft (30,5 m) of Electronic Remote Sensors armored cable	
J12 <sup>(2)</sup>	125 ft (38,1 m) of Electronic Remote Sensors armored cable	
<b>Special configuration (software)<sup>(3)</sup></b>		
C4	NAMUR alarm and saturation levels, high alarm	★
C5	NAMUR alarm and saturation levels, low alarm	★
C6	Custom alarm and saturation levels, high alarm	★
C7	Custom alarm and saturation levels, high alarm	★
C8	Low alarm (standard Rosemount alarm and saturation levels)	★
<b>Special configuration (hardware)</b>		
D4	External ground screw assembly	★
<b>Product approval</b>		
E1	ATEX Flameproof	★
E2	INMETRO Flameproof	★
E4	TIIS Flameproof	★
E5	FM Explosion-proof, Dust Ignition-proof	★

**Table A-14. Rosemount 300 ERS Transmitter Housing Kit Ordering Information**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

E6	CSA Explosion-proof, Dust Ignition-proof, Division 2	★
E7	IECEX Flameproof	★
I1	ATEX Intrinsic Safety	★
I2	INMETRO Intrinsically Safe	★
I5	FM Intrinsically Safe, Division 2	★
I6	CSA Intrinsically Safe	★
I7	IECEX Intrinsic Safety	★
K1	ATEX Flameproof and Intrinsically Safe, Type n, Dust	★
K2	INMETRO Flameproof, Intrinsic Safety, Type n	★
K5	FM Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2	★
K6	CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2	★
K7	IECEX Flameproof, Intrinsic Safety, Type n	★
KA	ATEX and CSA Flameproof, Intrinsically Safe, Division 2	★
KB	FM and CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Division 2	★
KC	FM and ATEX Explosion-proof, Intrinsically Safe, Division 2	★
<b>Product approval</b>		
KD	FM, CSA, and ATEX Explosion-proof, Intrinsically Safe, Division 2	★
N1	ATEX Type n	★
N7	IECEX Type n	★
ND	ATEX Dust	★
<b>Digital display (ERS primary configuration only)<sup>(3)</sup></b>		
M5	PlantWeb LCD display	★
M7	Remote mount LCD display interface, PlantWeb housing, no cable, SST bracket	★
M8	Remote mount LCD display interface, PlantWeb housing, 50 ft. (15,2 m) cable, SST bracket	★
M9	Remote mount LCD display interface, PlantWeb housing, 100 ft. (30,5 m) cable, SST bracket	★
<b>Terminal block</b>		
T1	Transient protection	★

1. Maximum cable distance for SIS installations. See section "6.1 Safety Instrumented Systems (SIS) Certification" for more information.
2. Maximum cable distance for IS (Intrinsically safe) installations. Other options may not be valid at longer distances.
3. Not available with Configuration Type S.

## A.6 Spare parts

<b>Sensor modules</b>	
See Rosemount 3051S_C, 3051S_T, and 3051SAL_C ordering tables in the Rosemount 3051S <a href="#">Product Data Sheet</a> for ordering spare Rosemount 3051S sensor modules. Use housing code style 00 in the model number.	
<ul style="list-style-type: none"> <li>Example model number: 3051S1CG4A2000A00</li> </ul>	
<b>Housing assemblies</b>	
See <a href="#">Table A-14 on page 106</a> for ordering spare housing assemblies.	
<ul style="list-style-type: none"> <li>Example model number: 300ERSP1AAM5</li> </ul>	
<b>Electronics board (ERS primary unit only)</b>	
Rosemount 3051S ERS electronics feature board kit	03151-9028-0001
Rosemount 3051S ERS electronics feature board kit for remote display housing	03151-9028-0002
<b>LCD display (ERS primary unit only)</b>	
LCD display with extended aluminum housing cover	00753-9004-0001
LCD display with extended SST housing cover	00753-9004-0004
LCD display only	00753-9004-0002
Aluminum housing cover for LCD display	00753-9004-0003
SST housing cover for LCD display	00753-9004-0005
<b>Terminal blocks</b>	
Terminal block for ERS primary unit	03151-9006-1001
Transient terminal block for ERS primary unit	03151-9006-1002
Terminal block for ERS secondary unit	03151-9000-3001
<b>Covers</b>	
Aluminum electronics cover and O-ring	03151-9030-0001
316L SST electronics cover and O-ring	03151-9030-0002
<b>Miscellaneous housing parts</b>	
External ground screw assembly (Option D4): screw, clamp, washer	03151-9060-0001
Housing V-seal (for both PlantWeb and Junction box housings)	03151-9061-0001
<b>Flanges (for gage/absolute sensor)</b>	
Coplanar flange: Nickel-plated carbon steel	03151-9200-1025
Coplanar flange: 316 SST	03151-9200-1022
Coplanar flange: Cast C-276	03151-9200-1023
Coplanar flange: Cast Alloy 400	03151-9200-1024
Coplanar flange alignment screw (package of 12)	03151-9202-0001
Traditional flange: 316 SST	03151-9203-0002
Traditional flange: Cast C-276	03151-9203-0003
Traditional flange: Cast Alloy 400	03151-9203-0004
Level flange, vertical mount: 2-in. Class 150, SST	03151-9205-0221
Level flange, vertical mount: 2-in. Class 300, SST	03151-9205-0222
Level flange, vertical mount: 3-in. Class 150, SST	03151-9205-0231
Level flange, vertical mount: 3-in. Class 300, SST	03151-9205-0232
Level flange, vertical mount: DN 50, PN 40	03151-9205-1002
Level flange, vertical mount: DN 80, PN 40	03151-9205-1012

<b>Flange adapter kits (each kit contains adapter, bolts, and O-rings [qty 2])</b>	
<b>CS bolts, glass filled PTFE O-rings</b>	
SST adapters	03031-1300-0002
Cast C-276 adapters	03031-1300-0003
Cast Alloy 400 adapters	03031-1300-0004
Ni plated CS adapters	03031-1300-0005
<b>SST bolts, glass filled PTFE O-rings</b>	
SST adapters	03031-1300-0012
Cast C-276 adapters	03031-1300-0013
Cast Alloy 400 adapters	03031-1300-0014
Ni plated CS adapters	03031-1300-0015
<b>Flange adapter kits (each kit contains adapter, bolts, and O-rings [qty 2])</b>	
<b>CS bolts, graphite PTFE O-rings</b>	
SST adapters	03031-1300-0102
Cast C-276 adapters	03031-1300-0103
Cast Alloy 400 adapters	03031-1300-0104
Ni Plated CS adapters	03031-1300-0105
<b>SST bolts, graphite PTFE O-rings</b>	
SST adapters	03031-1300-0112
Cast C-276 adapters	03031-1300-0113
Cast Alloy 400 adapters	03031-1300-0114
Ni plated CS adapters	03031-1300-0115
<b>Flange adapter</b>	
Nickel-plated carbon steel	03151-9259-0005
316 SST	03151-9259-0002
Cast C-276	03151-9259-0003
Cast Alloy 400	03151-9259-0004
<b>Drain/vent kits</b>	
316 SST valve stem and seat kit	03151-9268-0012
Alloy C-276 valve stem and seat kit	03151-9268-0013
Alloy K-500 valve stem and Alloy 400 seat kit	03151-9268-0014
316 SST ceramic ball drain/vent kit	03151-9268-0112
Alloy C-276 ceramic ball drain/vent kit	03151-9268-0113
Alloy 400/K-500 ceramic ball drain/vent kit	03151-9268-0114
<b>O-rings (qty 12)</b>	
Electronics housing, cover	03151-9040-0001
Electronics housing, module	03151-9041-0001
Process flange, glass-filled PTFE	03151-9042-0001
Process flange, graphite-filled PTFE	03151-9042-0002
Flange adapter, glass-filled PTFE	03151-9043-0001
Flange adapter, graphite-filled PTFE	03151-9043-0002
<b>Gland and collar kits</b>	
Gland and collar kits	03151-9250-0001

<b>Mounting brackets</b>	
<b>Mounting brackets for coplanar flange</b>	
B4 bracket, SST, 2-in. pipe mount, SST bolts	03151-9270-0001
<b>Mounting brackets for in-line sensor module</b>	
B4 bracket, SST, 2-in. pipe mount, SST bolts	03151-9270-0002
<b>Mounting brackets</b>	
<b>Mounting brackets for traditional flange</b>	
B1 bracket, 2-in. pipe mount, CS bolts	03151-9272-0001
B2 bracket, panel mount, CS bolts	03151-9272-0002
B3 flat bracket for 2-in. pipe mount, CS bolts	03151-9272-0003
B7 (B1 style bracket with SST bolts)	03151-9272-0007
B8 (B2 style bracket with SST bolts)	03151-9272-0008
B9 (B3 style bracket with SST bolts)	03151-9272-0009
BA (SST B1 bracket with SST bolts)	03151-9272-0011
BC (SST B3 bracket with SST bolts)	03151-9272-0013
<b>Bolt kits</b>	
<b>Coplanar flange bolt kit (44 mm [1.75-in.])</b>	
Carbon steel (set of 4)	03151-9280-0001
316 SST (set of 4)	03151-9280-0002
ANSI/ASTM-A-193-B7M (set of 4)	03151-9280-0003
Alloy K-500 (set of 4)	03151-9280-0004
<b>Coplanar flange/adapter bolt kit (73 mm [2.88-in.])</b>	
Carbon steel (set of 4)	03151-9281-0001
316 SST (set of 4)	03151-9281-0002
ANSI/ASTM-A-193-B7M (set of 4)	03151-9281-0003
Alloy K-500 (set of 4)	03151-9281-0004
<b>Manifold/coplanar flange bolt kit (57 mm [2.25-in.])</b>	
Carbon steel (set of 4)	03151-9282-0001
316 SST (set of 4)	03151-9282-0002
ANSI/ASTM-A-193-B7M (set of 4)	03151-9282-0003
Alloy K-500 (set of 4)	03151-9282-0004
<b>Traditional flange and adapter bolt kit</b>	
Carbon steel (set of 6)	03151-9283-1001
316 SST (set of 6)	03151-9283-1002
ANSI/ASTM-A-193-B7M (set of 6)	03151-9283-1003
Alloy K-500 (set of 6)	03151-9283-1004
<b>Manifold and traditional flange</b>	
Use bolts supplied with manifold	
<b>Vertical mount level flange bolt kit</b>	
Carbon steel (set of 4)	03151-9285-0001
316 SST (set of 4)	03151-9285-0002
<b>ERS communication cable</b>	
25 ft. (7,62 m) of Electronic Remote Sensors cable (gray color)	03151-9101-0025
50 ft. (15,2 m) of Electronic Remote Sensors cable (gray color)	03151-9101-0050
100 ft. (30,5 m) of Electronic Remote Sensors cable (gray color)	03151-9101-0100

150 ft. (45,72 m) of Electronic Remote Sensors cable (gray color)	03151-9101-0150
200 ft (60,96 m) of Electronic Remote Sensors cable (gray color)	03151-9101-0200
225 ft (68,58 m) of Electronic Remote Sensors cable (gray color)	03151-9101-0225
300 ft (91,44 m) of Electronic Remote Sensors cable (gray color)	03151-9101-0300
400 ft (121,92 m) of Electronic Remote Sensors cable (gray color)	03151-9101-0400
500 ft (152,4 m) of Electronic Remote Sensors cable (gray color)	03151-9101-0500
25 ft (7,62 m) of Electronic Remote Sensors cable (blue color)	03151-9101-1025
50 ft (15,2 m) of Electronic Remote Sensors cable (blue color)	03151-9101-1050
100 ft (30,5 m) of Electronic Remote Sensors cable (blue color)	03151-9101-1100
150 ft (45,7 m) of Electronic Remote Sensors cable (blue color)	03151-9101-1150
200 ft (60,96 m) of Electronic Remote Sensors cable (blue color)	03151-9101-1200
225 ft (68,58 m) of Electronic Remote Sensors cable (blue color)	03151-9102-1225
25 ft (7,62 m) of Electronic Remote Sensors armored cable	03151-9102-0025
50 ft (15,2 m) of Electronic Remote Sensors armored cable	03151-9102-0050
75 ft (22,8 m) of Electronic Remote Sensors armored cable	03151-9102-0075
100 ft (30,5 m) of Electronic Remote Sensors armored cable	03151-9102-0100
125 ft (38,1 m) of Electronic Remote Sensors armored cable	03151-9102-0125

# Appendix B Product Certifications

Rev. 1.9

European Directive Information .....	page 113
Ordinary Location Certification .....	page 113
Installing Equipment in North America .....	page 113
USA .....	page 113
Canada .....	page 114
Europe .....	page 114
International .....	page 115
Brazil .....	page 116
China .....	page 117
EAC — Belarus, Kazakhstan, Russia .....	page 119
Japan .....	page 119
Republic of Korea .....	page 119
Combinations .....	page 119
Additional Certifications .....	page 119

## B.1 European Directive Information

A copy of the EU Declaration of Conformity can be found at the end of the Quick Start Guide. The most recent revision of the EU Declaration of Conformity can be found at [Emerson.com/Rosemount](http://Emerson.com/Rosemount).

## B.2 Ordinary Location Certification

As standard, the transmitter has been examined and tested to determine that the design meets the basic electrical, mechanical, and fire protection requirements by a nationally recognized test laboratory (NRTL) as accredited by the Federal Occupational Safety and Health Administration (OSHA).

## B.3 Installing Equipment in North America

The US National Electrical Code (NEC) and the Canadian Electrical Code® (CEC) permit the use of Division marked equipment in Zones and Zone marked equipment in Divisions. The markings must be suitable for the area classification, gas, and temperature class. This information is clearly defined in the respective codes.

## B.4 USA

- E5** FM Explosionproof (XP) and Dust-Ignitionproof (DIP)  
Certificate: 3008216  
Standards: FM Class 3600 – 2011, FM Class 3615 – 2006, FM Class 3616 – 2011, FM Class 3810 – 2005, ANSI/NEMA 250 – 2003

Markings: XP CL I, DIV 1, GP B, C, D; DIP CL II, DIV 1, GP E, F, G; CL III; T5(–50 °C ≤ Ta ≤ +85 °C); Factory Sealed; Type 4X

- I5** FM Intrinsic Safety (IS) and Nonincendive (NI)  
Certificate: 3012350  
Standards: FM Class 3600 – 2011, FM Class 3610 – 2010, FM Class 3611 – 2004, FM Class 3810 – 2005, NEMA® 250 – 2003  
Markings: IS CL I, DIV 1, GP A, B, C, D; CL II, DIV 1, GP E, F, G; Class III; Class 1, Zone 0 AEx ia IIC T4; NI CL 1, DIV 2, GP A, B, C, D; T4(–50 °C ≤ Ta ≤ +70 °C) [HART]; T4(–50 °C ≤ Ta ≤ +60 °C) [Fieldbus]; when connected per Rosemount drawing 03151-1006; Type 4x

### Special Condition for Safe Use (X):

1. The Rosemount™ 3051S/3051S-ERS Pressure Transmitter contains aluminum and is considered to constitute a potential risk of ignition by impact or friction. Care must be taken into account during installation and use to prevent impact and friction.

### Note

Transmitters marked with NI CL 1, DIV 2 can be installed in Division 2 locations using general Division 2 wiring methods or Nonincendive Field Wiring (NIFW). See Drawing 03151-1006.

- IE** FM FISCO  
Certificate: 3012350  
Standards: FM Class 3600 – 2011, FM Class 3610 – 2010, FM Class 3611 – 2004, FM Class 3810 – 2005, NEMA 250 – 2003  
Markings: IS CL I, DIV 1, GP A, B, C, D; (–50 °C ≤ Ta ≤ +60 °C); when connected per Rosemount drawing 03151-1006; Type 4x

**Special Condition for Safe Use (X):**

1. The Rosemount 3051S/3051S-ERS Pressure Transmitter contains aluminum and is considered to constitute a potential risk of ignition by impact or friction. Care must be taken into account during installation and use to prevent impact and friction.

**B.5 Canada**

- E6** CSA Explosionproof, Dust-Ignitionproof, and Division 2 Certificate: 1143113  
Standards: CAN/CSA C22.2 No. 0-10, CSA Std C22.2 No. 25-1966, CSA Std C22.2 No. 30-M1986, CAN/CSA C22.2 No. 94-M91, CSA Std C22.2 No. 142-M1987, CSA Std C22.2 No. 213-M1987, ANSI/ISA 12.27.01-2003, CSA Std C22.2 No. 60529:05  
Markings: Explosionproof Class I, Division 1, Groups B, C, D; Dust-Ignitionproof Class II, Division 1, Groups E, F, G; Class III; suitable for Class I, Zone 1, Group IIB+H2, T5; suitable for Class I, Division 2, Groups A, B, C, D; suitable for Class I, Zone 2, Group IIC, T5; when connected per Rosemount drawing 03151-1013; Type 4x
- I6** CSA Intrinsically Safe Certificate: 1143113  
Standards: CAN/CSA C22.2 No. 0-10, CSA Std C22.2 No. 30-M1986, CAN/CSA C22.2 No. 94-M91, CSA Std C22.2 No. 142-M1987, CSA Std C22.2 No. 157-92, ANSI/ISA 12.27.01-2003, CSA Std C22.2 No. 60529:05  
Markings: Intrinsically Safe Class I, Division 1; suitable for Class 1, Zone 0, IIC, T3C; when connected per Rosemount drawing 03151-1016; Type 4x
- IF** CSA FISCO Certificate: 1143113  
Standards: CAN/CSA C22.2 No. 0-10, CSA Std C22.2 No. 30-M1986, CAN/CSA C22.2 No. 94-M91, CSA Std C22.2 No. 142-M1987, CSA Std C22.2 No. 157-92, ANSI/ISA 12.27.01-2003, CSA Std C22.2 No. 60529:05  
Markings: FISCO Intrinsically Safe Class I, Division 1; suitable for Class I, Zone 0; T3C; when installed per Rosemount drawing 03151-1016 [3051S] 03151-1313 [ERS]; Type 4X

**B.6 Europe**

- E1** ATEX Flameproof Certificate: KEMA 00ATEX2143X  
Standards: EN 60079-0:2012, EN 60079-1: 2007, EN 60079-26:2007 (3051SFx models with RTD are certified to EN60079-0:2006)  
Markings: II 1/2 G Ex d IIC T6...T4 Ga/Gb, T6(-60 °C ≤ Ta ≤ +70°C), T5/T4(-60 °C ≤ Ta ≤ +80 °C)

Temperature class	Process temperature
T6	-60 °C to +70 °C
T5	-60 °C to +80 °C
T4	-60 °C to +120 °C

**Special Conditions for Safe Use (X):**

1. The device contains a thin wall diaphragm. Installation, maintenance and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.
  2. For information on the dimensions of the flameproof joints the manufacturer shall be contacted.
- I1** ATEX Intrinsic Safety Certificate: BAS01ATEX1303X  
Standards: EN 60079-0: 2012, EN 60079-11: 2012  
Markings: II 1 G Ex ia IIC T4 Ga, T4(-60 °C ≤ Ta ≤ +70 °C)

	U <sub>i</sub>	I <sub>i</sub>	P <sub>i</sub>	C <sub>i</sub>	L <sub>i</sub>
SuperModule™	30V	300 mA	1.0 W	30 nF	0
3051S...A; 3051SF...A; 3051SAL...C	30V	300 mA	1.0 W	12 nF	0
3051S...F; 3051SF...F	30V	300 mA	1.3 W	0	0
3051S ...A...M7, M8, or M9; 3051SF ...A...M7, M8, or M9; 3051SAL...C... M7, M8, or M9	30V	300 mA	1.0 W	11.4nF	60 μ H
3051SAL or 3051SAM	30V	300 mA	1.0 W	11.4nF	33 μ H
3051SAL...M7, M8, or M9 3051SAM...M7, M8, or M9	30V	300 mA	1.0 W	11.4nF	93 μ H
RTD Option for 3051SF	5V	500 mA	0.63 W	N/A	N/A

**Special Conditions for Safe Use (X):**

1. The Rosemount 3051S Transmitters fitted with transient protection are not capable of withstanding the 500V test as defined in Clause 6.3.13 of EN 60079-11:2012. This must be taken into account during installation.
  2. The terminal pins of the Rosemount 3051S SuperModule must be provided with a degree of protection of at least IP20 in accordance with IEC/EN 60529.
  3. The Rosemount 3051S enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a zone 0 area.
- IA** ATEX FISCO Certificate: BAS01ATEX1303X  
Standards: EN 60079-0: 2012, EN 60079-11: 2012  
Markings: II 1 G Ex ia IIC T4 Ga, T4(-60 °C ≤ Ta ≤ +70 °C)

Parameters	FISCO
Voltage $U_i$	17.5 V
Current $I_i$	380 mA
Power $P_i$	5.32 W
Capacitance $C_i$	0
Inductance $L_i$	0

**Special Conditions for Safe Use (X):**

1. The Rosemount 3051S Transmitters fitted with transient protection are not capable of withstanding the 500V test as defined in Clause 6.3.13 of EN 60079-11:2012. This must be taken into account during installation.
2. The terminal pins of the Rosemount 3051S SuperModule must be provided with a degree of protection of at least IP20 in accordance with IEC/EN 60529.
3. The Rosemount 3051S enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a zone 0 area.

**ND ATEX Dust**

Certificate: BAS01ATEX1374X

Standards: EN 60079-0: 2012, EN 60079-31: 2009

Markings:  $\text{Ex} \text{II} 1 \text{D Ex ta IIIC T}105^\circ\text{C T}_{500}95^\circ\text{C Da}, (-20^\circ\text{C} \leq \text{Ta} \leq +85^\circ\text{C}), V_{\text{max}} = 42.4 \text{ V}$

**Special Conditions for Safe Use (X):**

1. Cable entries must be used which maintain the ingress protection of the enclosure to at least IP66.
2. Unused cable entries must be filled with suitable blanking plugs which maintain the ingress protection of the enclosure to at least IP66.
3. Cable entries and blanking plugs must be suitable for the ambient temperature range of the apparatus and capable of withstanding a 7J impact test.
4. The SuperModule(s) must be securely screwed in place to maintain the ingress protection of the enclosure(s).

**N1 ATEX Type n**

Certificate: BAS01ATEX3304X

Standards: EN 60079-0: 2012, EN 60079-15: 2010

Markings:  $\text{Ex} \text{II} 3\text{G Ex nA IIC T}5 \text{Gc}, (-40^\circ\text{C} \leq \text{Ta} \leq +85^\circ\text{C}), V_{\text{max}} = 45\text{V}$

**Special Condition for Safe Use (X):**

1. The equipment is not capable of withstanding the 500V insulation test required by clause 6.5 of EN 60079-15:2010. This must be taken into account when installing the equipment.

**Note**

RTD Assembly is not included with the 3051SFx Type n Approval.

**B.7 International**

**E7 IECEx Flameproof and Dust**

Certificate: IECEx KEM 08.0010X (Flameproof)

Standards: IEC 60079-0:2011, IEC 60079-1: 2007, IEC 60079-26:2006 (3051SFx models with RTD are certified to IEC 60079-0:2004)

Markings: Ex d IIC T6...T4 Ga/Gb, T6(-60°C ≤ Ta ≤ +70°C), T5/T4(-60°C ≤ Ta ≤ +80°C)

Temperature class	Process temperature
T6	-60 °C to +70 °C
T5	-60 °C to +80 °C
T4	-60 °C to +120 °C

**Special Conditions for Safe Use (X):**

1. The device contains a thin wall diaphragm. Installation, maintenance and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer’s instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.

2. For information on the dimensions of the flameproof joints the manufacturer shall be contacted.

Certificate: IECEx BAS 09.0014X (Dust)

Standards: IEC 60079-0:2011, IEC 60079-31:2008

Markings: Ex ta IIIC T105 °C T<sub>500</sub>95 °C Da, (-20 °C ≤ Ta ≤ +85 °C), V<sub>max</sub> = 42.4 V

**Special Conditions for Safe Use (X):**

1. Cable entries must be used which maintain the ingress protection of the enclosure to at least IP66.
2. Unused cable entries must be filled with suitable blanking plugs which maintain the ingress protection of the enclosure to at least IP66.
3. Cable entries and blanking plugs must be suitable for the ambient temperature range of the apparatus and capable of withstanding a 7J impact test.
4. The 3051S- SuperModule must be securely screwed in place to maintain the ingress protection of the enclosure.

**I7 IECEx Intrinsic Safety**

Certificate: IECEx BAS 04.0017X

Standards: IEC 60079-0: 2011, IEC 60079-11: 2011

Markings: Ex ia IIC T4 Ga, T4(-60°C ≤ Ta ≤ +70°C)

	U <sub>i</sub>	I <sub>i</sub>	P <sub>i</sub>	C <sub>i</sub>	L <sub>i</sub>
SuperModule	30V	300 mA	1.0 W	30 nF	0
3051S...A; 3051SF...A; 3051SAL...C	30V	300 mA	1.0 W	12 nF	0
3051S...F; 3051SF...F	30V	300 mA	1.3 W	0	0
3051S ...A...M7, M8, or M9; 3051SF ...A...M7, M8, or M9; 3051SAL...C... M7, M8, or M9	30V	300 mA	1.0 W	11.4nF	60 μ H
3051SAL or 3051SAM	30V	300 mA	1.0 W	11.4nF	33 μ H
3051SAL...M7, M8, or M9 3051SAM...M7, M8, or M9	30V	300 mA	1.0 W	11.4nF	93 μ H
RTD Option for 3051SF	5V	500 mA	0.63 W	N/A	N/A

**Special Conditions for Safe Use (X):**

- The Rosemount 3051S Transmitters fitted with transient protection are not capable of withstanding the 500V test as defined in Clause 6.3.13 of EN 60079-11:2012. This must be taken into account during installation.
  - The terminal pins of the Rosemount 3051S SuperModule must be provided with a degree of protection of at least IP20 in accordance with IEC/EN 60529.
  - The Rosemount 3051S enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a zone 0 area.
- I7** IECEx Intrinsic Safety – Group I - Mining (I7 with Special A0259)  
Certificate: IECEx TSA 14.0019X  
Standards: IEC 60079-0: 2011, IEC 60079-11: 2011  
Markings: Ex ia I Ma (-60 °C ≤ Ta ≤ +70 °C)

	U <sub>i</sub>	I <sub>i</sub>	P <sub>i</sub>	C <sub>i</sub>	L <sub>i</sub>
SuperModule	30V	300 mA	1.0 W	30 nF	0
3051S...A; 3051SF...A; 3051SAL...C	30V	300 mA	1.0 W	12 nF	0
3051S...F; 3051SF...F	30V	300 mA	1.3 W	0	0
3051S ...A...M7, M8, or M9; 3051SF ...A...M7, M8, or M9; 3051SAL...C... M7, M8, or M9	30V	300 mA	1.0 W	11.4nF	60 μ H
3051SAL or 3051SAM	30V	300 mA	1.0 W	11.4nF	33 μ H
3051SAL...M7, M8, or M9 3051SAM...M7, M8, or M9	30V	300 mA	1.0 W	11.4nF	93 μ H
RTD Option for 3051SF	5V	500 mA	0.63 W	N/A	N/A

**Special Conditions for Safe Use (X):**

- If the apparatus is fitted with optional 90 V transient suppressor, it is not capable of withstanding the 500 V insulation test required by IEC60079-11. This must be taken into account when installing the apparatus.
- It is a condition of safe use that the above table input parameters shall be taken into account during installation.

- It is a condition of manufacture that only the apparatus fitted with housing, covers and sensor module housing made out of stainless steel are used in Group I applications.

**I6** IECEx FISCO

Certificate: IECEx BAS 04.0017X  
Standards: IEC 60079-0: 2011, IEC 60079-11: 2011  
Markings: Ex ia IIC T4 Ga, T4(-60 °C ≤ Ta ≤ +70 °C)

Parameters	FISCO
Voltage U <sub>i</sub>	17.5 V
Current I <sub>i</sub>	380 mA
Power P <sub>i</sub>	5.32 W
Capacitance C <sub>i</sub>	0
Inductance L <sub>i</sub>	0

**Special Conditions for Safe Use (X):**

- The Rosemount 3051S Transmitters fitted with transient protection are not capable of withstanding the 500V test as defined in Clause 6.3.13 of EN 60079-11:2012. This must be taken into account during installation.
- The terminal pins of the Rosemount 3051S SuperModule must be provided with a degree of protection of at least IP20 in accordance with IEC/EN 60529.
- The Rosemount 3051S enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a zone 0 area.

**N7** IECEx Type n

Certificate: IECEx BAS 04.0018X  
Standards: IEC 60079-0: 2011, IEC 60079-15: 2010  
Markings: Ex nA IIC T5 Gc, (-40 °C ≤ Ta ≤ +85 °C)

**Special Condition for Safe Use (X):**

- The equipment is not capable of withstanding the 500V insulation test required by clause 6.5 of EN 60079-15:2010. This must be taken into account when installing the equipment.

## B.8 Brazil

**E2** INMETRO Flameproof

Certificate: UL-BR15.0393X  
Standards: ABNT NBR IEC 60079-0:2008 + Corrigendum 1:2011, ABNT NBR IEC 60079-1:2009 + Corrigendum 1:2011, ABNT NBR IEC 60079-26:2008 + Corrigendum 1: 2008  
Markings: Ex d IIC T\* Ga/Gb, T6(-60 °C ≤ Ta ≤ +70 °C), T5/T4(-60 °C ≤ Ta ≤ +80 °C), IP66

**Special Conditions for Safe Use (X):**

1. The device contains a thin wall diaphragm. Installation, maintenance and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer’s instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.
2. For information on the dimensions of the flameproof joints, the manufacturer shall be contacted.

**I2/IB INMETRO Intrinsic Safety/FISCO**

Certificate: UL-BR 15.0392X

Standards: ABNT NBR IEC 60079-0:2008 + Corrigendum

1:2011, ABNT NBR IEC 60079-11:2009

Markings: Ex ia IIC T4 Ga, T4(-60 °C ≤ Ta ≤ +70 °C), IP66

**Special Condition for Safe Use (X):**

1. The 3051S enclosure may be made of aluminium alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in areas that requires EPL Ga.

	U <sub>i</sub>	I <sub>i</sub>	P <sub>i</sub>	C <sub>i</sub>	L <sub>i</sub>
SuperModule	30V	300 mA	1.0 W	30 nF	0
3051S...A; 3051SF...A; 3051SAL...C	30V	300 mA	1.0 W	12 nF	0
3051S...F; 3051SF...F	30V	300 mA	1.3 W	0	0
3051S ...F...IB; 3051SF ...F...IB	17.5V	380 mA	5.32 W	0	0
3051S ...A...M7, M8, or M9; 3051SF ...A...M7, M8, or M9; 3051SAL...C... M7, M8, or M9	30V	300 mA	1.0 W	11.4nF	60 μ H
3051SAL or 3051SAM	30V	300 mA	1.0 W	11.4nF	33 μ H
3051SAL...M7, M8, or M9 3051SAM...M7, M8, or M9	30V	300 mA	1.0 W	11.4nF	93 μ H
RTD Option for 3051SF	5V	500 mA	0.63 W	N/A	N/A

**B.9 China**

**E3 China Flameproof and Dust Ignition-proof**

Certificate: 3051S: GYJ16.1249X

3051SFx: GYJ11.1711X

3051S-ERS: GJY15.1406X

Standards: 3051S: GB3836.1-2010, GB3836.2-2010,

GB3836.20-2010, GB12476.1-2013,

GB12476.5-2013

3051SFx: GB3836.1-2010, GB3836.2-2010,

GB3836.20-2010, GB12476.1-2000

3051S-ERS: GB3836.1-2010, GB3836.2-2010,

GB3836.20-2010

Markings: 3051S: Ex d IIC T6...T4; Ex tD A20 T105 °C T<sub>500</sub>

95 °C; IP66

3051SFx: Ex d IIC T5/T6 Ga/Gb; DIP A20 T<sub>A</sub> 105 °C;

IP66

3051S-ERS: Ex d IIC T4~T6 Ga/Gb

**Special Conditions for Safe Use (X):**

1. Only the pressure transmitters, consisting of 3051SC Series, 3051ST Series, 3051SL Series and 300S Series, are certified.
2. The ambient temperature range is (-20~+60) °C.
3. The ambient temperature range for the 3051S in a dust environment is -20 °C ≤ T<sub>a</sub> ≤ 95 °C.
4. The relation between temperature class and maximum temperature of process medium is as follows.

Temperature class	Temperature of process medium
T5	≤ 95 °C
T4	≤ 130 °C
T3	≤ 190 °C

Rosemount 3051S

Temperature class	Ambient temperature	Process temperature
T6	-60 °C ≤ Ta ≤ +70 °C	-60 °C ≤ Ta ≤ +70 °C
T5	-60 °C ≤ Ta ≤ +80 °C	-60 °C ≤ Ta ≤ +80 °C
T4	-60 °C ≤ Ta ≤ +80 °C	-60 °C ≤ Ta ≤ +120 °C

5. The earth connection facility in the enclosure should be connected reliably.
6. During installation, use and maintenance of transmitter, observe the warning “Don’t open the cover when the circuit is alive.”
7. During installation, there should be no mixture harm to flameproof housing.
8. Cable entry, certified by NEPSI with type of protection Ex d IIC in accordance with GB3836.1-2000 and GB3836.2-2000, should be applied when installation in hazardous location. 5 full threads should be in engagement when the cable entry is assembled onto the transmitter. When pressure transmitter is used in the presence of combustible dust, the ingress of protection of the cable entry should be IP66.
9. The diameter of cable should observe the instruction manual of cable entry. The compressing nut should be fastened. The aging of seal ring should be changed in time.
10. Maintenance should be done in non-hazardous location.
11. End users are not permitted to change any components inside.

12. When installation, use and maintenance of transmitter, observe following standards:  
 GB3836.13-1997 “Electrical apparatus for explosive gas atmospheres Part 13: Repair and overhaul for apparatus used in explosive gas atmospheres”  
 GB3836.15-2000 “Electrical apparatus for explosive gas atmospheres Part 15: Electrical installations in hazardous area (other than mines)”  
 GB50257-1996 “Code for construction and acceptance of electric device for explosion atmospheres and fire hazard electrical equipment installation engineering”  
 GB15577-1995 “Safe regulation for explosive dust atmospheres”  
 GB12476.2-2006 “Electrical apparatus for use in the presence of combustible dust – Part 1-2: Electrical apparatus protected by enclosures and surface temperature limitation – Selection, installation and maintenance”

- I3** China Intrinsic Safety  
 Certificate: 3051S: GYJ16.1250X [Mfg USA, China, Singapore]  
 3051SFx: GYJ11.1707X [Mfg USA, China, Singapore]  
 3051S-ERS: GYJ16.1248X [Mfg USA, China, Singapore]  
 Standards: 3051S: GB3836.1-2010, GB3836.4-2010, GB3836.20-2010  
 3051SFx: GB3836.1/4-2010, GB3836.20-2010, GB12476.1-2000  
 3051S-ERS: GB3836.1-2010, GB3836.4-2010, GB3836.20-2010  
 Markings: 3051S, 3051SFx: Ex ia IIC T4 Ga  
 3051S-ERS: Ex ia IIC T4

**Special Conditions for Safe Use (X):**

- Symbol “X” is used to denote specific conditions of use:  
 For output code A and F: This apparatus is not capable of withstanding the 500 V r.m.s. insulation test required by Clause 6.4.12 of GB3836.4-2000.
- The ambient temperature range is:

Output code	Ambient temperature
A	$-50\text{ °C} \leq T_a \leq +70\text{ °C}$
F	$-50\text{ °C} \leq T_a \leq +60\text{ °C}$

3. Intrinsically safe parameters:

Output code	Housing code	Display code	Maximum input voltage: $U_i$ (V)	Maximum input current: $I_i$ (mA)	Maximum input power: $P_i$ (W)	Maximum internal parameters: $C_i$ (nF)	Maximum internal parameter: $L_i$ (H)
A	= 00	/	30	300	1	38	0
A	≠ 00	/	30	300	1	11.4	2.4
A	≠ 00	M7/M8/M9	30	300	1	0	58.2
F	≠ 00	/	30	300	1.3	0	0
F FISCO	≠ 00	/	17.5	500	5.5	0	0

- The product should be used with Ex-certified associated apparatus to establish explosion protection system that can be used in explosive gas atmospheres. Wiring and terminals should comply with the instruction manual of the product and associated apparatus.
- The cable between this product and associated apparatus should be shielded cables (the cables must have insulated shield). The shield has to be grounded reliably in non-hazardous area.
- The product complies to the requirements for FISCO field devices specified in IEC60079-27:2008. For the connection of an intrinsically safe circuit in accordance FISCO model, FISCO parameters of this product are as above.
- End users are not permitted to change any components inside, but to settle the problem in conjunction with manufacturer to avoid damage to the product.
- When installation, use and maintenance of this product, observe the following standards:  
 GB3836.13-1997 “Electrical apparatus for explosive gas atmospheres Part 13: Repair and overhaul for apparatus used in explosive gas atmospheres”  
 GB3836.15-2000 “Electrical apparatus for explosive gas atmospheres Part 15: Electrical installations in hazardous area (other than mines)”  
 GB3836.16-2006 “Electrical apparatus for explosive gas atmospheres Part 16: Inspection and maintenance of electrical installation (other than mines)”  
 GB50257-1996 “Code for construction and acceptance of electric device for explosion atmospheres and fire hazard electrical equipment installation engineering”

- N3** China Type n  
 Certificate: 3051S: GYJ15.1106X [Mfg China]  
 3051SF: GYJ15.1107X [Mfg China]  
 Markings: Ex nA IIC T5 Gc

**Special Conditions for Safe Use (X):**

- The ambient temperature range is:  $-40\text{ °C} \leq T_a \leq 85\text{ °C}$ .
- Maximum input voltage: 45 V

3. Cable glands, conduit or blanking plugs, certified by NEPSI with Ex e or Ex n protection type and IP66 degree of protection provided by enclosure, should be used on external connections and redundant cable entries.
4. Maintenance should be done in non-hazardous location.
5. End users are not permitted to change any components inside, but to settle the problem in conjunction with manufacturer to avoid damage to the product.
6. When installation, use and maintenance of this product, observe following standards:  
 GB3836.13-1997 “Electrical apparatus for explosive gas atmospheres Part 13: Repair and overhaul for apparatus used in explosive gas atmospheres”  
 GB3836.15-2000 “Electrical apparatus for explosive gas atmospheres Part 15: Electrical installations in hazardous area (other than mines)”  
 GB3836.16-2006 “Electrical apparatus for explosive gas atmospheres Part 16: Inspection and maintenance of electrical installation (other than mines)”  
 GB50257-1996 “Code for construction and acceptance of electric device for explosion atmospheres and fire hazard electrical equipment installation engineering”.

### B.10 EAC — Belarus, Kazakhstan, Russia

- EM** Technical Regulation Customs Union (EAC) Flameproof  
 Certificate: RU C-US.AA87.B.00094  
 Markings: Ga/Gb Ex d IIC T6...T4 X
- IM** Technical Regulation Customs Union (EAC) Intrinsic Safety  
 Certificate: RU C-US.AA87.B.00094  
 Markings: 0Ex ia IIC T4 Ga X

### B.11 Japan

- E4** Japan Flameproof  
 Certificate: TC15682, TC15683, TC15684, TC15685, TC15686, TC15687, TC15688, TC15689, TC15690, TC17099, TC17100, TC17101, TC17102, TC18876  
 3051ERS: TC20215, TC20216, TC20217, TC20218, TC20219, TC20220, TC20221  
 Markings: Ex d IIC T6

### B.12 Republic of Korea

- EP** Republic of Korea Flameproof  
 Certificate: 12-KB4BO-0180X [Mfg USA], 11-KB4BO-0068X [Mfg Singapore]  
 Markings: Ex d IIC T5 or T6
- IP** Republic of Korea Intrinsic Safety  
 Certificate: 12-KB4BO-0202X [HART – Mfg USA], 12-KB4BO-0204X [Fieldbus – Mfg USA], 12-KB4BO-0203X [HART – Mfg Singapore], 13-KB4BO-0296X [Fieldbus – Mfg Singapore]  
 Markings: Ex ia IIC T4

### B.13 Combinations

- K1** Combination of E1, I1, N1, and ND
- K2** Combination of E2 and I2
- K5** Combination of E5 and I5
- K6** Combination of E6 and I6
- K7** Combination of E7, I7, and N7
- KA** Combination of E1, I1, E6, and I6
- KB** Combination of E5, I5, E6, and I6
- KC** Combination of E1, I1, E5, and I5
- KD** Combination of E1, I1, E5, I5, E6, and I6
- KG** Combination of IA, IE, IF, and IG
- KM** Combination of EM and IM
- KP** Combination of EP and IP

### B.14 Additional Certifications

- SBS** American Bureau of Shipping (ABS) Type Approval  
 Certificate: 00-HS145383-6-PDA  
 Intended Use: Measure gauge or absolute pressure of liquid, gas or vapor applications on ABS classed vessels, marine, and offshore installations.
- SBV** Bureau Veritas (BV) Type Approval  
 Certificate: 31910 BV  
 Requirements: Bureau Veritas Rules for the Classification of Steel Ships  
 Application: Class Notations: AUT-UMS, AUT-CCS, AUT-PORT and AUT-IMS
- SDN** Det Norske Veritas (DNV) Type Approval  
 Certificate: A-14186  
 Intended Use: Det Norske Veritas’ Rules for Classification of Ships, High Speed & Light Craft, and Det Norske Veritas’ Offshore Standards  
 Application:

Location classes	
Type	3051S
Temperature	D
Humidity	B
Vibration	A
EMC	A
Enclosure	D/IP66/IP68

- SLL** Lloyds Register (LR) Type Approval  
 Certificate: 11/60002  
 Application: Environmental categories ENV1, ENV2, ENV3, and ENV5
- D3** Custody Transfer – Measurement Canada Accuracy Approval [3051S Only]  
 Certificate: AG-0501, AV-2380C





## Global Headquarters

### Emerson Process Management

6021 Innovation Blvd.

Shakopee, MN 55379, USA

+1 800 999 9307 or +1 952 906 8888

+1 952 949 7001

RFQ.RMD-RCC@EmersonProcess.com

## North America Regional Office

### Emerson Process Management

8200 Market Blvd.

Chanhassen, MN 55317, USA

+1 800 999 9307 or +1 952 906 8888

+1 952 949 7001

RMT-NA.RCCRFQ@Emerson.com

## Latin America Regional Office

### Emerson Process Management

1300 Concord Terrace, Suite 400

Sunrise, FL 33323, USA

+1 954 846 5030

+1 954 846 5121

RFQ.RMD-RCC@EmersonProcess.com

## Europe Regional Office

### Emerson Process Management Europe GmbH

Neuhofstrasse 19a P.O. Box 1046

CH 6340 Baar

Switzerland

+41 (0) 41 768 6111

+41 (0) 41 768 6300

RFQ.RMD-RCC@EmersonProcess.com

## Asia Pacific Regional Office

### Emerson Process Management Asia Pacific Pte Ltd

1 Pandan Crescent

Singapore 128461

+65 6777 8211

+65 6777 0947

Enquiries@AP.EmersonProcess.com

## Middle East and Africa Regional Office

### Emerson Process Management

Emerson FZE P.O. Box 17033

Jebel Ali Free Zone - South 2

Dubai, United Arab Emirates

+971 4 8118100

+971 4 8865465

RFQ.RMTMEA@Emerson.com



Linkedin.com/company/Emerson-Automation-Solutions



Twitter.com/Rosemount\_News



Facebook.com/Rosemount



Youtube.com/user/RosemountMeasurement



Google.com/+RosemountMeasurement

Standard Terms and Conditions of Sale can be found at:

[www.Emerson.com/en-us/Terms-of-Use](http://www.Emerson.com/en-us/Terms-of-Use)

The Emerson logo is a trademark and service mark of Emerson Electric Co. PlantWeb, Scalable, AMS, Tri-Loop, THUM, SuperModule, Electronic Remote Sensor (ERS) System, Coplanar, Scalable, Rosemount, and Rosemount logotype are trademarks of Emerson.

HART is a registered trademark of the FieldComm Group.

NEMA is a registered trademark and service mark of the National Electrical Manufacturers Association.

National Electrical Code is a registered trademark of National Fire Protection Association, Inc.

GRAGFOIL is a registered trademark of Graftech International Holdings Inc.

SYLTHERM is a trademark of Dow Corning Corporation.

Neobee is a registered trademark of Stepan Specialty Products, LLC.

All other marks are the property of their respective owners.

© 2016 Emerson. All rights reserved.