Installation and Maintenance Part Number: E2K-402-0313, Rev. A Release: Mar 2013

Manual E796 2000 M2CP



READ THIS MANUAL COMPLETELY

When communicating with BETTIS for replacement parts or for technical questions, we MUST have actuator nameplate information, including Job, Serial, and Model numbers. This allows us to check records of BETTIS equipment furnished.

When ordering parts, specify repair part by BETTIS part number and description from drawings furnished with actuator.

BETTIS Parts Department Fax (281) 261-3834





Table of Contents

1.1 DO 1 1.2 DONT 1 1.3 Lubrication 1 1.4 Maintenance 2 1.5 Pressure Relief 2 1.6 Short Term Storage 2 1.7 Long Term Storage (Stored more than one year from shipment) 3 Section 2: M2CP Electrical Hook-Up 4 2.1 Electrical Hook-Up 4 2.1 Electrical Hook-Up 4 Section 3: Assembly To Valves 5 3.1 Threaded Valve Stem 5 3.2 Quarter Turn Valve 7 Section 4: Limit Switch Setting Instructions 9 4.1 TO SET OPEN LIMIT SWITCH (LSO) 9 4.2 SET (LSC) CLOSE LIMIT SWITCH (LSO) 9 4.3 TO SET INTERMEDIATE SWITCH (LSA OR LSB), if included. 12 4.4 TORQUE SWITCH CALIBRATION 12 4.5 TORQUE SWITCH CALIBRATION 12 4.6 To set Open Torque Switch (TSO) 13 4.7 Torque Switch Rotation Limit 13 5.2 </th <th>Section 1: Introduction</th> <th>1</th>	Section 1: Introduction	1
1.3 Lubrication 1 1.4 Maintenance 2 1.5 Pressure Relief. 2 1.6 Short Term Storage (Stored more than one year from shipment) 3 Section 2: M2CP Electrical Hook-Up 4 2.1 Electrical Hook-Up 4 Section 3: Assembly To Valves 5 3.1 Threaded Valve Stem 5 3.2 Quarter Turn Valve 7 Section 4: Limit Switch Setting Instructions 9 4.1 TO SET OPEN LIMIT SWITCH (LSO) 9 4.2 SET (LSC) CLOSE LIMIT SWITCH (LSA) OR LSB), if included. 12 4.4 TORQUE SEATED VALVES 12 4.5 TORQUE SWITCH CALIBRATION 12 4.6 To Set Open Torque Switch (TSO) 13 4.7 Torque Switch Rotation Limit 13 Section 5: Multi-turn Actuators 14 5.1 Calibration 14 5.2 Quarter-Turn Model P, Q, R & M 15 Section 6: Futronic II 83957 16 6.1 Calibration 16	1.1 DO 1	1
1.4 Maintenance 2 1.5 Pressure Relief. 2 1.6 Short Term Storage 2 1.7 Long Term Storage (Stored more than one year from shipment) 3 Section 2: M2CP Electrical Hook-Up 4 2.1 Electrical Hook-Up 4 Section 3: Assembly To Valves 3.1 Threaded Valve Stem 5 3.2 Quarter Turn Valve 7 Section 4: Limit Switch Setting Instructions 9 4.1 TO SET OPEN LIMIT SWITCH (LSO) 9 4.2 SET (LSC) CLOSE LIMIT SWITCH (LSA OR LSB), if included. 12 4.4 TORQUE SATED VALVES. 12 4.5 TORQUE SWITCH CALIBRATION 12 4.6 To Set Open Torque Switch (TSO) 13 4.7 Torque Switch Rotation Limit 13 5.1 Calibration 14 5.2 Quarter-Turn Model P, Q, R & M 15 Section 6: Futronic II 83957 6.1 Calibration 16 Section 7: M2CP Wiring Diagram Symbols 18	1.2 DON'T	1
1.5 Pressure Relief	1.3 Lubrication1	1
1.6Short Term Storage21.7Long Term Storage (Stored more than one year from shipment)3Section 2:M2CP Electrical Hook-Up42.1Electrical Hook-Up4Section 3:Assembly To Valves53.1Threaded Valve Stem53.2Quarter Turn Valve7Section 4:Limit Switch Setting Instructions94.1TO SET OPEN LIMIT SWITCH (LSO)94.2SET (LSC) CLOSE LIMIT SWITCH (LSO)94.3TO SET INTERMEDIATE SWITCH (LSA OR LSB), if included.124.4TORQUE SEATED VALVES124.5TORQUE SWITCH CALIBRATION124.6To Set Open Torque Switch (TSO)134.7Torque Switch Rotation Limit13Section 5:Multi-turn Actuators145.1Calibration145.2Quarter-Turn Model P, Q, R & M15Section 6:Futronic II 83957166.1Calibration16Section 7:M2CP Wiring Diagram Symbols18	1.4 Maintenance	2
1.7 Long Term Storage (Stored more than one year from shipment) 3 Section 2: M2CP Electrical Hook-Up 4 2.1 Electrical Hook-Up 4 Section 3: Assembly To Valves 5 3.1 Threaded Valve Stem 5 3.2 Quarter Turn Valve 7 Section 4: Limit Switch Setting Instructions 9 4.1 TO SET OPEN LIMIT SWITCH (LSO) 9 4.2 SET (LSC) CLOSE LIMIT SWITCH 11 4.3 TO SET INTERMEDIATE SWITCH (LSA OR LSB), if included. 12 4.4 TORQUE SEATED VALVES. 12 4.5 TORQUE SWITCH CALIBRATION 12 4.6 TO Set Open Torque Switch (TSO) 13 4.7 Torque Switch Rotation Limit 13 4.6 To Set Open Torque Switch (TSO) 14 5.1 Calibration 14 5.2 Quarter-Turn Model P, Q, R & M 15 Section 6: Futronic II 83957 16 6.1 Calibration 16 Section 7: M2CP Wiring Diagram Symbols 18	1.5 Pressure Relief	2
Section 2: M2CP Electrical Hook-Up42.1 Electrical Hook-Up4Section 3: Assembly To Valves53.1 Threaded Valve Stem53.2 Quarter Turn Valve7Section 4: Limit Switch Setting Instructions94.1 TO SET OPEN LIMIT SWITCH (LSO)94.2 SET (LSC) CLOSE LIMIT SWITCH (LSO)94.3 TO SET INTERMEDIATE SWITCH (LSA OR LSB), if included124.4 TORQUE SEATED VALVES124.5 TORQUE SWITCH CALIBRATION124.6 To Set Open Torque Switch (TSO)134.7 Torque Switch Rotation Limit13Section 5: Multi-turn Actuators145.1 Calibration145.2 Quarter-Turn Model P, Q, R & M15Section 6: Futronic II 83957166.1 Calibration16Section 7: M2CP Wiring Diagram Symbols18	5	
2.1 Electrical Hook-Up 4 Section 3: Assembly To Valves 5 3.1 Threaded Valve Stem 5 3.2 Quarter Turn Valve 7 Section 4: Limit Switch Setting Instructions 9 4.1 TO SET OPEN LIMIT SWITCH (LSO) 9 4.2 SET (LSC) CLOSE LIMIT SWITCH (LSO) 9 4.3 TO SET INTERMEDIATE SWITCH (LSA OR LSB), if included. 12 4.4 TORQUE SEATED VALVES. 12 4.5 TORQUE SWITCH CALIBRATION 12 4.6 To Set Open Torque Switch (TSO) 13 4.7 Torque Switch Rotation Limit 13 Section 5: Multi-turn Actuators 14 5.1 Calibration 14 5.2 Quarter-Turn Model P, Q, R & M 15 Section 6: Futronic II 83957 16 6.1 Calibration 16 Section 7: M2CP Wiring Diagram Symbols 18	1.7 Long Term Storage (Stored more than one year from shipment)	3
Section 3: Assembly To Valves 5 3.1 Threaded Valve Stem 5 3.2 Quarter Turn Valve 7 Section 4: Limit Switch Setting Instructions 9 4.1 TO SET OPEN LIMIT SWITCH (LSO) 9 4.2 SET (LSC) CLOSE LIMIT SWITCH (LSO) 9 4.3 TO SET INTERMEDIATE SWITCH (LSA OR LSB), if included. 12 4.4 TORQUE SEATED VALVES. 12 4.5 TORQUE SWITCH CALIBRATION 12 4.6 To Set Open Torque Switch (TSO) 13 4.7 Torque Switch Rotation Limit 13 Section 5: Multi-turn Actuators 14 5.1 Calibration 14 5.2 Quarter-Turn Model P, Q, R & M 15 Section 6: Futronic II 83957 16 6.1 Calibration 16 Section 7: M2CP Wiring Diagram Symbols 18	Section 2: M2CP Electrical Hook-Up	1
3.1 Threaded Valve Stem 5 3.2 Quarter Turn Valve 7 Section 4: Limit Switch Setting Instructions 9 4.1 TO SET OPEN LIMIT SWITCH (LSO) 9 4.2 SET (LSC) CLOSE LIMIT SWITCH (LSO) 9 4.3 TO SET INTERMEDIATE SWITCH (LSA OR LSB), if included. 12 4.4 TORQUE SEATED VALVES. 12 4.5 TORQUE SWITCH CALIBRATION 12 4.6 To Set Open Torque Switch (TSO) 13 4.7 Torque Switch Rotation Limit 13 Section 5: Multi-turn Actuators 5.1 Calibration 14 5.2 Quarter-Turn Model P, Q, R & M 15 Section 6: Futronic II 83957 6.1 Calibration 16 Section 7: M2CP Wiring Diagram Symbols 18	2.1 Electrical Hook-Up	4
3.1 Threaded Valve Stem 5 3.2 Quarter Turn Valve 7 Section 4: Limit Switch Setting Instructions 9 4.1 TO SET OPEN LIMIT SWITCH (LSO) 9 4.2 SET (LSC) CLOSE LIMIT SWITCH (LSO) 9 4.3 TO SET INTERMEDIATE SWITCH (LSA OR LSB), if included. 12 4.4 TORQUE SEATED VALVES. 12 4.5 TORQUE SWITCH CALIBRATION 12 4.6 To Set Open Torque Switch (TSO) 13 4.7 Torque Switch Rotation Limit 13 Section 5: Multi-turn Actuators 5.1 Calibration 14 5.2 Quarter-Turn Model P, Q, R & M 15 Section 6: Futronic II 83957 6.1 Calibration 16 Section 7: M2CP Wiring Diagram Symbols 18	Section 3: Assembly To Valves	5
3.2 Quarter Turn Valve 7 Section 4: Limit Switch Setting Instructions 9 4.1 TO SET OPEN LIMIT SWITCH (LSO) 9 4.2 SET (LSC) CLOSE LIMIT SWITCH (LSO) 9 4.3 TO SET INTERMEDIATE SWITCH (LSO) 9 4.4 TORQUE SEATED VALVES 11 4.5 TORQUE SWITCH CALIBRATION 12 4.6 To Set Open Torque Switch (TSO) 13 4.7 Torque Switch Rotation Limit 13 Section 5: Multi-turn Actuators 14 5.1 Calibration 14 5.2 Quarter-Turn Model P, Q, R & M 15 Section 6: Futronic II 83957 16 6.1 Calibration 16 Section 7: M2CP Wiring Diagram Symbols 18		
4.1 TO SET OPEN LIMIT SWITCH (LSO)		
4.1 TO SET OPEN LIMIT SWITCH (LSO)	Section 4. Limit Switch Setting Instructions	2
4.2 SET (LSC) CLOSE LIMIT SWITCH 11 4.3 TO SET INTERMEDIATE SWITCH (LSA OR LSB), if included. 12 4.4 TORQUE SEATED VALVES. 12 4.5 TORQUE SWITCH CALIBRATION 12 4.6 To Set Open Torque Switch (TSO) 13 4.7 Torque Switch Rotation Limit 13 Section 5: Multi-turn Actuators 14 5.1 Calibration 14 5.2 Quarter-Turn Model P, Q, R & M 15 Section 6: Futronic II 83957 16 6.1 Calibration 16 Section 7: M2CP Wiring Diagram Symbols 18	.	
4.3TO SET INTERMEDIATE SWITCH (LSA OR LSB), if included.124.4TORQUE SEATED VALVES.124.5TORQUE SWITCH CALIBRATION124.6To Set Open Torque Switch (TSO)134.7Torque Switch Rotation Limit13Section 5: Multi-turn Actuators145.1Calibration5.1Calibration145.2Quarter-Turn Model P, Q, R & M15Section 6: Futronic II 839576.1Calibration16Section 7: M2CP Wiring Diagram Symbols18		
4.4 TORQUE SEATED VALVES		
4.5 TORQUE SWITCH CALIBRATION 12 4.6 To Set Open Torque Switch (TSO) 13 4.7 Torque Switch Rotation Limit 13 Section 5: Multi-turn Actuators 14 5.1 Calibration 14 5.2 Quarter-Turn Model P, Q, R & M 15 Section 6: Futronic II 83957 16 6.1 Calibration 16 Section 7: M2CP Wiring Diagram Symbols 18		
4.6To Set Open Torque Switch (TSO)134.7Torque Switch Rotation Limit13Section 5:Multi-turn Actuators145.1Calibration145.2Quarter-Turn Model P, Q, R & M15Section 6:Futronic II 83957166.1Calibration166.1Calibration16Section 7:M2CP Wiring Diagram Symbols18		
4.7 Torque Switch Rotation Limit 13 Section 5: Multi-turn Actuators 14 5.1 Calibration 14 5.2 Quarter-Turn Model P, Q, R & M 15 Section 6: Futronic II 83957 16 6.1 Calibration 16 Section 7: M2CP Wiring Diagram Symbols 18		
5.1 Calibration 14 5.2 Quarter-Turn Model P, Q, R & M 15 Section 6: Futronic II 83957 6.1 Calibration 16 Section 7: M2CP Wiring Diagram Symbols 18		
5.2 Quarter-Turn Model P, Q, R & M 15 Section 6: Futronic II 83957 16 6.1 Calibration 16 Section 7: M2CP Wiring Diagram Symbols 18	Section 5: Multi-turn Actuators14	ļ
5.2 Quarter-Turn Model P, Q, R & M 15 Section 6: Futronic II 83957 16 6.1 Calibration 16 Section 7: M2CP Wiring Diagram Symbols 18	5.1 Calibration 14	1
6.1 Calibration		
6.1 Calibration	Section 6: Futronic II 83957	6
Section 7: M2CP Wiring Diagram Symbols18		
		J
Section 8: Traublashooting 20	Section 7: M2CP Wiring Diagram Symbols18	3
	Section 8: Troubleshooting20)

Section 1: Introduction

1.1 DO

- 1. **Do follow proper storage procedures.** Improper storage will void warranty.
- 2. DANGER: Do check for proper motor rotation. If valve goes in the wrong direction when button is pushed, you have no torque or limit protection. Either incoming power or motor wiring must be reversed.
- **3. Do read and follow procedures** before attempting to energize actuator.
- 4. Do cut off electric power before opening switch compartment.
- 5. Do install pressure relief vent in highest point of gearbox.
- 6. **Do use stem covers** of sufficient length to protect valve stem.
- 7. Do clean Electrical Enclosure flange thoroughly & lightly grease before closing.
- 8. Do secure all Electrical bolts.
- 9. Do follow an annual maintenance procedure.
- **10. Do use caution** when working on, with, or around valves and actuators. You are dealing with high pressures, forces, voltages and flammable or toxic media.

1.2 DON'T

- **1. Don't Start-up** without reading this manual.
- 2. Don't stack actuators.
- 3. Don't store actuator on the ground unprotected.
- **4. Don't lift the unit** by clutch lever or handwheel.
- 5. **Don't lift a valve assembly** by electric actuator.
- **6. Don't operate electrically** without first checking for proper phase rotation, valve position, torque and limit switch adjustments.
- **7. Don't plug the motor** by starting and stopping repeatedly to move a valve that is too stiff. Check for cause.
- 8. **Don't jumper torque switches** except as recommended by Wiring Diagram or Valve Manufacturer.
- **9. Don't use oversize thermal motor overloads** to eliminate a tripping problem. Find the cause and correct.
- **10. Don't use a cheater** to try to force the handwheel. You can damage gearing and shafting. Find the cause and correct.

1.3 Lubrication

BETTIS actuators are factory filled with a high quality lubricant carefully selected to ensure actuator performance under specified operating conditions. Refer to BETTIS JOB SPEC SHEET to identify the lubricant provided. Normal operation of actuator *may not* require replacement of lubricant.

1.4 Maintenance

At least once a year a check should be made of your BETTIS actuator.

- a) Disconnect **all** electrical power to actuator.
- b) Open Electrical Enclosure. Inspect and tighten all electrical connections.
- c) Visually inspect for any electrical or mechanical damage. Replace worn or damaged components.
- d) Check lubrication consistency and level. Fill or replace if required.

1.5 Pressure Relief

During normal operation of Electric Actuator, gear temperature increase in combination with outdoor temperature variations will cause a small pressure build-up. BETTIS furnishes a Pressure Relief Vent Fitting P/N 83385. Placement on Actuator can be determined only after field location and position of valve has been determined. Select the highest 1/2 NPT vent location in the Gear Box, remove 1/2 NPT Plug and replace with P/N 83385. Possible locations of the Plugs are shown on BETTIS Outline Drawing.

1.6 Short Term Storage

1. Actuator should be stored in the recommended mounting position. The motor should be horizontal and Electrical Enclosure either horizontal or vertical.



- 2. Actuator should be stored indoors free from job site dirt, mud, moisture and temperature changes.
- 3. If indoor storage is not possible, the actuator must be stored off the ground, above possible water or snow level. Remove MCP and store with other electrical and electronic equipment in protected warehouse. If MCP is not removed, Space Heater MUST be energized to protect Electrical and Electronic Controls.

- 4. BETTIS supplies plugs in each conduit entry. Do not remove until electrical hook-up.
- 5. Cover units loosely with a plastic sheet. This serves as partial protection from rain.

1.7 Long Term Storage (Stored more than one year from shipment)

1. Store indoors or MCP must be removed and stored in protected area. Follow procedures of short term storage.

WARNING:

FAILURE TO STORE ACTUATOR PROPERLY WILL VOID WARRANTY OF ELECTRICAL & ELECTRONIC COMPONENTS

2. Don't torque seat valve, sluice gate or damper unless the valve manufacturer recommends.

Section 2: M2CP Electrical Hook-Up

Remove PWR and TBM covers to expose terminals for customer wiring. BETTIS Modular Modular Control Package (M2CP) is available configured in many combinations of electrical and electronic parts. Refer to WIRING DIAGRAM and BETTIS JOB SPEC SHEET for components provided by BETTIS. Connect control wires to TBM and Power (motor) Voltage to PWR terminals. If optional M2CP mounted circuit breaker was specified, connect power voltage leads to circuit breaker. BETTIS terminal blocks are furnished with wire binding screw connectors with rising captive plates, allowing field connection by several methods: 1) strip and connect bare wire, 2) strip and install wire ferrule, 3) strip and install crimp-on insulated or non-insulated ring tongue or similar terminal. Circuit Breaker accepts 1) bare wire strip, or 2) wire ferrule.



2.1 Electrical Hook-Up

- **1. STEP 1.** Move valve to mid-position by handwheel. This will allow sufficient time to stop actuator in case of improper hook-up or reversed incoming power voltage phases.
- **2. STEP 2.** Identify a means of removing power from actuator during check out. Be sure no erroneous remote control signal can be received causing actuator to energize.
- **3. STEP 3.** Energize Open control to check operation of contactor and pushbuttons. Open controls must move valve in Open direction. If valve Closes, actuator must be stopped and any (2) two power voltage leads reversed to correct voltage phasing.

CAUTION:

If voltage is improperly phased, Torque and Position Limit Switches are not in circuit to protect valve.

4. **STEP 4.** Seal all field conduit entries in accordance with National Electric Code.

Section 3: Assembly To Valves

3.1 Threaded Valve Stem

3.1.1 LOCKNUT LOCKPIN INSTALLATION

Figure 3



- 1) With actuator in place on valve, ensure proper flange mating and valve actuator orientation.
- 2) Use a number 30 (.1285) drill bit to drill a hole 3/4 inch deep into the Drive Sleeve assembly threads for the Locknut Lockpin (56) using groove in Stem Nut Locknut as drill guide.
- 3) Install Locknut Lockpin (56) into drilled hole to prevent Stem Nut Locknut from working loose and turning.

NOTE:

When installing, the Locknut Lockpin - it should extend 1/4 inch above the Drive Sleeve assembly to allow for future removal.

3.1.1.1 MOUNTING SCREWS

If BETTIS supplied adaption, the mounting screws are included. If the adaption to the valve was the responsibility of others, the mounting screws are not furnished by BETTIS. Screws thru adapter MUST engage a minimum of one screw diameter deep into BETTIS actuator base.

- 1) Screw Stem Nut on Stem until it enters Drive Sleeve. Line (52) Key and (54) Drive Sleeve keyway and insert (52) Key.
- 2) Turn handwheel in Open direction, pulling Stem Nut into Drive Sleeve until it bottoms out (valve will begin to open).

CAUTION:

LOCKNUT MUST BE TIGHT AGAINST STEM NUT.

3) Lower Locknut (55) over Valve Stem and screw into place firmly against top of Stem Nut. Tap Locknut ears using brass drift until tight.

3.1.2 THRUST SPOOL (Model 4000 & 5000)

- 1) Locate Thrust Mounting bolts.
- 2) Remove eight mounting bolts and separate Spool from actuator.
- 3) Position Spool over Valve Stem. Thread Spool onto Valve Stem until it meets valve plate.
- 4) Bolt and secure Spool onto valve.
- 5) Position actuator above Spool. Lower actuator onto Spool while manually rotating the unit until ears on Stem Nut and ears on main Drive Sleeve mesh.
- 6) Grease flange face before securing unit to Spool.
- 7) Re-install thrust plate mounting bolts. Tighten to proper torque.

NOTE:

Reverse procedure if Stem Nut needs to be replaced. Actuator does not need to be returned to factory for this procedure.

3.1.3 SPLINE BUSHING (QUARTER TURN)

BETTIS removable Spline Bushing allows easy adaption to valve shaft diameter and Key. Actuator may be rotated with respect to the valve shaft for unexpected or awkward field installations.

- 1) Move valve to full Open or Close.
- 2) Place Spline Bushing on valve shaft with Key and tighten set screw.
- 3) Using the handwheel on actuator, move the Gear Position Indicator Arrow (21) to full Open or Close (duplicating the position in Step 1).
- 4) Position actuator so the spline bore is correctly aligned with the Spline Bushing on stem shaft.
- 5) Move the actuator onto the shaft until the flange faces properly mate. Secure with screws thru the adapter flange into the base of the actuator.

3.2 Quarter Turn Valve

3.2.1 Stop Setting Procedure (Quarter-Turn)

Built-in mechanical stops are provided to prevent handwheel operation beyond total valve travel (90° \pm 6°). End of travel stops are independently adjusted, locked in place and sealed.

Figure 4



Loosen both Locknuts (46) and back out the two Stopbolts (86) to allow the valve to close and open fully. Ensure Electrical Travel Limit Switches have been properly adjusted (see appropriate section of this manual), proceed as follows:

- 1) Run the actuator electrically to the full Close.
- 2) Screw the Close Stopbolt (86) in until it seats, then back off 1/2 turn. Install Washer (48) and tighten Locknut (46).
- 3) Run the actuator electrically to the full Open position.
- 4) Screw the Open Stopbolt (86) in until it seats, then back off 1/2 turn. Install Washer (48) and tighten Locknut (46).



Back out two Stopbolts (1) to allow valve to close and open fully. Set Travel Limit Switches (see pg. 4).

- 1) Run actuator electrically to full Close.
- Screw Close (1) Stopbolt in until it seats, then back off 1/2 turn. Tighten
 (2) Lockscrew.
- 3) Run actuator electrically to full Open. Screw Open (1) Stopbolt in until it seats; back off 1/2 turn. Tighten Locknut.
- 4) Install (3) & (4) Seal Washer & Screw.

CAUTION

Do not set Actuator Position Limit Switches to drive into mechanical stops. Damage can occur if electric unit is allowed to repeatedly stall into end stops.

Section 4: Limit Switch Setting Instructions

BEFORE MAKING LIMIT SWITCH SETTING:

- 1. Move valve to mid-position (use handwheel).
- 2. Phase the power (motor) voltage and make sure that open contactor moves valve Open and close contactor moves valve Closed.

Improper power voltage phasing eliminates protection of both position limit switch and torque switches, risking valve damage.

4.1 TO SET OPEN LIMIT SWITCH (LSO)

Open valve during handwheel operation note rotation direction of screwdriver (fig.
 6) in LSO Adjusting Shaft. After valve is fully Open, Close it three handwheel turns to allow for coasting when motor is actuated.

2. Disengage spring loaded gear: Push Disengage Shaft in (fig. 7a) down, then rotate 90° so shaft is captured down. This will disengage limit switch gears from spring loaded drive gear.

TIP:

Many turns may be required to set limit switches; it may be convenient to use a reversible variable speed drill to rotate the adjusting shafts instead of a screw-driver.





3. Line up LSO indicator: If switch rotor arrow does not line with round holes (within ± 15°) on plate as shown in fig. 8a, rotate screwdriver in same direction noted in Step 1 until switch just rotates. If arrows line up as shown in fig. 8b, rotate screwdriver in the opposite direction until switch just rotates.

Figure 8



- 4. Re-engage the spring-loaded drive gear by rotating disengage shaft in fig. 8a. Spring loaded disengage shaft will rise.
- 5. **IMPORTANT:** to ensure limit switch gears have re-engaged properly with spring loaded drive gear, firmly "*jiggle*" (rotate) all adjusting shafts with screwdriver back and forth. Proper engagement has been made if all shafts (LSC, LSO, LSA & LSB) will not turn with screwdriver.

4.2 SET (LSC) CLOSE LIMIT SWITCH

- 1. Close valve, using handwheel. During handwheel operation note rotation direction of screwdriver in LSC adjusting shaft. After valve is fully Closed, Open it three handwheel turns to allow for coast.
- 2. Repeat steps 2 through 5 of LSO setting instructions with screwdriver in LSC cavity.

IMPORTANT:

"jiggle" adjusting shafts.

4.3 TO SET INTERMEDIATE SWITCH (LSA OR LSB), if included.

1. Open Valve to desired position, then repeat steps 2 thru 5 of LSO.

IMPORTANT: "*jiqqle*" adjusting shafts.

4.4 TORQUE SEATED VALVES

If valve is a torque seated valve, and the geared limit contacts are used for indication only, the LSC switch should be set several handwheel turns ahead of torque switch contact action. This gives proper valve position lamp indication in spite of minor position variations which might occur due to torque seating.

4.5 TORQUE SWITCH CALIBRATION

Figure 9



To set Close Torque Switch (TSC):

- a) Close valve using handwheel. Set valve to the desired torque. Observe rotating dial for number that corresponds to desired Close Torque.
- b) Insert screwdriver in TSC slot. Press down to disengage and turn arrow to setting determined in a). Release at this point and it will re-engage and remain set.
- c) Back the valve away from Close position and reseat by handwheel to verify torque trip point is at desired setting. The trip point of switch is a distinctive click as it breaks contact.

A DANGER

REVERSE POWER VOLTAGE PHAS ING REMOVES TORQUE SWITCH PROTEC-TION FROM THE REVERSING CONTACTOR COIL CIRCUITS. VALVE DAMAGE COULD OCCUR. If phasing has not been checked, do so before proceeding. Back valve away from Close position with handwheel and test torque electrically, using Close controls. Readjust as required.

4.6 To Set Open Torque Switch (TSO)

a) Follow procedure as for TSC at TSO dial.

4.7 Torque Switch Rotation Limit

Adjustment rotation may be limited, Remove dial to expose anti-rotation pins. Remove pins from position 10 and insert into the desired hole.



Section 5: Multi-turn Actuators

Multi-turn top-mounted and side-mount bevel gear actuators require use of Gear Reduction Assembly part no. 84055-0000 for Mechanical Dial Position Indication MDPI and 1-turn Pot. N-number replaces -0000 to complete part no. For 1-turn Pot only without Dial Indication part no. is 84117-0000. Refer to BETTIS JOB SPEC SHEET for MDPI furnished.

MDPI Mechanical Dial Position Indication is a gear reduction assembly to convert multi-turn valve stem nut turns to 270 degrees (.75 turn) for viewing position indication arrow thru glass window on actuator electric switch compartment cover. Point of rotation reference has been designated as N-number. N is the total number of electric actuator 12-tooth gear limit spring-load pinion rotations for full valve stroke.

Figure 11



5.1 Calibration

MDPI & POT Drive is calibrated after LSC and LSO are properly set (Pg. 9). Move valve to Close position. Manually rotate MDPI arrow to indicate Close. Calibration is now complete. Open valve to check that MDPI arrow goes to Open, indicating that N is correct for full valve travel. Potentiometer (Pot), if included, has been calibrated. Mechanical dial travel is 270°. Approximately 5% of total Pot resistance is left on each end for total valve travel.

5.2

Quarter-Turn Model P, Q, R & M

Top-mount P, Q and R and several models of M/MG's side-mount do not require MDPI gear reduction assembly for 1-turn Pot. If multi-turn Pot is required, BETTIS JOB SPEC SHEET will list 84131-0000 or the correct assembly. Spec Sheet will list,(1) Pot clutch gear, (2) Pot input gear and (3) potentiometer.



Section 6: Futronic II 83957



83957-1 (600 starts per hour maximum) or 83957-2 (100 starts per hour) module controls valve by comparing two inputs (the desired position from process controller or computer and actual valve feedback position). If the two are within BAND, valve will not move. When the setpoint moves outside the BAND, valve moves in the direction to make control signal and valve feedback position inputs balance.

6.1 Calibration

After field wiring is complete, position limit switches have been set (Pg. 9) and Pot adjustment on (Pg 15); proceed.

- 1. Voltmeter probes (+) in Red (**FB**) test point and (-) in Black (GND) test point.
- 2. Close valve: Meter should read 1 volt **DC**. If it does not adjust **ZERO**.
- 3. Open valve: Meter should read 5 volts **DC**. If it does not adjust **SPAN**.
- 4. Repeat steps 2 and 3 until no readjustment is necessary.
- 5. After a command signal has been connected, adjust **BAND** so valve moves to desired setpoint. **Delay:** 83957-1 has a six (6)* second fixed delay preventing actuator from instantaneously responding to another signal. This allows reversing contactor to respond at 600 starts per hour maximum.

NOTE:

Jumper **JP1** is factory set: See Job Spec Sheet for **JPI** position. Loss of 4-20 mA control signal will cause valve to (1) LST (last position will not move) or 2) **CL** valve will close. **JPI** jumper plug may be field changed.

TIP:

To measure **BAND**, place Voltmeter (-) Probe in **Green** (SIG) test point and (+) probe in **Red** (FB) test point. Move valve using Handwheel. Observe reading when valve repositions (**BAND** adjustment is $\pm 1\%$ to 7%.).

* 83957-2 has a thirty (30) second delay for 100 starts per hour maximum.

NOTE:

Feedback Pot may be mounted on MDPI (Multi-turn valves) or mounted on gear cover (1/4 Turn valves).

Section 7: M2CP Wiring Diagram Symbols

Refer to BETTIS JOB SPEC SHEET and BETTIS WIRING DIAGRAM for components furnished.



CONTACT N.O.



S5 X O O S6 O O X

S7 X X O

Selector Switch

N.C & N.O. Double Break

Section 8: Troubleshooting

Symptom	Probable Cause	Corrective Action
Motor will not Run	Blown Control Fuse	Check Fuse and Replace as necessary
	Open in Control Circuit	Refer to appropriate wiring diagram and check for continuity
	Insulation Resistance Breakdown in Motor	Perform Megger Test
No Power available to Actuator	Tripped Circuit Breaker	Reset Circuit Breaker
Handwheel Hard to Turn	Valve Stem improperly Lubricated	Lubricate with Grease
	Actuator Lubrication has broken down	Clean out old grease and replace with recommended lubricant
	Valve packing gland too tight	Loosen packing gland nuts as necessary
	Drive Sleeve Bearing Failure	Replace Bearing
	Jammed Valve	Refer to Valve Maintenance
Valve only opens or closes partially with motor	Torque Switch Setting too low	Check Setting and Reset if necessary
	Limit Switch Improperly Set	Check Switch Actuation and recalibrate if necessary
Torque switch is properly set, but actuator Torque's out in mid-travel, open or closed direction	Damaged or bent valve stem	Refer to Valve Maintenance
	Valve packing too tight	Refer to Valve Maintenance
	Jammed Valve (obstruction in line)	Refer to Valve Maintenance
Handwheel will not operate valve	Handwheel shaft bearing assembly malfunction	Repair or replace as necessary
	Sheared gear key or Stripped Gearing	Replace as necessary
	PS Shifter Position or Malfunction	Replace Gear(s)
	Broken Handwheel Shaft	Repair or replace as necessary
	Broken Valve Stem or Stripped Stem Nut	Repair or replace as necessary
Motor runs but will not operate the valve	Motor Bearing Assembly Malfunction	Repair or replace as necessary
	Sheared gear key (fastener pin)	Replace
	Stripped Gearing	Replace
	Broken Valve Stem or Stripped Stem Nut	Repair or replace as necessary
Moisture in Electrical Enclosure	Leakage through Conduit Entry	Install an approved Seal-off or re-route conduit to enter Enclosure from the bottom of enclosure
	Electrical Enclosure is not properly sealed	Inspect and replace O-ring if necessary
	Space Heater Inoperable	Check Circuit continuity for Heater
Gear (Oil) in Electrical Enclo- sures	Pressure Relief Fitting not installed	Install Pressure Relief Fitting
	Bad Seal on T/L or G/L Assembly	Replace Stat-O-Seals or O-Rings
		Rotate Actuator Mounting

NORTH & SOUTH AMERICA

19200 Northwest Freeway Houston, TX 77065 T +1 281 477 4100 F +1 281 477 2801

2500 Park Avenue West Mansfield, OH 44906 USA T +1 419 529 4311 F +1 419 529 3688

13840 Pike Road Missouri City, Texas 77489 USA T +1 281 499 1561 F +1 281 499 8445

Av. Hollingsworth, 325, Iporanga Sorocaba, SP 18087-105 Brazil T +55 15 3238 3788 F +55 15 3228 3300

MIDDLE EAST & AFRICA

P.O. Box 17033 Dubai United Arab Emirates T +971 4 811 8100 F +971 4 886 5465

P.O. Box 105958 Abu Dhabi United Arab Emirates T +971 2 697 2000 F +971 2 555 0364

P.O. Box 3911 Al Khobar 31952 Saudi Arabia T +966 3 814 7560 F +966 3 814 7570

P.O. Box 10305 Jubail 31961 Saudi Arabia T +966 3 340 8650 F +966 3 340 8790

P.O. Box 32281 Doha Qatar T +974 4 576777 F +974 4 315448

24 Angus Crescent Longmeadow Business Estate East P.O. Box 6908; Greenstone; 1616 Modderfontein, Extension 5 South Africa T +27 11 451 3700 F +27 11 451 3800

EUROPE

Asveldweg 11 7556 BR Hengelo (O) The Netherlands T +31 74 256 1010 F +31 74 291 0938

Siemensring 112 47877 Willich Germany T +49 2154 499 660 F +49 2154 499 6613

25, Rue de Villeneuve Silic – BP 40434 94583 Rungis France T +33 1 49 79 73 00 F +33 1 49 79 73 99

Via Montello 71/73 20038 Seregno (Milan) Italy T +39 0362 2285 207 F +39 0362 2436 55

6 Bracken Hill South West Industrial Estate Peterlee SR8 2LS United Kingdom T +44 191 518 0020 F +44 191 518 0032

2A Szturmowa Str 02-678 Warsaw Poland T +48 22 45 89 237 F +48 22 45 89 231

C/ Francisco Gervás, 1 28108 Alcobendas – Madrid Spain T +34 0913 586 000 F +34 0913 589 145

Letnikovskaya Str. 10-2 115114 Moscow Russia and FSU T +7 495 981 98 11 F +7 495 981 98 10

ASIA PACIFIC

No. 9 Gul Road #01-02 Singapore 629361 T +65 6501 4600 F +65 6268 0028

9/F Gateway Building No. 10 Ya Bao Road Chaoyang District Beijing 100020 P.R.China T +86 10 8572 6666 F +86 10 8572 6888

No.1 Lai Yuan Road Wuqing Development Area Tianjin 301700 P.R.China T +86 22 8212 3300 F +86 22 8212 3308

Lot 13112, Mukim Labu Kawasan Perindustrian Nilai 71807 Nilai, Negeri Sembilan Malaysia T +60 6 799 2323 F +60 6 799 9942

471 Mountain Highway Bayswater, Victoria 3153 Australia T +61 3 9721 0200 F +61 3 9720 0588

Delphi B Wing, 601 & 602 6th Floor, Central Avenue Powai, Mumbai – 400 076 India T +91 22 6662 0566 F +91 22 6662 0500

Please visit our website for up-to-date product data. www.Bettis.com

All Rights Reserved.

We reserve the right to modify or improve the designs or specifications of the products mentioned in this manual at any time without notice. Emerson Process Management does not assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use and maintenance of any Emerson Process Management product remains solely with the purchaser. ©2013 Emerson Electric Co.



